

ECO versa, Phuntsho Auto mobile workshop					
SI NO	Description of Item	Unit of Measure ment	Quantity	Period of Delivery (No. of Days)	Rate
1	Oil filter	No	1	30	195
2	Fuel filter	No	1	30	495
3	Brake pad	No	1	30	395
4	Brake shoe Rr.	No	1	30	395
5	Spring bush Rr.	No	1	30	95
6	Ball joint front upper	No	1	30	1.95
7	Ball joint front lower	No	1	30	2.95
8	Spring main leaf	No	1	30	1.95
9	Spring second leaf	No	1	30	2.95
10	Spring third leaf	No	1	30	1.95
11	Spring fourth leaf	No	1	30	2.95
12	Hub bearing F inner	No	1	30	1395
13	Hub bearing F outer	No	1	30	1495
14	Axle bearing	No	1	30	595
15	Check nut	No	1	30	16.95
16	Check nut washer	No	1	30	95
17	Brake shoe hold down kit	No	1	30	95
18	Head light bulb	No	1	30	195
19	Brake light bulb	No	1	30	30.95
20	Handbrake cable fr	No	1	30	595
21	Hand brake cable Rr.	No	1	30	495
22	Weather strip	No	1	30	395
23	Alternator assy	No	1	30	3995
24	Indicator bulb	No	1	30	30.95
25	Cross bearing	No	1	30	695
26	Clutch plate	No	1	30	1695
27	Release bearing	No	1	30	795
28	Pressure plate	No	1	30	1895
29	Self starter assy	No	1	30	4995
30	Self bendix pinion	No	1	30	1595
31	Self Armature	No	1	30	1795
32	Self bush	No	1	30	59.95
33	Self carbon bush	No	1	30	395

Labour charge, Phuntsho Auto mobile workshop			
SI NO	Description of Item	Unit of Measure ment	Rate
1	Oil filter changing	No	195
2	Fuel filter changing	No	295
3	Brake pad changing	No	95
4	Brake shoe Rr. changing	No	95
5	Spring bush Rr. changing	No	1.95
6	Ball joint front upper changing	No	9.95
7	Ball joint front lower changing	No	3.95
8	Spring main leaf changing	No	3.95
9	Spring second leaf changing	No	2.95
10	Spring third leaf changing	No	2.95
11	Spring fourth leaf changing	No	1.95
12	Hub bearing F inner changing	No	195
13	Hub bearing F outer changing	No	195
14	Axle bearing changing	No	495
15	Check nut changing	No	1.95
16	Check nut washer changing	No	9.95
17	Brake shoe hold down kit changing	No	95
18	Head light bulb changing	No	195
19	Brake light bulb changing	No	95
20	Handbrake cable fr changing	No	295
21	Hand brake cable Rr. changing	No	395
22	Weather strip changing	No	95
23	Alternator assy changing	No	695
24	Indicator bulb changing	No	50.95
25	Cross bearing changing	No	295
26	Clutch plate labor charge	No	595
27	Release bearing labor charge	No	295
28	Pressure plate labor charge	No	695
29	Self starter assy changing	No	695
30	Self bendix pinion changing	No	895
31	Self Armature changing	No	295
32	Self bush changing	No	695
33	Self carbon bush	No	495

34	Solenoid switch	No	1	30	1695	34	Solenoid switch changing	No	295
35	Tyre	No	1	30	3295	35	Tyre changing	No	295
36	Wc assy (Wheel cylinder)	No	1	30	695	36	Wc assy (Wheel cylinder) changing	No	195
37	TMC assy (Master cylinder)	No	1	30	3995	37	TMC assy (Master cylinder) changing	No	595
38	CMC assy (Clutch cylinder upper)	No	1	30	9.95	38	CMC assy (Clutch cylinder upper) changing	No	1.95
39	CSC assy (Clutch cylinder lower)	No	1	30	1.95	39	CSC assy (Clutch cylinder lower) changing	No	2.95
40	Fuse	No	1	30	15.95	40	Fuse changing	No	30.95
41	Link Rod	No	1	30	495	41	Link Rod changing	No	195
42	D bush	No	1	30	195	42	D bush changing	No	295
43	Shocker bush	No	1	30	95	43	Shocker bush changing	No	95
44	RTV	No	1	30	95	44	RTV changing	No	0
45	Sk oil	No	1	30	130.95	45	Sk oil changing	No	0
46	Engine oil	No	1	30	395	46	Engine oil changing	No	195
47	Gear oil	No	1	30	395	47	Gear oil changing	No	195
48	Coolant	No	1	30	395	48	Coolant labor charge	No	295
49	Distilled water	No	1	30	55.95	49	Distilled water labor charge	No	0
50	Brake oil	No	1	30	195	50	Brake oil changing	No	195
51	Power steering oil	No	1	30	9.95	51	Power steering oil changing	No	2.95
52	Cloth (Doti)	No	1	30	35.95	53	Fan belt changing	No	495
53	Fan belt	No	1	30	395	54	Desk board polish labor charge	No	0
54	Desk board polish	No	1	30	295	55	Wiper blade changing	No	50.95
55	Wiper blade	No	1	30	295	56	Spring clamp changing	No	95
56	Spring clamp	No	1	30	12.95	57	Grease 1kg changing	No	0
57	Grease 1kg	No	1	30	695	58	Water pump changing	No	695
58	Water pump	No	1	30	1995	59	Wiper motor changing	No	195
59	Wiper motor	No	1	30	1595	60	Battery changing	No	95
60	Battery	No	1	30	4995	61	Battery pole holding clamp, nut and bolt changing	No	95
61	Battery pole holding clamp, nut and bolt	No	1	30	95	62	Tyre repairing, puncture	No	295
63	Looking glass both	Set	1	30	95	63	Looking glass both changing	Set	195
64	Looking glass 1 no left/right	No	1	30	895	64	Looking glass 1 no left/right changing	No	95
65	Wiper blade	Set	1	30	595	65	Wiper blade changing	Set	50.95
66	Rear light holder with bulb (Right & left)	Set	1	30	395	66	Rear light holder with bulb (Right & left) changing	Set	195
68	Publuser nut and bolt	No	1	30	50.95	68	Publuser nut and bolt changing	No	95

70	Horn	No	1	30	795	70	Horn changing	No	495
71	Wheel bearing	No	1	30	1995	71	Wheel bearing changing	No	495
72	Clutch plate and pressure plate	Set	1	30	2995	72	Clutch plate and pressure plate changing	Set	0
73	Foot mat	No	1	30	2995	73	Foot mat changing	No	95
74	Steering wheel cover	No	1	30	495	74	Steering wheel cover changing	No	95
75	Rain guard	No	1	30	1595	75	Rain guard changing	No	195
77	Grease gum	No	1	30	1.95	77	Grease gum changing	No	0
78	Jack and lever	No	1	30	1595	78	Jack and lever changing	No	0
79	Bulb 12v	No	1	30	30.95	79	Bulb 12v changing	No	50.95
80	Nipple greasing	No	1	30	20.95	80	Nipple greasing	No	20.95
81	Number plate	No	1	30	450.95	81	Number plate changing	No	95
82	Piston set	No	1	30	1995	82	Piston set changing	No	3995
83	Piston ring	No	1	30	1695	83	Piston ring changing	No	1995
84	Head gasket	No	1	30	895	84	Head gasket changing	No	2595
85	Engine gasket	No	1	30	1295	85	Engine gasket changing	No	1995
86	Connecting bearing	No	1	30	795	86	Connecting bearing changing	No	1595
87	Main bearing	No	1	30	695	87	Main bearing changing	No	1695
88	Valve	No	1	30	395	88	Valve changing	No	195
89	Valve oil seal	No	1	30	195	89	Valve oil seal changing	No	95
90	Thermostat cap	No	1	30	3995	90	Thermostat cap changing	No	695
91	Radiator assembly	No	1	30	4995	91	Radiator assembly changing	No	595
92	Radiator hose rubber	No	1	30	495	92	Radiator hose rubber changing	No	395
93	Radiator hose set metail	No	1	30	1795	93	Radiator hose set metail changing	No	495
94	Thermostat valve	No	1	30	695	94	Thermostat valve changing	No	395
95	Steering rack	No	1	30	4695	95	Steering rack changing	No	795
96	Tierod end	No	1	30	595	96	Tierod end changing	No	195
97	Suspension arm	No	1	30	895	97	Suspension arm changing	No	395
98	heel knot	No	1	30	195	98	heel knot changing	No	95
99	Wheel bolt	No	1	30	195	99	Wheel bolt changing	No	95
100	Rear acle bearing	No	1	30	595	100	Rear acle bearing changing	No	395
101	Rear axle	No	1	30	2395	101	Rear axle changing	No	395
102	Rear axle cone	No	1	30	295	102	Rear axle cone changing	No	295
103	Rear axle oil seal	No	1	30	295	103	Rear axle oil seal changing	No	195
104	Populashaft assymby	No	1	30	1595	104	Populashaft assymby changing	No	195
105	Crown assembly	No	1	30	4995	105	Crown assembly changing	No	895
106	Door pad	No	1	30	3595	106	Door pad changing	No	695
107	Windshield glass	No	1	30	4995	107	Windshield glass changing	No	695

108	Windshield rubber	No	1	30	895		108	Windshield rubber changing	No	295
109	Door glass machine	No	1	30	895		109	Door glass machine	No	295
110	Head lamp	No	1	30	2995		110	Head lamp changing	No	195
111	Indicator lamp	No	1	30	295		111	Indicator lamp changing	No	95
112	Shocket front	No	1	30	3995		112	Shocket front changing	No	395
113	Shocket rear	No	1	30	1695		113	Shocket rear changing	No	195
114	Trailing arm	No	1	30	2595		114	Trailing arm changing	No	395
115	Door lock	No	1	30	695		115	Door lock changing	No	295
116	Dickey lock	No	1	30	495		116	Dickey lock changing	No	295
117	Tail pinion oil seal	No	1	30	395		117	Tail pinion oil seal changing	No	195
118	Gear box oil seal	No	1	30	295		118	Gear box oil seal changing	No	295
119	Fuel pump	No	1	30	1895		119	Fuel pump changing	No	695
120	Relay	No	1	30	295		120	Relay changing	No	95
121	Wire 3mm	m	1	30	95		121	Wire 3mm changing	m	95
122	Combination switch	No	1	30	1395		122	Combination switch changing	No	395
123	Brake light switch	No	1	30	195		123	Brake light switch changing	No	95
124	Backgear switch	No	1	30	295		124	Backgear switch changing	No	95
125	Crown bearing side	No	1	30	895		125	Crown bearing side changing	No	495
126	Crown tail pinion bearing front	No	1	30	795		126	Crown tail pinion bearing front changing	No	295
127	Crown tail pinion inner	No	1	30	895		127	Crown tail pinion inner changing	No	495
128	Cloth (Doti)	No	1	30	35.95		129	RTV changing	No	0
129	RTV	No	1	30	120.95		131	Wheel drum changing	No	295
130	PVC Insulation tape	No	1	30	30.95		132	Clutch cable changing	No	395
131	Wheel drum	No	1	30	1795		133	Rear wheel sylinder changing	No	195
132	Clutch cable	No	1	30	595		134	Caliper assymby changing	No	295
133	Rear wheel sylinder	No	1	30	795		135	Spare key changing	No	695
134	Caliper assymby	No	1	30	2995		136	Electrical line check up changing	No	995
135	Spare key	No	1	30	395		137	Seat cover changing	No	595
136	Electrical line check up	No	1	30	1295		138	Water servcing	No	395
137	Seat cover	No	1	30	4395		139	Audio tape (Sony) changing	No	795
138	Water servcing	No	1	30	300.95					
139	Audio tape (Sony)	No	1	30	5995					