

Water Tanker, Phuntsho automobile workshop					
SI No	Description of Item	Unit of Measurement	Quantity	Period of Delivery (No. of Days)	Rate
1	Mobil 15 W40	No	1	30	495
2	Oil filter	No	1	30	1295
3	Fuel filter	No	1	30	495
4	Gear oil	No	1	30	495
5	Brake oil	No	1	30	295
6	Hydraulic oil	No	1	30	395
7	Hydraulic oil filter	No	1	30	805
8	Power steering oil	No	1	30	295
9	Brake lining (shoe)	No	1	30	1295
10	Wheel alignment assembly	No	1	30	295
11	TMC assembly	No	1	30	4995
12	CMC assembly	No	1	30	2995
13	CSC assembly	No	1	30	2295
14	Wheel bearing outer front	No	1	30	1595
15	Wheel bearing inner rear	No	1	30	1495
16	Wheel bearing outer rear	No	1	30	1695
17	Wheel bearing inner rear	No	1	30	1395
18	Cross bearing	No	1	30	1795
19	Spring bush	No	1	30	395
20	Spring main leaf	No	1	30	2295
21	Spring second leaf	No	1	30	1895
22	Spring third leaf	No	1	30	1695
23	Spring fourth leaf	No	1	30	1295
24	Spring fifth leaf	No	1	30	1195
26	Tube	No	1	30	795
27	Coolant	No	1	30	395
29	Accelerator cable	No	1	30	595
30	Accelerator sensor	No	1	30	295
31	Steering box assembly	No	1	30	195
32	Engine mounting	No	1	30	295
33	Gear box mounting	No	1	30	1595
34	Side view mirror	No	1	30	1495
35	Wheel nut and bolt	No	1	30	295
36	Popular shaft nut and bolt	No	1	30	195
37	PTO switch	No	1	30	3995
38	Horn	No	1	30	1595
39	Bulb head lamp	No	1	30	295
40	Clutch plate	No	1	30	4995
41	Pressure plate	No	1	30	5995
42	Wiper blade	No	1	30	395

Labour Charge, Phuntsho Auto Mobileworkshop			
SI No	Description of Item	Unit of Measurement	Rate
1	Mobil 15 W40 changing	No	395
2	Oil filter changing	No	195
3	Fuel filter changing	No	295
4	Gear oil changing	No	295
5	Brake oil changing	No	295
6	Hydraulic oil changing	No	495
7	Hydraulic oil filter changing	No	295
8	Power steering oil changing	No	295
9	Brake lining (shoe) changing	No	495
10	Wheel alignment assembly changing	No	295
11	TMC assembly changing	No	795
12	CMC assembly changing	No	695
13	CSC assembly changing	No	595
14	Wheel bearing outer front changing	No	495
15	Wheel bearing inner rear changing	No	495
16	Wheel bearing outer rear changing	No	495
17	Wheel bearing inner rear changing	No	495
18	Cross bearing changing	No	695
19	Spring bush changing	No	295
20	Spring main leaf changing	No	595
21	Spring second leaf changing	No	595
22	Spring third leaf changing	No	595
23	Spring fourth leaf changing	No	595
24	Spring fifth leaf changing	No	595
25	Tyres fitting and changing	No	395
26	Tube changing	No	395
27	Coolant labor charge	No	395
28	Greaseing charge	No	20
29	Accelerator cable changing	No	295
30	Accelerator sensor changing	No	395
31	Steering box assembly changing	No	995
32	Engine mounting changing	No	395
33	Gear box mounting changing	No	295
34	Side view mirror changing	No	95
35	Wheel nut and bolt changing	No	195
36	Popular shaft nut and bolt changing	No	95
37	PTO switch changing	No	495
38	Horn changing	No	695
39	Bulb head lamp changing	No	295
40	Clutch plate labor charge	No	1995

43	Door outer handle	No	1	30	395	41	Pressure plate labor charge	No	1295
44	Hydraulic pipe	No	1	30	1895	42	Wiper blade changing	No	20.95
45	PTO pipe	No	1	30	295	43	Door outer handle changing	No	295
46	Gear line end	No	1	30	95	44	Hydraulic pipe changing	No	595
47	Tie rod end	No	1	30	895	45	PTO pipe changing	No	195
48	Back light assembly	No	1	30	1395	46	Gear line end changing	No	1.95
49	Side light assembly	No	1	30	895	47	Tie rod end changing	No	295
50	Center bolt	No	1	30	195	48	Back light assembly changing	No	195
51	Diesel pipe	No	1	30	495	49	Side light assembly changing	No	95
52	Steering cross	No	1	30	895	50	Center bolt changing	No	195
53	Crown	No	1	30	3995	51	Diesel pipe changing	No	295
54	Gear pinion 1st	No	1	30	2995	52	Steering cross changing	No	395
55	Gear pinion 2nd	No	1	30	1995	53	Crown changing	No	1295
56	Gear pinion 3rd	No	1	30	1395	54	Gear pinion 1st changing	No	1395
57	Gear pinion 4th	No	1	30	1295	55	Gear pinion 2nd changing	No	1495
58	Gear pinion 5th	No	1	30	1195	56	Gear pinion 3rd changing	No	1395
59	Gear hub 1st speed	No	1	30	995	57	Gear pinion 4th changing	No	1495
60	Gear hub 4th speed	No	1	30	895	58	Gear pinion 5th changing	No	1495
61	Drain out bolt	No	1	30	95	59	Gear hub 1st speed changing	No	1395
62	U bolt	No	1	30	395	60	Gear hub 4th speed changing	No	1295
63	Shackle pin	No	1	30	195	61	Drain out bolt changing	No	95
64	Shoe bush	No	1	30	295	62	U bolt changing	No	295
65	Dash board km sensor (Bolero)	No	1	30	95	63	Shackle pin changing	No	295
66	Excide battery 12v DC	No	1	30	9995	64	Shoe bush changing	No	195
67	Brake pad	No	1	30	12.95	65	Dash board km sensor (sky jacker)	No	195
68	Brake shoe Rr.	No	1	30	2695	66	Excide battery 12v DC changing	No	195
69	Spring bush Rr.	No	1	30	195	67	Brake pad changing	No	95
70	Ball joint front upper	No	1	30	95	68	Brake shoe Rr. changing	No	495
71	Ball joint front lower	No	1	30	95	69	Spring bush Rr. changing	No	295
72	Spring main leaf	No	1	30	1995	70	Ball joint front upper changing	No	95
73	Spring second leaf	No	1	30	1695	71	Ball joint front lower changing	No	95
74	Spring third leaf	No	1	30	1495	72	Spring main leaf changing	No	995
75	Spring fourth leaf	No	1	30	1295	73	Spring second leaf changing	No	795
76	Hub bearing F inner	No	1	30	1495	74	Spring third leaf changing	No	695
77	Hub bearing F outer	No	1	30	1295	75	Spring fourth leaf changing	No	795
78	Axle bearing	No	1	30	1595	76	Hub bearing F inner changing	No	495
79	Check nut	No	1	30	195	77	Hub bearing F outer changing	No	395
80	Check nut washer	No	1	30	95	78	Axle bearing changing	No	95
81	Brake shoe hold down kit	No	1	30	95	79	Check nut changing	No	95
82	Head light bulb	No	1	30	295	80	Check nut washer changing	No	195
83	Brake light bulb	No	1	30	50.95	81	Brake shoe hold down kit changing	No	95
84	Handbrake cable fr	No	1	30	595	82	Head light bulb changing	No	295
85	Hand brake cable Rr.	No	1	30	695	83	Brake light bulb changing	No	95
86	Weather strip	No	1	30	495	84	Handbrake cable fr changing	No	395

87	Alternator assy	No	1	30	8995	85	Hand brake cable Rr. changing	No	495
88	Indicator bulb	No	1	30	95	86	Weather strip changing	No	195
89	Cross bearing	No	1	30	1295	87	Alternator assy changing	No	995
90	Clutch plate	No	1	30	4995	88	Indicator bulb changing	No	50.95
91	Release bearing	No	1	30	1495	91	Release bearing changing	No	395
92	Pressure plate	No	1	30	2995	93	Self starter assy changing	No	1295
93	Self starter assy	No	1	30	7995	94	Self bendix pinion changing	No	395
94	Self bendix pinion	No	1	30	1295	95	Self Armature changing	No	695
95	Self Armature	No	1	30	1595	96	Self bush changing	No	695
96	Self bush	No	1	30	1495	97	Self carbon bush changing	No	495
97	Self carbon bush	No	1	30	895	98	Solenoid switch changing	No	595
98	Solenoid switch	No	1	30	1695	99	Tyre repairing	No	395
100	Wc assy (Wheel cylinder)	No	1	30	1395	100	Wc assy (Wheel cylinder) changing	No	395
101	TMC assy (Master cylinder)	No	1	30	1995	101	TMC assy (Master cylinder) changing	No	695
102	CMC assy (Clutch cylinder upper)	No	1	30	1595	102	CMC assy (Clutch cylinder upper) changing	No	495
103	CSC assy (Clutch cylinder lower)	No	1	30	1495	103	CSC assy (Clutch cylinder lower) changing	No	495
104	Fuse	No	1	30	20.95	104	Fuse changing	No	30.95
105	Battery	No	1	30	9995	105	Link Rod changing	No	95
106	Link Rod	No	1	30	95	106	D bush changing	No	95
107	D bush	No	1	30	95	107	Shocker bush changing	No	195
108	Shocker bush	No	1	30	95	110	Engine oil changing	No	395
109	RTV	No	1	30	95	113	Distilled water labor charge	No	50.95
110	Sk oil	No	1	30	130.95	114	Brake oil labor charge	No	295
114	Distilled water	No	1	30	50.95	115	Power steering oil labor charge	No	295
116	Power steering oil	No	1	30	295	117	Fan belt changing	No	395
117	Cloth (Doti)	No	1	30	35.95	118	Desk board polish labor charge	No	95
118	Fan belt	No	1	30	495	120	Spring clamp changing	No	195
119	Desk board polish	No	1	30	295	121	Grease 1kg changing	No	20.95
120	Wiper blade	No	1	30	195	122	Hub greasing changing	No	895
121	Spring clamp	No	1	30	95	123	Nipple greasing	No	20.95
122	Grease 1kg	No	1	30	695	124	Vacuum set (air brake) changing	No	595
123	Hub greasing	No	1	30	895	125	Popular shaft changing	No	395
124	Nipple greasing	No	1	30	20.95	126	Water pump changing	No	1695
125	Vacuum set (air brake)	No	1	30	795	127	Wiper motor changing	No	395
126	Popular shaft	No	1	30	595	128	Vacuum compressor (Head block and packing) changing	No	2995
127	Water pump	No	1	30	1895	129	Excide battery 12v DC changing	No	195
128	Wiper motor	No	1	30	1895	130	Battery pole holding clamp, nut and bolt changing	No	95
129	Vacuum compressor (Head block and packing)	No	1	30	5995	132	Looking glass both changing	Set	95
130	Excide battery 12v DC	No	1	30	9995	133	Looking glass 1 no left/right changing	No	95
131	Battery pole holding clamp, nut and bolt	No	1	30	95	135	Rear light holder with bulb (Right & left) changing	Set	395

133	Looking glass both	Set	1	30	595	137	Publuser nut and bolt changing	No	195
134	Looking glass 1 no left/right	No	1	30	1295	142	Foot mat changing	No	95
135	Wiper blade	Set	1	30	295	143	Steering wheel cover changing	No	95
136	Rear light holder with bulb (Right & left)	Set	1	30	595	144	Rain guard changing	No	195
137	Wiper motor	No	1	30	995	145	Coolant	No	395
138	Publuser nut and bolt	No	1	30	95	146	Grease gum changing	No	95
140	Horn	No	1	30	895	147	Jack and lever changing	No	95
141	Wheel bearing	No	1	30	1495	148	Bulb 12v changing	No	95
142	Clutch plate and pressure plate	No	1	30	7995	150	Number plate changing	No	95
143	Foot mat	No	1	30	1995	151	Piston set changing	No	95
144	Steering wheel cover	No	1	30	495	152	Piston ring changing	No	2995
145	Rain guard	No	1	30	1495	153	Head gasket changing	No	3995
146	Coolant	No	1	30	395	154	Engine gasket changing	No	2995
147	Motor oil for suction motor	No	1	30	495	155	Connecting bearing changing	No	2995
148	Grease gum	No	1	30	95	156	Main bearing changing	No	1785
149	Jack and lever	No	1	30	1895	157	Valve changing	No	895
150	Bulb 12v	No	1	30	35.95	158	Valve oil seal changing	No	695
152	Number plate	No	1	30	395	159	Thermostat cap changing	No	795
153	Piston set	No	1	30	3995	160	Radiator assembly changing	No	795
154	Piston ring	No	1	30	2995	161	Radiator hose rubber	No	195
155	Head gasket	No	1	30	2995	162	Radiator hose set metail changing	No	595
156	Engine gasket	No	1	30	1995	163	Thermostat valve changing	No	395
157	Connecting bearing	No	1	30	1495	164	Steering rack changing	No	95
158	Main bearing	No	1	30	1595	165	Tierod end changing	No	395
159	Valve	No	1	30	395	166	Suspension arm changing	No	95
160	Valve oil seal	No	1	30	195	167	heel knot changing	No	95
161	Thermostat cap	No	1	30	395	168	Wheel bolt changing	No	95
162	Radiator assembly	No	1	30	7995	169	Rear acle bearing changing	No	95
163	Radiator hose rubber	No	1	30	495	170	Rear axle changing	No	95
164	Radiator hose set metail	No	1	30	395	171	Rear axle cone changing	No	95
165	Thermostat valve	No	1	30	895	172	Rear axle oil seal changing	No	195
166	Steering rack	No	1	30	95	173	Populashaft assymbly changing	No	395
167	Tierod end	No	1	30	695	174	Crown assembly changing	No	2495
168	Suspension arm	No	1	30	95	175	Door pad changing	No	195
169	heel knot	No	1	30	195	176	Windshield glass changing	No	1295
170	Wheel bolt	No	1	30	295	177	Windshield rubber changing	No	495
171	Rear acle bearing	No	1	30	395	178	Door glass machine changing	No	395
172	Rear axle	No	1	30	95	179	Head lamp changing	No	194
173	Rear axle cone	No	1	30	95	180	Indicator lamp changing	No	95
174	Rear axle oil seal	No	1	30	395	181	Shocket front changing	No	395
175	Populashaft assymbly	No	1	30	2195	182	Shocket rear changing	No	495
176	Crown assembly	No	1	30	1995	183	Trailing arm changing	No	30.95
177	Door pad	No	1	30	195	184	Door lock changing	No	195

178	Windshield glass	No	1	30	6995		185	Dickey lock changing	No	95
179	Windshield rubber	No	1	30	595		186	Tail pinion oil seal changing	No	595
180	Door glass machine	No	1	30	495		187	Gear box oil seal changing	No	395
181	Head lamp	No	1	30	2995		188	Fuel pump changing	No	195
182	Indicator lamp	No	1	30	195		189	Relay changing	No	95
183	Shocket front	No	1	30	1895		190	Wire 3mm changing	m	95
184	Shocket rear	No	1	30	1395		191	Combination switch changing	No	295
185	Trailing arm	No	1	30	95		192	Brake light switch changing	No	195
186	Door lock	No	1	30	95		193	Backgear switch changing	No	295
187	Dickey lock	No	1	30	195		194	Crown bearing side changing	No	1495
188	Tail pinion oil seal	No	1	30	795		195	Crown tail pinion bearing front changing	No	1295
189	Gear box oil seal	No	1	30	495		196	Crown tail pinion inner changing	No	1195
190	Fuel pump	No	1	30	595		200	Wheel drum changing	No	395
191	Relay	No	1	30	95		201	Clutch cable changing	No	95
192	Wire 3mm	m	1	30	95		202	Rear wheel sylinder changing	No	595
193	Combination switch	No	1	30	295		203	Caliper assymby changing	No	95
194	Brake light switch	No	1	30	95		204	Spare key changing	No	95
195	Backgear switch	No	1	30	195		205	Electrical line check up changing	No	795
196	Crown bearing side	No	1	30	1295		206	Seat cover changing	No	395
197	Crown tail pinion bearing front	No	1	30	1195		207	Water servcing	No	395
198	Crown tail pinion inner	No	1	30	895		208	Audio tape (Sony) changing	No	695
199	Cloth (Doti)	No	1	30	35.95					98842.6
200	RTV	No	1	30	150.95					
201	PVC Insulation tape	No	1	30	30.95					
202	Wheel drum	No	1	30	1295					
203	Clutch cable	No	1	30	195					
204	Rear wheel sylinder	No	1	30	1795					
205	Caliper assymby	No	1	30	95					
206	Spare key	No	1	30	195					
207	Electrical line check up	No	1	30	1595					
208	Seat cover	No	1	30	3995					
209	Water servcing	No	1	30	395					
210	Audio tape (Sony)	No	1	30	6995					