

DCM, Phuntsho Automobile Workshop					
SI no	Description of Item	Unit of Measurement	Quantity	Period of Delivery (No. of Days)	Rate
1	Eicher DCM Spare parts, Air Filter	No	1	30	1295
2	Eicher DCM Spare parts, Brake Shoe	Set	1	30	3995
3	Eicher DCM Spare parts, Brake Pad	Set	1	30	95
4	Eicher DCM Spare parts, Hub Bearing F Inner	No	1	30	1795
5	Eicher DCM Spare parts, Hub Bearing F Outer	No	1	30	1495
6	Eicher DCM Spare parts, Hub Oil Seal	No	1	30	395
7	Eicher DCM Spare parts, Tube Oil Seal	No	1	30	95
8	Eicher DCM Spare parts, Brake Disc	No	1	30	95
9	Eicher DCM Spare parts, Hub Check Nut	No	1	30	295
10	Eicher DCM Spare parts, Check Nut Lock	No	1	30	95
11	Eicher DCM Spare parts, Hub Splender	No	1	30	295
12	Eicher DCM Spare parts, Shock Absorber Front	No	1	30	1695
13	Eicher DCM Spare parts, Shock Absorber Rear	No	1	30	1795
14	Eicher DCM Spare parts, Shock Absorber Bush	No	1	30	95
15	Eicher DCM Spare parts, Stablizer Bar Bush Front	No	1	30	95
16	Eicher DCM Spare parts, Stablizer Bar Bush Rear	No	1	30	95
17	Eicher DCM Spare parts, Link Bush Front	No	1	30	95
18	Eicher DCM Spare parts, Link Bush Rear	No	1	30	95
19	Eicher DCM Spare parts, Spring Main Rear	No	1	30	1995
20	Eicher DCM Spare parts, Spring Main Front	No	1	30	1895
21	Eicher DCM Spare parts, Spring Bush Small	No	1	30	395
22	Eicher DCM Spare parts, Spring Bush Big	No	1	30	395
23	Eicher DCM Spare parts, Spring Clamp	No	1	30	295
24	Eicher DCM Spare parts, Spring Bush Metal	No	1	30	395

Labour Charge, Phuntsho Automobile workshop			
SI No	Description of Item	Unit of Measurement	Rate
1	Eicher DCM Spare parts, Air Filter changing	No	195
2	Eicher DCM Spare parts, Brake Shoe changing	Set	2595
3	Eicher DCM Spare parts, Brake Pad changing	Set	95
4	Eicher DCM Spare parts, Hub Bearing F Inner changing	No	895
5	Eicher DCM Spare parts, Hub Bearing F Outer changing	No	795
6	Eicher DCM Spare parts, Hub Oil Seal changing	No	395
7	Eicher DCM Spare parts, Tube Oil Seal changing	No	195
8	Eicher DCM Spare parts, Brake Discchanging	No	95
9	Eicher DCM Spare parts, Hub Check Nut changing	No	95
10	Eicher DCM Spare parts, Check Nut Lock changing	No	195
11	Eicher DCM Spare parts, Hub Splender changing	No	95
12	Eicher DCM Spare parts, Shock Absorber Front changing	No	495
13	Eicher DCM Spare parts, Shock Absorber Rear changing	No	395
14	Eicher DCM Spare parts, Shock Absorber Bush changing	No	195
15	Eicher DCM Spare parts, Stablizer Bar Bush Front changing	No	95
16	Eicher DCM Spare parts, Stablizer Bar Bush Rear changing	No	22.95
17	Eicher DCM Spare parts, Link Bush Front changing	No	19.95
18	Eicher DCM Spare parts, Link Bush Rear changing	No	3.95
19	Eicher DCM Spare parts, Spring Main Rear changing	No	1295
20	Eicher DCM Spare parts, Spring Main Front changing	No	1195
21	Eicher DCM Spare parts, Spring Bush Small changing	No	295
22	Eicher DCM Spare parts, Spring Bush Big changing	No	395
23	Eicher DCM Spare parts, Spring Clamp changing	No	95
24	Eicher DCM Spare parts, Spring Bush Metal changing	No	495

25	Eicher DCM Spare parts, Center Bolt	No	1	30	295		25	Eicher DCM Spare parts, Center Bolt changing	No	295
26	Eicher DCM Spare parts, Fuel Filter	No	1	30	795		26	Eicher DCM Spare parts, Fuel Filter changing	No	295
27	Eicher DCM Spare parts, Oil Filter	No	1	30	995		27	Eicher DCM Spare parts, Oil Filter changing	No	195
28	Eicher DCM Spare parts, Oil (Castrol)	Ltr	1	30	395		28	Eicher DCM Spare parts, Oil (Castrol) changing	Ltr	395
29	Eicher DCM Spare parts, Oil Mak	Ltr	1	30	395		29	Eicher DCM Spare parts, Oil Mak changing	Ltr	395
30	Eicher DCM Spare parts, Oil Rimula	Ltr	1	30	495		30	Eicher DCM Spare parts, Oil Rimula changing	Ltr	395
31	Eicher DCM Spare parts, Gear Oil Castrol	Ltr	1	30	395		31	Eicher DCM Spare parts, Gear Oil Castrol changing	Ltr	395
32	Eicher DCM Spare parts, Gear Oil Mak	Ltr	1	30	395		32	Eicher DCM Spare parts, Gear Oil Mak changing	Ltr	395
33	Eicher DCM Spare parts, Trasmission Oil	Ltr	1	30	395		33	Eicher DCM Spare parts, Trasmission Oil changing	Ltr	395
34	Eicher DCM Spare parts, Hyudraulic Oil	Ltr	1	30	395		34	Eicher DCM Spare parts, Hyudraulic Oil changing	Ltr	1.95
35	Eicher DCM Spare parts, Axle Bearing	No	1	30	195		35	Eicher DCM Spare parts, Axle Bearing changing	No	995
36	Eicher DCM Spare parts, Axle Oil Seal Inner	No	1	30	195		36	Eicher DCM Spare parts, Axle Oil Seal Inner changing	No	595
37	Eicher DCM Spare parts, Axle Oil Seal Outer	No	1	30	295		37	Eicher DCM Spare parts, Axle Oil Seal Outer changing	No	305
38	Eicher DCM Spare parts, Axle Tube Oil Seal	No	1	30	395		38	Eicher DCM Spare parts, Axle Tube Oil Seal changing	No	195
39	Eicher DCM Spare parts,Rear Differential Assy	No	1	30	7995		39	Eicher DCM Spare parts,Rear Differential Assy changing	No	1995
40	Eicher DCM Spare parts, Differential Side Bearing	No	1	30	1695		40	Eicher DCM Spare parts, Differential Side Bearing changing	No	1895
41	Eicher DCM Spare parts, Tail Inner Bearing	No	1	30	1495		41	Eicher DCM Spare parts, Tail Inner Bearing changing	No	1695
42	Eicher DCM Spare parts, Tail Outer Bearing	No	1	30	1295		42	Eicher DCM Spare parts, Tail Outer Bearing changing	No	1595
43	Eicher DCM Spare parts, Tail Oil Seal	No	1	30	995		43	Eicher DCM Spare parts, Tail Oil Seal changing	No	895
44	Eicher DCM Spare parts, Crown & Tail Assy	Set	1	30	2995		44	Eicher DCM Spare parts, Crown & Tail Assy changing	Set	1895
45	Eicher DCM Spare parts,Ball Joint Upper	No	1	30	95		45	Eicher DCM Spare parts,Ball Joint Upper changing	No	2.95
46	Eicher DCM Spare parts, Ball Joint Lower	No	1	30	95		46	Eicher DCM Spare parts, Ball Joint Lower changing	No	3.95
47	Eicher DCM Spare parts, Arm Lower	No	1	30	1.95		47	Eicher DCM Spare parts, Arm Lower changing	No	4.95
48	Eicher DCM Spare parts, Arm Upper	No	1	30	95		48	Eicher DCM Spare parts, Arm Upper changing	No	11.95
49	Eicher DCM Spare parts, Arm Bush Lower	No	1	30	95		49	Eicher DCM Spare parts, Arm Bush Lower changing	No	12.95

50	Eicher DCM Spare parts, Arm Bush Upper	No	1	30	95		50	Eicher DCM Spare parts, Arm Bush Upper changing	No	15.95
51	Eicher DCM Spare parts, Brake Hose Front	No	1	30	95		51	Eicher DCM Spare parts, Brake Hose Front changing	No	295
52	Eicher DCM Spare parts, Brake Hose Rear	No	1	30	95		52	Eicher DCM Spare parts, Brake Hose Rear changing	No	395
53	Eicher DCM Spare parts, Back Light	No	1	30	1295		53	Eicher DCM Spare parts, Back Light changing	No	195
54	Eicher DCM Spare parts, Back Light Bulb	No	1	30	50.95		54	Eicher DCM Spare parts, Back Light Bulb changing	No	95
55	Eicher DCM Spare parts, Side Light	No	1	30	395		55	Eicher DCM Spare parts, Side Light changing	No	95
56	Eicher DCM Spare parts, Side Light Bulb	No	1	30	50.95		56	Eicher DCM Spare parts, Side Light Bulb changing	No	95
57	Eicher DCM Spare parts, Head Light	No	1	30	4995		57	Eicher DCM Spare parts, Head Light changing	No	195
58	Eicher DCM Spare parts, Head Light Bulb	No	1	30	495		58	Eicher DCM Spare parts, Head Light Bulb changing	No	195
59	Eicher DCM Spare parts, Head Gasket	No	1	30	2995		59	Eicher DCM Spare parts, Head Gasket changing	No	3995
60	Eicher DCM Spare parts, Head Gasket Set	Set	1	30	1995		60	Eicher DCM Spare parts, Head Gasket Set changing	Set	3995
61	Eicher DCM Spare parts, Water Pump	No	1	30	3995		61	Eicher DCM Spare parts, Water Pump changing	No	1995
62	Eicher DCM Spare parts, Fan Belt	No	1	30	795		62	Eicher DCM Spare parts, Fan Belt changing	No	695
63	Eicher DCM Spare parts, Power Steering Belt	No	1	30	695		63	Eicher DCM Spare parts, Power Steering Belt changing	No	395
64	Eicher DCM Spare parts, Acc Belt	No	1	30	95		64	Eicher DCM Spare parts, Acc Belt changing	No	1.95
65	Eicher DCM Spare parts, Steering Damper	No	1	30	195		65	Eicher DCM Spare parts, Steering Damper changing	No	1.95
66	Eicher DCM Spare parts, Steering Relay	No	1	30	295		66	Eicher DCM Spare parts, Steering Relay changing	No	95
67	Eicher DCM Spare parts, Steering Drop Arm	No	1	30	495		67	Eicher DCM Spare parts, Steering Drop Arm changing	No	12.95
68	Eicher DCM Spare parts, Steering Relay Kit	No	1	30	895		68	Eicher DCM Spare parts, Steering Relay Kit changing	No	95
69	Eicher DCM Spare parts, Brake Buckket Kit	No	1	30	95		69	Eicher DCM Spare parts, Brake Buckket Kit changing	No	16.95
70	Eicher DCM Spare parts, Wheel Cylinder Assy	No	1	30	595		70	Eicher DCM Spare parts, Wheel Cylinder Assy changing	No	95
71	Eicher DCM Spare parts, Feed Pump	No	1	30	395		71	Eicher DCM Spare parts, Feed Pump changing	No	395
72	Eicher DCM Spare parts, Fuel Supply Pump	No	1	30	295		72	Eicher DCM Spare parts, Fuel Supply Pump changing	No	195
73	Eicher DCM Spare parts, Fuel Totter & Head	Set	1	30	95		73	Eicher DCM Spare parts, Fuel Totter & Head changing	Set	9.95
74	Eicher DCM Spare parts, Delivery Valve	Set	1	30	395		74	Eicher DCM Spare parts, Delivery Valve changing	Set	595

75	Eicher DCM Spare parts, Oil Supply Pump	Set	1	30	395	75	Eicher DCM Spare parts, Oil Supply Pump changing	Set	395
76	Eicher DCM Spare parts, Valve Oil Seal	Set	1	30	495	76	Eicher DCM Spare parts, Valve Oil Seal changing	Set	1995
77	Eicher DCM Spare parts, Clutch Plate	Set	1	30	4995	77	Eicher DCM Spare parts, Clutch Plate changing	Set	1995
78	Eicher DCM Spare parts, Pressure Plate	No	1	30	6995	78	Eicher DCM Spare parts, Pressure Plate changing	No	2595
79	Eicher DCM Spare parts, Release Bearing	No	1	30	1895	79	Eicher DCM Spare parts, Release Bearing changing	No	695
80	Eicher DCM Spare parts, Master Cylinder Kit	No	1	30	95	80	Eicher DCM Spare parts, Master Cylinder Kit changing	No	95
81	Eicher DCM Spare parts, Master Cylinder	No	1	30	295	81	Eicher DCM Spare parts, Master Cylinder changing	No	985
82	Eicher DCM Spare parts, Clutch Cylinder Upper	No	1	30	395	82	Eicher DCM Spare parts, Clutch Cylinder Upper changing	No	995
83	Eicher DCM Spare parts, Clutch Cylinder Lower	No	1	30	2995	83	Eicher DCM Spare parts, Clutch Cylinder Lower changing	No	595
84	Eicher DCM Spare parts, Brake Booster	No	1	30	195	84	Eicher DCM Spare parts, Brake Booster changing	No	95
85	Eicher DCM Spare parts, Cross Bearing	No	1	30	2395	85	Eicher DCM Spare parts, Cross Bearing changing	No	595
86	Eicher DCM Spare parts, Link	No	1	30	195	86	Eicher DCM Spare parts, Link changing	No	95
87	Eicher DCM Spare parts, C V Joint	No	1	30	95	87	Eicher DCM Spare parts, C V Joint changing	No	12.95
88	Eicher DCM Spare parts, Drive Shaft Assy	No	1	30	95	88	Eicher DCM Spare parts, Drive Shaft Assy changing	No	13.95
89	Eicher DCM Spare parts,Rear Spring Shackel	No	1	30	495	89	Eicher DCM Spare parts,Rear Spring Shackel changing	No	295
90	Eicher DCM Spare parts, Tie Rod End Small	No	1	30	695	90	Eicher DCM Spare parts, Tie Rod End Small changing	No	495
91	Eicher DCM Spare parts, Tie Rod End Big	No	1	30	795	91	Eicher DCM Spare parts, Tie Rod End Big changing	No	595
92	Eicher DCM Spare parts, Tie Rod End	Set	1	30	895	92	Eicher DCM Spare parts, Tie Rod End changing	Set	1295
93	Eicher DCM Spare parts, King Pin Bearing	Set	1	30	2995	93	Eicher DCM Spare parts, King Pin Bearing changing	Set	1595
94	Eicher DCM Spare parts, King Pin Kit	Set	1	30	1995	94	Eicher DCM Spare parts, King Pin Kit changing	Set	1295
95	Eicher DCM Spare parts, Radiator Cap	Set	1	30	195	95	Eicher DCM Spare parts, Radiator Cap changing	Set	95
96	Eicher DCM Spare parts, Wheel Nuts & Bolts	No	1	30	195	96	Eicher DCM Spare parts, Wheel Nuts & Bolts changing	No	295
97	Eicher DCM Spare parts, Self Armature	No	1	30	2595	97	Eicher DCM Spare parts, Self Armature changing	No	995
98	Eicher DCM Spare parts, Self Carbon	No	1	30	1295	98	Eicher DCM Spare parts, Self Carbon changing	No	695
99	Eicher DCM Spare parts, Self Carnon Rocker	No	1	30	895	99	Eicher DCM Spare parts, Self Carnon Rocker changing	No	495

100	Eicher DCM Spare parts, Self Plunger	No	1	30	695		100	Eicher DCM Spare parts, Self Plunger changing	No	595
101	Eicher DCM Spare parts, Timing Belt	No	1	30	95		101	Eicher DCM Spare parts, Timing Belt changing	No	95
102	Eicher DCM Spare parts, Glow Plug	No	1	30	795		102	Eicher DCM Spare parts, Glow Plug changing	No	395
103	Eicher DCM Spare parts, Engine Mounting	No	1	30	95		103	Eicher DCM Spare parts, Engine Mounting changing	No	95
104	Eicher DCM Spare parts, Gear Box Mounting	No	1	30	95		104	Eicher DCM Spare parts, Gear Box Mounting changing	No	195
105	Eicher DCM Spare parts, Wiper Blade	No	1	30	395		105	Eicher DCM Spare parts, Wiper Blade changing	No	50.95
106	Eicher DCM Spare parts, Battery	No	1	30	10995		106	Eicher DCM Spare parts, Battery labor charge	No	95
107	Eicher DCM Spare parts, Brake Oil	Ltr	1	30	195		107	Eicher DCM Spare parts, Brake Oil labor charge	Ltr	195
108	Eicher DCM Spare parts, Power Steering Oil	Ltr	1	30	295		108	Eicher DCM Spare parts, Power Steering Oil labor charge	Ltr	195
109	Eicher DCM Spare parts, Key Lock Set	Set	1	30	95		109	Eicher DCM Spare parts, Key Lock Set labor charge	Set	195
110	Eicher DCM Spare parts, Parking Cable Rear	No	1	30	95		110	Eicher DCM Spare parts, Parking Cable Rear labor charge	No	16.95
111	Eicher DCM Spare parts, Parking Cable Front	No	1	30	95		111	Eicher DCM Spare parts, Parking Cable Front labor charge	No	65.95
112	Eicher DCM Spare parts, Accelator Cablel	No	1	30	895		112	Eicher DCM Spare parts, Accelator Cablel labor charge	No	395
113	Eicher DCM Spare parts, Km Cable	No	1	30	95		113	Eicher DCM Spare parts, Km Cable labor charge	No	95
114	Eicher DCM Spare parts, Rear Axle Corn	No	1	30	95		114	Eicher DCM Spare parts, Rear Axle Corn labor charge	No	95
115	Eicher DCM Spare parts, Spring Pad	No	1	30	95		115	Eicher DCM Spare parts, Spring Pad changing	No	95
116	Eicher DCM Spare parts, Piston	Set	1	30	4995		116	Eicher DCM Spare parts, Piston changing	Set	2995
117	Eicher DCM Spare parts, Piston Ring	Set	1	30	3995		117	Eicher DCM Spare parts, Piston Ring changing	Set	3995
118	Eicher DCM Spare parts, Linner	Set	1	30	3995		118	Eicher DCM Spare parts, Linner changing	Set	1995
119	Eicher DCM Spare parts, Intake Valve	Set	1	30	1295		119	Eicher DCM Spare parts, Intake Valve changing	Set	1995
120	Eicher DCM Spare parts, Exhaust Valve	Set	1	30	1395		120	Eicher DCM Spare parts, Exhaust Valve changing	Set	1895
121	Eicher DCM Spare parts, Valve Guide	Set	1	30	295		121	Eicher DCM Spare parts, Valve Guide changing	Set	1495
122	Eicher DCM Spare parts, Valve Seat	Set	1	30	395		122	Eicher DCM Spare parts, Valve Seat changing	Set	1395
123	Eicher DCM Spare parts, Connecting Bearing	Set	1	30	495		123	Eicher DCM Spare parts, Connecting Bearing changing	Set	1595
124	Eicher DCM Spare parts, Main Bearing	Set	1	30	995		124	Eicher DCM Spare parts, Main Bearing changing	Set	1895

125	Eicher DCM Spare parts, Cam Shaft Bearing	Set	1	30	895	125	Eicher DCM Spare parts, Cam Shaft Bearing changing	Set	1195
126	Eicher DCM Spare parts, Thrush Washer	Set	1	30	395	126	Eicher DCM Spare parts, Thrush Washer changing	Set	295
127	Eicher DCM Spare parts, Crank Shaft	No	1	30	1295	127	Eicher DCM Spare parts, Crank Shaft changing	No	1595
128	Eicher DCM Spare parts, Connecting Rod	No	1	30	495	128	Eicher DCM Spare parts, Connecting Rod changing	No	395
129	Eicher DCM Spare parts, Valve Set	Set	1	30	995	129	Eicher DCM Spare parts, Valve Set changing	Set	795
130	Eicher DCM Spare parts, Grease	Kg	1	30	695	130	Eicher DCM Spare parts, Greaseing	Kg	20.95
131	Eicher DCM Spare parts, Dhوتي	Kg	1	30	35.95	133	Eicher DCM Spare parts, Water Paper labor charge	No	20.95
132	Eicher DCM Spare parts, Sk Oil	Ltr	1	30	130.95	134	Eicher DCM Spare parts, 4W Yok And Teeth changing	Set	95
133	Eicher DCM Spare parts, Water Paper	No	1	30	50.95	135	Eicher DCM Spare parts, 2W Yok And Teeth changing	Set	895
134	Eicher DCM Spare parts, 4W Yok And Teeth	Set	1	30	195	136	Eicher DCM Spare parts, Main Bearing Oil Seal changing	No	595
135	Eicher DCM Spare parts, 2W Yok And Teeth	Set	1	30	295	137	Eicher DCM Spare parts, U-Bolt changing	No	95
136	Eicher DCM Spare parts, Main Bearing Oil Seal	No	1	30	395	138	Eicher DCM Spare parts, Mobil Filter changing	No	395
137	Eicher DCM Spare parts, U-Bolt	No	1	30	295	139	Eicher DCM Spare parts, Diesel Filter changing	No	195
138	Eicher DCM Spare parts, Mobil Filter	No	1	30	1295	140	Eicher DCM Spare parts, CV Joint Assembly changing	No	295
139	Eicher DCM Spare parts, Diesel Filter	No	1	30	1495	141	Eicher DCM Spare parts, Dust Guard back and front changing	Set	495
140	Eicher DCM Spare parts, CV Joint Assembly	No	1	30	95	142	Eicher DCM Spare parts, Engine Oil labor charge	Ltr	395
141	Eicher DCM Spare parts, Dust Guard back and front	Set	1	30	195	143	Eicher DCM Spare parts, Coolant labor charge	Ltr	295
142	Eicher DCM Spare parts, Engine Oil	Ltr	1	30	395	144	Eicher DCM Spare parts, Distilled Water labor charge	Ltr	50.95
143	Eicher DCM Spare parts, Coolant	Ltr	1	30	395	145	Eicher DCM Spare parts, Bonnet Cable labor charge	Set	95
144	Eicher DCM Spare parts, Distilled Water	Ltr	1	30	50.95	146	Eicher DCM Spare parts, Hand Brake Cable changing	Set	595
145	Eicher DCM Spare parts, Bonnet Cable	Set	1	30	95	147	Eicher DCM Spare parts, Door Rubber changing	Set	295
146	Eicher DCM Spare parts, Hand Brake Cable	Set	1	30	95	148	Eicher DCM Spare parts, Safe Guard changing	Set	95
147	Eicher DCM Spare parts, Door Rubber	Set	1	30	495	149	Eicher DCM Spare parts, Fog Light changing	Set	895
148	Eicher DCM Spare parts, Safe Guard	Set	1	30	95	150	Eicher DCM Spare parts, Horn changing	No	695
149	Eicher DCM Spare parts, Fog Light	Set	1	30	1795	151	Eicher DCM Spare parts, Pop. Shaft-Yoke & Teeth changing	No	795
150	Eicher DCM Spare parts, Horn	No	1	30	1295	152	Eicher DCM Spare parts, Fuse labor charge	No	30.95

151	Eicher DCM Spare parts, Pop.Shaft-Yoke & Teeth	No	1	30	1295	153	Eicher DCM Spare parts, Wheel Bearing changing	No	995
152	Eicher DCM Spare parts, Fuse	No	1	30	20.95	154	Eicher DCM spare parts, Silecer pipe changing	No	15.95
153	Eicher DCM Spare parts, Wheel Bearing	No	1	30	1995	155	Eicher DCM spare parts A/C filter changing	No	12.95
154	Eicher DCM spare parts, Silecer pipe	No	1	30	95	156	Eicher DCM spare parts Alternator Assy changing	each	1495
155	Eicher DCM spare parts A/C filter	No	1	30	95	157	Eicher DCM spare parts Alternator carbon bush changing	each	95
156	Eicher DCM spare parts Alternator Assy	each	1	30	8995	158	Eicher DCM spare parts Alternator cut out changing	each	795
157	Eicher DCM spare parts Alternator carbon bush	each	1	30	595	161	Eicher DCM spare parts Back bumper changing	each	95
158	Eicher DCM spare parts Alternator cut out	each	1	30	395	162	Eicher DCM spare parts Battery cable +ive labor charge	Each	95
159	Eicher DCM Spare parts Anabond paste (Big)	Each	1	30	150.95	163	Eicher DCM spare parts Battery cable -ive labor charge	Each	95
160	Eicher DCM spare parts Anabond paste (Small)	Each	1	30	95	164	Eicher DCM spare parts Bendix pinion labor charge	each	1295
161	Eicher DCM spare parts Back bumper	each	1	30	95	166	Eicher DCM spare parts Bulb 1141 changing	each	95
162	Eicher DCM spare parts Battery cable +ive	Each	1	30	95	167	Mahindra Bolero Spare parts Bulb 67 changing	each	95
163	Eicher DCM spare parts Battery cable -ive	Each	1	30	95	168	Eicher DCM spare parts bush stabilzer changing	per piece	1.95
164	Eicher DCM spare parts Bendix pinion	each	1	30	1395	169	Eicher DCM spare parts Carbon bush 12 v changing	each	95
165	Black tape	each	1	30	30.95	170	Eicher DCM spare partsCarbon holder changing	each	895
166	Eicher DCM spare parts Bulb 1141	each	1	30	45.95	171	Eicher DCM spare parts Carbon rocker 12v changing	each	95
167	Mahindra Bolero Spare parts Bulb 67	each	1	30	35.95	172	Eicher DCM spare parts Dynamo bearing changing	each	495
168	Eicher DCM spare parts bush stabilzer	per piece	1	30	95	173	Eicher DCM spare parts , Spiadle bush changing	no	395
169	Eicher DCM spare parts Carbon bush 12 v	each	1	30	295	174	Eicher DCM spare parts , Spiadle assy changing	no	395
170	Eicher DCM spare partsCarbon holder	each	1	30	395	175	Eicher DCM spare parts , Axle cross changing	no	195
171	Eicher DCM spare parts Carbon rocker 12v	each	1	30	595	176	Eicher DCM spare parts , foot mat changing	set	1995
172	Eicher DCM spare parts Dynamo bearing	each	1	30	195	177	Eicher DCM spare parts , Front bumper changing	each	895
173	Eicher DCM spare parts , Spiadle bush	no	1	30	395	178	Eicher DCM spare parts , fuel pipe changing	per piece	195
174	Eicher DCM spare parts , Spiadle assy	no	1	30	295	179	Eicher DCM spare parts , grease gun labor charge	each	95
175	Eicher DCM spare parts , Axle cross	no	1	30	95	180	Eicher DCM spare parts , Horn high labor charge	each	695

176	Eicher DCM spare parts , foot mat	set	1	30	1995	181	Eicher DCM spare parts , Horn low labor charge	each	495
177	Eicher DCM spare parts , Front bumper	each	1	30	995	182	Eicher DCM spare parts , Horn relay labor charge	each	295
178	Eicher DCM spare parts , fuel pipe	per piece	1	30	95	183	Eicher DCM spare parts , horn switch labor charge	each	195
179	Eicher DCM spare parts , grease gun	each	1	30	95	184	Eicher DCM spare parts , hour metre labor charge	each	195
180	Eicher DCM spare parts , Horn high	each	1	30	1495	185	Eicher DCM spare parts , ignition switch changing	each	95
181	Eicher DCM spare parts , Horn low	each	1	30	1295	186	Eicher DCM spare parts , LT wire 5mm labor charge	each	95
182	Eicher DCM spare parts , Horn relay	each	1	30	295	187	Eicher DCM spare parts , LT wire 6mm labor charge	each	95
183	Eicher DCM spare parts , horn switch	each	1	30	195	188	Eicher DCM spare parts , LT wire 8mm labor charge	each	95
184	Eicher DCM spare parts , hour metre	each	1	30	95	189	Eicher DCM spare parts nozzle pipe changing	per piece	395
185	Eicher DCM spare parts , ignition switch	each	1	30	95	190	Eicher DCM spare parts ,rain guard changing	each	195
186	Eicher DCM spare parts , LT wire 5mm	each	1	30	95	191	Eicher DCM spare parts , seat cover changing	set	595
187	Eicher DCM spare parts , LT wire 6mm	each	1	30	95	192	Eicher DCM spare parts ,vacuum nozzle pipe changing	each	395
188	Eicher DCM spare parts , LT wire 8mm	each	1	30	95	193	Eicher DCM spare parts ,vehicle no. plate changing	per piece	95
189	Eicher DCM spare parts nozzle pipe	per piece	1	30	195	194	Eicher DCM spare parts ,wheel Drum changing	per piece	395
190	Eicher DCM spare parts ,rain guard	each	1	30	1495	195	Eicher DCM spare parts ,Wiper blade Assy changing	each	20.95
191	Eicher DCM spare parts , seat cover	set	1	30	3695	196	Eicher DCM spare parts ,steering cover changing	each	95
192	Eicher DCM spare parts ,vacuum nozzle pipe	each	1	30	95	197	Eicher DCM spare parts , Wiper motor changing	each	295
193	Eicher DCM spare parts ,vehicle no. plate	per piece	1	30	495	198	Eicher DCM spare parts , Bearing 6202 changing	each	195
194	Eicher DCM spare parts ,wheel Drum	per piece	1	30	1595	199	Eicher DCM spare parts ,Bearing 6302 changing	each	295
195	Eicher DCM spare parts ,Wiper blade Assy	each	1	30	295	200	Eicher DCM spare parts ,Crank shaft oil seal changing	each	795
196	Eicher DCM spare parts ,steering cover	each	1	30	895	201	Eicher DCM spare parts ,Drain plug changing	each	95
197	Eicher DCM spare parts , Wiper motor	each	1	30	895	202	Eicher DCM spare parts ,Element Assy, Fuel changing	each	195
198	Eicher DCM spare parts , Bearing 6202	each	1	30	395	203	Eicher DCM spare parts , Element sub assy, Air changing	each	295
199	Eicher DCM spare parts ,Bearing 6302	each	1	30	495	204	Eicher DCM spare parts ,Engine head gasket changing	each	1995
200	Eicher DCM spare parts ,Crank shaft oil seal	each	1	30	695	205	Eicher DCM spare parts , Engine mounting changing	each	95

201	Eicher DCM spare parts ,Drain plug	each	1	30	95	206	Eicher DCM spare parts , Engine pacing changing	each	2395
202	Eicher DCM spare parts ,Element Assy, Fuel	each	1	30	795	207	Eicher DCM spare parts , Engine ring changing	each	3995
203	Eicher DCM spare parts , Element sub assy, Air	each	1	30	395	208	Eicher DCM spare parts , Fuel injection overflow pipe changing	each	195
204	Eicher DCM spare parts ,Engine head gasket	each	1	30	2395	209	Eicher DCM spare parts , Fuel injector nozzel changing	each	295
205	Eicher DCM spare parts , Engine mounting	each	1	30	195	210	Eicher DCM spare parts , Fuel injector pipe changing	each	795
206	Eicher DCM spare parts , Engine pacing	each	1	30	1995	211	Eicher DCM spare parts , Fuel pump Assy changing	each	395
207	Eicher DCM spare parts , Engine ring	each	1	30	2995	212	Eicher DCM spare parts , Fuel pump washer changing	each	195
208	Eicher DCM spare parts , Fuel injection overflow pipe	each	1	30	395	215	Eicher DCM spare parts ,mobile changing	per ltr	395
209	Eicher DCM spare parts , Fuel injector nozzel	each	1	30	595	216	Eicher DCM spare parts , Timing belt changing	each	9.95
210	Eicher DCM spare parts , Fuel injector pipe	each	1	30	195	217	Eicher DCM spare parts , Timing cover changing	each	95
211	Eicher DCM spare parts , Fuel pump Assy	each	1	30	295	218	Eicher DCM spare parts , Timing cover gear changing	each	195
212	Eicher DCM spare parts , Fuel pump washer	each	1	30	395	219	Eicher DCM spare parts ,Axel lock changing	each	95
213	Eicher DCM spare parts , Hydraulic jack (Heavy Duty)	each	1	30	2995	220	Eicher DCM spare parts , Axel shaft changing	each	195
214	Eicher DCM spare parts , Hydraulic jack (Light Duty)	each	1	30	2295	221	Eicher DCM spare parts , Axel shaft oil seal changing	each	95
215	Eicher DCM spare parts ,mobile	per ltr	1	30	395	222	Eicher DCM spare parts ,C.V joint changing	per piece	295
216	Eicher DCM spare parts , Timing belt	each	1	30	95	223	Eicher DCM spare parts , Center bearing changing	each	695
217	Eicher DCM spare parts , Timing cover	each	1	30	95	224	Eicher DCM spare parts , Clutch cylinder Assy changing	each	595
218	Eicher DCM spare parts , Timing cover gear	each	1	30	95	225	Eicher DCM spare parts , Clutch cylinder kit changing	each	195
219	Eicher DCM spare parts ,Axel lock	each	1	30	295	226	Eicher DCM spare parts , Clutch kit changing	each	195
220	Eicher DCM spare parts , Axel shaft	each	1	30	295	227	Eicher DCM spare parts , Clutch kit box changing	each	95
221	Eicher DCM spare parts , Axel shaft oil seal	each	1	30	595	228	Eicher DCM spare parts , Clutch relese bearing changing	each	695
222	Eicher DCM spare parts ,C.V joint	per piece	1	30	195	229	Eicher DCM spare parts ,Clutch rod changing	each	395
223	Eicher DCM spare parts , Center bearing	each	1	30	1995	230	Eicher DCM spare parts ,Fly wheel changing	each	295
224	Eicher DCM spare parts , Clutch cylinder Assy	each	1	30	2995	231	Eicher DCM spare parts Fly wheel ring changing	each	395
225	Eicher DCM spare parts , Clutch cylinder kit	each	1	30	2995	232	Eicher DCM spare parts , Pilot bearing changing	each	395

226	Eicher DCM spare parts , Clutch kit	each	1	30	95		233	Eicher DCM spare parts , Tail pinion bearing (inner) changing	each	795
227	Eicher DCM spare parts , Clutch kit box	each	1	30	395		234	Eicher DCM spare parts , Tail pinion bearing (Outer) changing	each	895
228	Eicher DCM spare parts , Clutch relese bearing	each	1	30	1995		235	Eicher DCM spare parts , Wheel bearing oil seal inner (Front) changing	each	295
229	Eicher DCM spare parts ,Clutch rod	each	1	30	295		236	Eicher DCM spare parts , Wheel bearing oil seal inner (Rear) changing	each	195
230	Eicher DCM spare parts ,Fly wheel	each	1	30	795		237	Eicher DCM spare parts , Main leaf spring (R) changing	each	1495
231	Eicher DCM spare parts Fly wheel ring	each	1	30	895		238	Eicher DCM spare parts , Main leaf spring (F) changing	each	1095
232	Eicher DCM spare parts , Pilot bearing	each	1	30	395		239	Eicher DCM spare parts , Air filter hose pipe changing	each	95
233	Eicher DCM spare parts , Tail pinion bearing (inner)	each	1	30	1295		240	Eicher DCM spare parts , Hose pipe clamp changing	each	95
234	Eicher DCM spare parts , Tail pinion bearing (Outer)	each	1	30	1495		241	Eicher DCM spare parts , Power steering box Assy changing	each	95
235	Eicher DCM spare parts , Wheel bearing oil seal inner (Front)	each	1	30	1595		242	Eicher DCM spare parts , back glass changing	each	595
236	Eicher DCM spare parts , Wheel bearing oil seal inner (Rear)	each	1	30	1795		243	Eicher DCM spare parts, Front Windshield glass changing	each	2995
237	Eicher DCM spare parts , Main leaf spring (R)	each	1	30	2395		244	Eicher DCM spare parts ,crown overhauling changing	each	95
238	Eicher DCM spare parts , Main leaf spring (F)	each	1	30	1695		245	Eicher DCM spare parts , denting and painting	per metre	0
239	Eicher DCM spare parts , Air filter hose pipe	each	1	30	395		246	Eicher DCM spare parts , Looking glass (R) changing	each	50.95
240	Eicher DCM spare parts , Hose pipe clamp	each	1	30	95		247	Eicher DCM spare parts , Looking glass (L) changing	each	50.95
241	Eicher DCM spare parts , Power steering box Assy	each	1	30	7995		248	Eicher DCM spare parts, Window glass changing	each	495
242	Eicher DCM spare parts , back glass	each	1	30	1295		249	Tyre changing charge	each	395
243	Eicher DCM spare parts, Front Windshield glass	each	1	30	9995		250	Water servicing	each	395
246	Eicher DCM spare parts , Looking glass (R)	each	1	30	895					
247	Eicher DCM spare parts , Looking glass (L)	each	1	30	895					
248	Eicher DCM spare parts, Window glass	each	1	30	995					