

DYNA refuse collector, Phuntsho Auto mobile workshop					
SI No	Description of Item	Unit of Measurement	Quantity	Period of Delivery (No. of Days)	Rate
1	Mobil 15 W40	No	1	30	395
2	Oil filter	No	1	30	2195
3	Fuel filter	No	1	30	1695
4	Gear oil	No	1	30	395
5	Brake oil	No	1	30	295
6	Hydraulic oil	No	1	30	395
7	Hydraulic oil filter	No	1	30	795
8	Power steering oil	No	1	30	295
9	Brake lining (shoe)	No	1	30	1195
10	Wheel alignment assembly	No	1	30	395
11	TMC assembly	No	1	30	8995
12	CMC assembly	No	1	30	6995
13	CSC assembly	No	1	30	6895
14	Wheel bearing outer front	No	1	30	3495
15	Wheel bearing inner rear	No	1	30	3895
16	Wheel bearing outer rear	No	1	30	3795
17	Wheel bearing inner rear	No	1	30	3995
18	Cross bearing	No	1	30	6995
19	Spring bush	No	1	30	495
20	Spring main leaf	No	1	30	1995
21	Spring second leaf	No	1	30	1895
22	Spring third leaf	No	1	30	1795
23	Spring fourth leaf	No	1	30	1695

Labour charge, Phuntsho Auto mobile workshop			
SI NO	Description of Item	Unit of Measurement	Rate
1	Mobil 15 W40 changing	No	395
2	Oil filter changing	No	195
3	Fuel filter changing	No	195
4	Gear oil changing	No	295
5	Brake oil changing	No	195
6	Hydraulic oil changing	No	295
7	Hydraulic oil filter changing	No	195
8	Power steering oil changing	No	195
9	Brake lining (shoe) changing	No	995
10	Wheel alignment assembly changing	No	295
11	TMC assembly changing	No	895
12	CMC assembly changing	No	795
13	CSC assembly changing	No	695
14	Wheel bearing outer front changing	No	795
15	Wheel bearing inner rear changing	No	795
16	Wheel bearing outer rear changing	No	895
17	Wheel bearing inner rear changing	No	795
18	Cross bearing changing	No	695
19	Spring bush changing	No	395
20	Spring main leaf changing	No	1295
21	Spring second leaf changing	No	1295
22	Spring third leaf changing	No	1295
23	Spring fourth leaf changing	No	1295

24	Spring fifth leaf	No	1	30	1595		24	Spring fifth leaf changing	No	1295
25	Tyres	No	1	30	10995		25	Tyres changing charge	No	395
26	Tube	No	1	30	8995		26	Tube labor charge	No	395
27	Coolant	No	1	30	395		27	Coolant labor charge	No	395
28	Greese	No	1	30	695		28	Greese labor charge	No	0
29	Acclerator cable	No	1	30	495		29	Acclerator cable changing	No	295
30	Acclerator sensor	No	1	30	295		30	Acclerator sensor changing	No	395
31	Steering box assembly	No	1	30	55995		31	Steering box assembly changing	No	1995
32	Engine mounting	No	1	30	295		32	Engine mounting changing	No	395
33	Gear box mounting	No	1	30	495		33	Gear box mounting changing	No	295
34	Side view mirror	No	1	30	1995		34	Side view mirror changing	No	95
35	Wheel nut and bolt	No	1	30	295		35	Wheel nut and bolt changing	No	295
36	Popular shaft nut and bolt	No	1	30	195		36	Popular shaft nut and bolt changing	No	195
37	PTO switch	No	1	30	4995		37	PTO switch changing	No	895
38	Horn	No	1	30	1995		38	Horn changing	No	695
39	Bulb head lamp	No	1	30	2995		39	Bulb head lamp changing	No	295
40	Clutch plate	No	1	30	17995		40	Clutch plate changing	No	2995
41	Pressure plate	No	1	30	18995		41	Pressure plate changing	No	3995
42	Wiper blade	No	1	30	395		42	Wiper blade changing	No	50.95
43	Door outer handle	No	1	30	895		43	Door outer handle changing	No	195
44	Hydraulic pipe	No	1	30	2995		44	Hydraulic pipe changing	No	395
45	PTO pipe	No	1	30	395		45	PTO pipe changing	No	195
46	Gear line end	No	1	30	695		46	Gear line end changing	No	195
47	Tie rod end	No	1	30	1495		47	Tie rod end changing	No	595
48	Back light assembly	No	1	30	1295		48	Back light assembly changing	No	295
49	Side light assembly	No	1	30	895		49	Side light assembly changing	No	195
50	Center bolt	No	1	30	295		50	Center bolt changing	No	295

51	Diesel pipe	No	1	30	195	51	Diesel pipe changing	No	395
52	Steering cross	No	1	30	2995	52	Steering cross changing	No	695
53	Crown	No	1	30	2995	53	Crown changing	No	1595
54	Gear pinion 1st	No	1	30	495	54	Gear pinion 1st changing	No	1995
55	Gear pinion 2nd	No	1	30	295	55	Gear pinion 2nd changing	No	1895
56	Gear pinion 3rd	No	1	30	1995	56	Gear pinion 3rd changing	No	1795
57	Gear pinion 4th	No	1	30	2195	57	Gear pinion 4th changing	No	1895
58	Gear pinion 5th	No	1	30	1195	58	Gear pinion 5th changing	No	1795
59	Gear hub 1st speed	No	1	30	2995	59	Gear hub 1st speed changing	No	2195
60	Gear hub 4th speed	No	1	30	1995	60	Gear hub 4th speed changing	No	2195
61	Drain out bolt	No	1	30	95	61	Drain out bolt changing	No	95
62	U bolt	No	1	30	295	62	U bolt changing	No	195
63	Shackle pin	No	1	30	295	63	Shackle pin changing	No	195
64	Shoe bush	No	1	30	695	64	Shoe bush changing	No	95
65	Dash board km sensor (Bolero)	No	1	30	195	65	Dash board km sensor (dyna) changing	No	195
66	Excide battery 12v DC	No	1	30	8995	66	Excide battery 12v DC changing	No	195
67	Brake pad	No	1	30	95	67	Brake pad changing	No	95
68	Brake shoe Rr.	No	1	30	2295	68	Brake shoe Rr. changing	No	995
69	Spring bush Rr.	No	1	30	495	69	Spring bush Rr. changing	No	395
70	Ball joint front upper	No	1	30	95	70	Ball joint front upper changing	No	95
71	Ball joint front lower	No	1	30	195	71	Ball joint front lower changing	No	95
72	Spring main leaf	No	1	30	395	72	Spring main leaf changing	No	0
73	Spring second leaf	No	1	30	595	73	Spring second leaf changing	No	0
74	Spring third leaf	No	1	30	495	74	Spring third leaf changing	No	0
75	Spring fourth leaf	No	1	30	695	75	Spring fourth leaf changing	No	0

76	Hub bearing F inner	No	1	30	3395		76	Hub bearing F inner changing	No	995
77	Hub bearing F outer	No	1	30	3195		77	Hub bearing F outer changing	No	895
78	Axle bearing	No	1	30	2295		78	Axle bearing changing	No	195
79	Check nut	No	1	30	695		79	Check nut changing	No	95
80	Check nut washer	No	1	30	295		80	Check nut washer changing	No	9.95
81	Brake shoe hold down kit	No	1	30	295		81	Brake shoe hold down kit changing	No	95
82	Head light bulb	No	1	30	395		82	Head light bulb changing	No	195
83	Brake light bulb	No	1	30	50.95		83	Brake light bulb changing	No	95
84	Handbrake cable fr	No	1	30	995		84	Handbrake cable fr changing	No	595
85	Hand brake cable Rr.	No	1	30	2995		85	Hand brake cable Rr. changing	No	485
86	Weather strip	No	1	30	995		86	Weather strip changing	No	195
87	Alternator assy	No	1	30	13995		87	Alternator assy changing	No	1595
88	Indicator bulb	No	1	30	30.95		88	Indicator bulb changing	No	95
89	Release bearing	No	1	30	2995		89	Release bearing changing	No	395
90	Self starter assy	No	1	30	65995		90	Self starter assy changing	No	1795
91	Self bendix pinion	No	1	30	16995		91	Self bendix pinion changing	No	1895
92	Self Armature	No	1	30	17995		92	Self Armature changing	No	1895
93	Self bush	No	1	30	495		93	Self bush changing	No	895
94	Self carbon bush	No	1	30	1995		94	Self carbon bush changing	No	995
95	Solenoid switch	No	1	30	1295		95	Solenoid switch changing	No	795
96	Wc assy (Wheel cylinder)	No	1	30	2995		96	Tyre fitting charge	No	395
97	TMC assy (Master cylinder)	No	1	30	8995		97	Wc assy (Wheel cylinder) changing	No	395
98	CMC assy (Clutch cylinder upper)	No	1	30	4995		98	TMC assy (Master cylinder) changing	No	895
99	CSC assy (Clutch cylinder lower)	No	1	30	3995		99	CMC assy (Clutch cylinder upper) changing	No	695
100	Fuse	No	1	30	20.95		100	CSC assy (Clutch cylinder lower) changing	No	795

101	Battery	No	1	30	8995
102	Link Rod	No	1	30	2.95
103	D bush	No	1	30	695
104	Shocker bush	No	1	30	395
105	RTV	No	1	30	150.95
106	Sk oil	No	1	30	130.95
107	Engine oil	No	1	30	395
108	Distilled water	No	1	30	55.95
109	Fan belt	No	1	30	1895
110	Desk board polish	No	1	30	295
111	Spring clamp	No	1	30	195
112	Grease 1kg	No	1	30	695
115	Popular shaft	No	1	30	195
116	Water pump	No	1	30	3995
117	Wiper motor	No	1	30	295
118	Excide battery 12v DC	No	1	30	8995
119	Battery pole holding clamp, nut and bolt	No	1	30	195
121	Looking glass both	Set	1	30	4995
122	Looking glass 1 no left/right	No	1	30	2195
123	Rear light holder with bulb (Right & left)	Set	1	30	195
124	Publuser nut and bolt	No	1	30	195
125	Horn	No	1	30	1295
126	Foot mat	No	1	30	1995
127	Steering wheel cover	No	1	30	995
128	Rain guard	No	1	30	2995
129	Grease gum	No	1	30	95
130	Jack and lever	No	1	30	1995

101	Fuse labor charge	No		50.95
102	Battery labor charge	No		195
103	Link Rod labor charge	No		95
104	D bush changing	No		295
105	Shocker bush changing	No		195
106	RTV changing	No		0
107	Sk oil changing	No		0
108	Engine oil changing	No		395
109	Distilled water labor charge	No		30.95
110	Fan belt changing	No		495
111	Desk board polish labor charge	No		0
112	Spring clamp changing	No		95
113	Grease 1kg labor charge	No		0
114	Hub greasing l;abor charge	No		1295
115	Nipple greasing labor charge	No		20.95
116	Popular shaft changing	No		895
117	Water pump changing	No		1595
118	Excide battery 12v DC changing	No		195
119	Battery pole holding clamp, nut and bolt changing	No		95
120	Tyre repairing, puncture	No		395
121	Looking glass both changing	Set		195
122	Looking glass 1 no left/right changing	No		95
123	Rear light holder with bulb (Right & left) changing	Set		295
124	Wiper motor changing	No		295
125	Publuser nut and bolt changing	No		195
126	Horn changing	No		695
127	Foot mat changing	No		195

131	Bulb 24v	No	1	30	295		128	Steering wheel cover changing	No	95
132	Number plate	No	1	30	395		129	Rain guard changing	No	95
133	Piston set	No	1	30	6995		130	Grease gum changing	No	95
134	Piston ring	No	1	30	9995		131	Jack and lever changing	No	0
135	Head gasket	No	1	30	8995		132	Bulb 24v changing	No	95
136	Engine gasket	No	1	30	12995		133	Movement order book	No	0
137	Connecting bearing	No	1	30	5995		134	Number plate changing	No	95
138	Main bearing	No	1	30	6995		135	Piston set changing	No	2995
139	Valve	No	1	30	2995		136	Piston ring changing	No	3995
140	Valve oil seal	No	1	30	1595		137	Head gasket changing	No	4995
141	Thermostat cap	No	1	30	295		138	Engine gasket changing	No	4995
142	Radiator assembly	No	1	30	55995		139	Connecting bearing changing	No	2995
143	Radiator hose rubber	No	1	30	1995		140	Main bearing changing	No	3995
144	Radiator hose set metail	No	1	30	195		141	Valve changing	No	895
145	Thermostat valve	No	1	30	695		142	Valve oil seal changing	No	395
146	Steering rack	No	1	30	1.95		143	Thermostat cap changing	No	495
147	Tierod end	No	1	30	1395		144	Radiator assembly changing	No	1995
148	Suspension arm	No	1	30	2.95		145	Radiator hose rubber changing	No	395
149	heel knot	No	1	30	20.95		146	Radiator hose set metail changing	No	495
150	Wheel bolt	No	1	30	295		147	Thermostat valve changing	No	395
151	Rear acle bearing	No	1	30	195		148	Steering rack changing	No	995
152	Rear axle	No	1	30	1.95		149	Tierod end changing	No	495
153	Rear axle cone	No	1	30	2.95		150	Suspension arm changing	No	95
154	Rear axle oil seal	No	1	30	795		151	heel knot changing	No	95
155	Populashaft assymbly	No	1	30	16.95		152	Wheel bolt changing	No	195
156	Crown assembly	No	1	30	12.95		153	Rear acle bearing changing	No	795
157	Door pad	No	1	30	295		154	Rear axle changing	No	605
158	Windshield glass	No	1	30	16995		155	Rear axle cone changing	No	195
159	Windshield rubber	No	1	30	1295		156	Rear axle oil seal changing	No	295
160	Door glass machine	No	1	30	795		157	Populashaft assymbly changing	No	1895

161	Head lamp	No	1	30	4995		158	Crown assembly changing	No	2995
162	Indicator lamp	No	1	30	1995		159	Door pad changing	No	295
163	Shocket front	No	1	30	5995		160	Windshield glass changing	No	2995
164	Shocket rear	No	1	30	195		161	Windshield rubber changing	No	595
165	Trailing arm	No	1	30	2.95		162	Door glass machine changing	No	395
166	Door lock	No	1	30	69.95		163	Head lamp changing	No	395
167	Dickey lock	No	1	30	12.95		164	Indicator lamp changing	No	195
168	Tail pinion oil seal	No	1	30	1795		165	Shocket front changing	No	495
169	Gear box oil seal	No	1	30	195		166	Shocket rear changing	No	495
170	Fuel pump	No	1	30	16.95		167	Trailing arm changing	No	95
171	Relay	No	1	30	395		168	Door lock labor charge	No	95
172	Wire 3mm	m	1	30	80.95		169	Dickey lock labor charge	No	95
173	Combination switch	No	1	30	12.95		170	Tail pinion oil seal labor charge	No	1795
174	Brake light switch	No	1	30	195		171	Gear box oil seal changing	No	595
175	Backgear switch	No	1	30	295		172	Fuel pump changing	No	395
176	Crown bearing side	No	1	30	695		173	Relay changing	No	95
177	Crown tail pinion bearing front	No	1	30	295		174	Wire 3mm changing	m	95
178	Crown tail pinion inner	No	1	30	1995		175	Combination switch changing	No	695
179	Cloth (Doti)	No	1	30	35.95		176	Brake light switch changing	No	295
180	RTV	No	1	30	150.95		177	Backgear switch changing	No	195
181	PVC Insulation tape	No	1	30	30.95		178	Crown bearing side changing	No	995
182	Wheel drum	No	1	30	1695		179	Crown tail pinion bearing front changing	No	1295
183	Clutch cable	No	1	30	1.95		180	Crown tail pinion inner changing	No	1395
184	Rear wheel sylinder	No	1	30	1995		181	RTV changing	No	0
185	Caliper assymbly	No	1	30	2.95		182	Wheel drum changing	No	395
186	Spare key	No	1	30	295		183	Clutch cable changing	No	95
187	Electrical line check up	No	1	30	1595		184	Rear wheel sylinder changing	No	395

188	Seat cover	No	1	30	3995		185	Caliper assymbly changing	No	95
189	Water servecing	No	1	30	395		186	Spare key changing	No	595
190	Audio tape (Sony)	No	1	30	6995		187	Electrical line check up changing	No	1595
							188	Seat cover changing	No	495
							189	Water servecing	No	395
							190	Audio tape (Sony) changing	No	695
							191	Denting and painting	No	0