

TATA refuse collector(OLD), Phuntsho Auto mobile workshop						Labour Charge, Phuntsho Automobile workshop			
SI No	Description of Item	Unit of Measurement	Quantity	Period of Delivery (No. of Days)	Rate	SI No	Description of Item	Unit of Measurement	Winning bidder
1	TATA Refuse Compactor Spare parts, Air Filter	No	1	30	695	1	TATA Refuse Compactor Spare parts, Air Filter changing charge	No	195
2	TATA Refuse Compactor Spare parts, Brake Shoe	Set	1	30	4995	2	TATA Refuse Compactor Spare parts, Brake Shoe changing charge	Set	1595
3	TATA Refuse Compactor Spare parts, Brake Pad	Set	1	30	12.95	3	TATA Refuse Compactor Spare parts, Brake Pad changing charge	Set	1.95
4	TATA Refuse Compactor Spare parts, Hub Bearing F Inner	No	1	30	2995	4	TATA Refuse Compactor Spare parts, Hub Bearing F Inner labor charge	No	1295
5	TATA Refuse Compactor Spare parts, Hub Bearing F Outer	No	1	30	2995	5	TATA Refuse Compactor Spare parts, Hub Bearing F Outer labor charge	No	1195
6	TATA Refuse CompactorSpare parts, Hub Oil Seal	No	1	30	995	6	TATA Refuse CompactorSpare parts, Hub Oil Seal changing charge	No	395
7	TATA Refuse Compactor Spare parts, Tube Oil Seal	No	1	30	12.95	7	TATA Refuse Compactor Spare parts, Tube Oil Seal changing charge	No	95
8	TATA Refuse Compactor Spare parts, Brake Disc	No	1	30	2.95	8	TATA Refuse Compactor Spare parts, Brake Disc changing charge	No	23.95
9	TATA Refuse Compactor Spare parts, Hub Check Nut	No	1	30	95	9	TATA Refuse Compactor Spare parts, Hub Check Nut changing charge	No	195
10	TATA Refuse Compactor Spare parts, Check Nut Lock	No	1	30	95	10	TATA Refuse Compactor Spare parts, Check Nut Lock changing charge	No	95
11	TATA Refuse Compactor Spare parts, Hub Splender	No	1	30	20.95	11	TATA Refuse Compactor Spare parts, Hub Splender changing charge	No	195
12	TATA Refuse Compactor Spare parts, Shock Absorber Front	No	1	30	2395	12	TATA Refuse Compactor Spare parts, Shock Absorber Front changing charge	No	495
13	TATA Refuse Compactor Spare parts, Shock Absorber Rear	No	1	30	2295	13	TATA Refuse Compactor Spare parts, Shock Absorber Rear changing charge	No	395
14	TATA Refuse Compactor Spare parts, Shock Absorber Bush	No	1	30	195	14	TATA Refuse Compactor Spare parts, Shock Absorber Bush changing charge	No	195
15	TATA Refuse Compactor Spare parts, Stablizer Bar Bush Front	No	1	30	295	15	TATA Refuse Compactor Spare parts, Stablizer Bar Bush Front changing charge	No	395
16	TATA Refuse Compactor Spare parts, Stablizer Bar Bush Rear	No	1	30	295	16	TATA Refuse Compactor Spare parts, Stablizer Bar Bush Rear changing charge	No	295

17	TATA Refuse Compactor Spare parts, Link Bush Front	No	1	30	195		17	TATA Refuse Compactor Spare parts, Link Bush Front changing charge	No	195
18	TATA Refuse Compactor Spare parts, Link Bush Rear	No	1	30	395		18	TATA Refuse Compactor Spare parts, Link Bush Rear changing charge	No	95
19	TATA Refuse Compactor Spare parts, Spring Main Rear	No	1	30	3995		19	TATA Refuse Compactor Spare parts, Spring Main Rear labor charge	No	1495
20	TATA Refuse Compactor Spare parts, Spring Main Front	No	1	30	2595		20	TATA Refuse Compactor Spare parts, Spring Main Front labor charge	No	1295
21	TATA Refuse Compactor Spare parts, Spring Bush Small	No	1	30	395		21	TATA Refuse Compactor Spare parts, Spring Bush Small changing charge	No	195
22	TATA Refuse Compactor Spare parts, Spring Bush Big	No	1	30	295		22	TATA Refuse Compactor Spare parts, Spring Bush Big changing charge	No	295
23	TATA Refuse Compactor Spare parts, Spring Clamp	No	1	30	195		23	TATA Refuse Compactor Spare parts, Spring Clamp changing charge	No	195
24	TATA Refuse Compactor Spare parts, Spring Bush Metal	No	1	30	195		24	TATA Refuse Compactor Spare parts, Spring Bush Metal labor charge	No	495
25	TATA Refuse Compactor Spare parts, Center Bolt	No	1	30	295		25	TATA Refuse Compactor Spare parts, Center Bolt changing charge	No	495
26	TATA Refuse Compactor Spare parts, Fuel Filter	No	1	30	1595		26	TATA Refuse Compactor Spare parts, Fuel Filter labour charge	No	495
27	TATA Refuse Compactor Spare parts, Oil Filter	No	1	30	1895		27	TATA Refuse Compactor Spare parts, Oil Filter labour charge	No	495
28	TATA Refuse Compactor Spare parts, Oil (Castrol)	Ltr	1	30	395		28	TATA Refuse Compactor Spare parts, Oil (Castrol) labour charge	Ltr	495
29	TATA Refuse Compactor Spare parts, Oil Mak	Ltr	1	30	395		29	TATA Refuse Compactor Spare parts, Oil Mak changing charge	Ltr	495
30	TATA Refuse Compactor Spare parts, Oil Rimula	Ltr	1	30	495		30	TATA Refuse Compactor Spare parts, Oil Rimula labor charge	Ltr	495
31	TATA Refuse Compactor Spare parts, Gear Oil Castrol	Ltr	1	30	395		31	TATA Refuse Compactor Spare parts, Gear Oil Castrol, labor charge	Ltr	495
32	TATA Refuse Compactor Spare parts, Gear Oil Mak	Ltr	1	30	395		32	TATA Refuse Compactor Spare parts, Gear Oil Mak labor charge	Ltr	395
33	TATA Refuse Compactor Spare parts, Trasmission Oil	Ltr	1	30	395		33	TATA Refuse Compactor Spare parts, Trasmission Oil labor charge	Ltr	395
34	TATA Refuse Compactor Spare parts, Hyudraulic Oil	Ltr	1	30	395		34	TATA Refuse Compactor Spare parts, Hyudraulic Oil labor charge	Ltr	495
35	TATA Refuse Compactor Spare parts, Axle Bearing	No	1	30	195		35	TATA Refuse Compactor Spare parts, Axle Bearing changing charge	No	395
36	TATA Refuse Compactor Spare parts, Axle Oil Seal Inner	No	1	30	695		36	TATA Refuse Compactor Spare parts, Axle Oil Seal Inner labor charge	No	495

37	TATA Refuse Compactor Spare parts, Axle Oil Seal Outer	No	1	30	895		37	TATA Refuse Compactor Spare parts, Axle Oil Seal Outer labour charge	No	195
38	TATA Refuse Compactor Spare parts, Axle Tube Oil Seal	No	1	30	23.95		38	TATA Refuse Compactor Spare parts, Axle Tube Oil Seal labour charge	No	95
39	TATA Refuse Compactor Spare parts,Rear Differential Assy	No	1	30	9995		39	TATA Refuse Compactor Spare parts,Rear Differential Assy changing	No	5995
40	TATA Refuse Compactor Spare parts, Differential Side Bearing	No	1	30	1895		40	TATA Refuse Compactor Spare parts, Differential Side Bearing changing charge	No	295
41	TATA Refuse Compactor Spare parts, Tail Inner Bearing	No	1	30	1595		41	TATA Refuse Compactor Spare parts, Tail Inner Bearing changing	No	495
42	TATA Refuse Compactor Spare parts, Tail Outer Bearing	No	1	30	1395		42	TATA Refuse Compactor Spare parts, Tail Outer Bearing changing	No	395
43	TATA Refuse Compactor Spare parts, Tail Oil Seal	No	1	30	1695		43	TATA Refuse Compactor Spare parts, Tail Oil Seal changing	No	295
44	TATA Refuse Compactor Spare parts, Crown & Tail Assy	Set	1	30	3995		44	TATA Refuse Compactor Spare parts, Crown & Tail Assy changing	Set	995
45	TATA Refuse Compactor Spare parts,Ball Joint Upper	No	1	30	95		45	TATA Refuse Compactor Spare parts,Ball Joint Upper labour charge	No	95
46	TATA Refuse Compactor Spare parts, Ball Joint Lower	No	1	30	95		46	TATA Refuse Compactor Spare parts, Ball Joint Lower labour charge	No	1.95
47	TATA Refuse Compactor Spare parts, Arm Lower	No	1	30	95		47	TATA Refuse Compactor Spare parts, Arm Lower changing charge	No	2.95
48	TATA Refuse Compactor Spare parts, Arm Upper	No	1	30	95		48	TATA Refuse Compactor Spare parts, Arm Upper changing charge	No	95
49	TATA Refuse Compactor Spare parts, Arm Bush Lower	No	1	30	295		49	TATA Refuse Compactor Spare parts, Arm Bush Lower	No	12.95
50	TATA Refuse Compactor Spare parts, Arm Bush Upper	No	1	30	95		50	TATA Refuse Compactor Spare parts, Arm Bush Upper changing charge	No	195
51	TATA Refuse Compactor Spare parts, Brake Hose Front	No	1	30	295		51	TATA Refuse Compactor Spare parts, Brake Hose Front labor charge	No	395
52	TATA Refuse Compactor Spare parts, Brake Hose Rear	No	1	30	95		52	TATA Refuse Compactor Spare parts, Brake Hose Rear changing charge	No	395
53	TATA Refuse Compactor Spare parts, Back Light	No	1	30	1495		53	TATA Refuse Compactor Spare parts, Back Light changing charge	No	295
54	TATA Refuse Compactor Spare parts, Back Light Bulb	No	1	30	95		54	TATA Refuse Compactor Spare parts, Back Light Bulb, changing charge	No	35.95
55	TATA Refuse Compactor Spare parts, Side Light	No	1	30	495		55	TATA Refuse Compactor Spare parts, Side Light changing charge	No	295
56	TATA Refuse Compactor Spare parts, Side Light Bulb	No	1	30	55.95		56	TATA Refuse Compactor Spare parts, Side Light Bulb changing	No	295

57	TATA Refuse Compactor Spare parts, Head Light	No	1	30	395	57	TATA Refuse Compactor Spare parts, Head Light changing	No	295
58	TATA Refuse Compactor Spare parts, Head Light Bulb	No	1	30	295	58	TATA Refuse Compactor Spare parts, Head Light Bulb changing	No	195
59	TATA Refuse Compactor, Spare parts, Head Light Assy LH	No	1	30	4995	59	TATA Refuse Compactor, Spare parts, Head Light Assy LH changing	No	495
60	TATA Refuse Compactor Spare parts, Head Gasket	No	1	30	295	60	TATA Refuse Compactor Spare parts, Head Gasket changing	No	4995
61	TATA Refuse Compactor Spare parts, Head Gasket Set	Set	1	30	395	61	TATA Refuse Compactor Spare parts, Head Gasket Set changing	Set	3995
62	TATA Refuse Compactor Spare parts, Water Pump	No	1	30	1295	62	TATA Refuse Compactor Spare parts, Water Pump changing	No	1995
63	TATA Refuse Compactor Spare parts, Fan Belt	No	1	30	1595	63	TATA Refuse Compactor Spare parts, Fan Belt changing	No	495
64	TATA Refuse Compactor Spare parts, Power Steering Belt	No	1	30	595	64	TATA Refuse Compactor Spare parts, Power Steering Belt changing	No	695
65	TATA Refuse Compactor Spare parts, Acc Belt	No	1	30	995	65	TATA Refuse Compactor Spare parts, Acc Belt changing	No	295
66	TATA Refuse Compactor Spare parts, Steering Damper	No	1	30	3.95	66	TATA Refuse Compactor Spare parts, Steering Damper changing	No	195
67	TATA Refuse Compactor Spare Parts, Power Steering Motor	NO	1	30	4.95	67	TATA Refuse Compactor Spare Parts, Power Steering Motor chaging	NO	195
68	TATA Refuse Compactor Spare parts, Steering Relay	No	1	30	5.95	68	TATA Refuse Compactor Spare parts, Steering Relay changing	No	95
69	TATA Refuse Compactor Spare parts, Steering Drop Arm	No	1	30	4.95	69	TATA Refuse Compactor Spare parts, Steering Drop Arm changing	No	1.95
70	TATA Refuse Compactor Spare parts, Steering Relay Kit	No	1	30	95	70	TATA Refuse Compactor Spare parts, Steering Relay Kit changing	No	23.95
71	TATA Refuse Compactor Spare parts, Brake Buckket Kit	No	1	30	95	71	TATA Refuse Compactor Spare parts, Brake Buckket Kit labor charge	No	21.95
72	TATA Refuse Compactor Spare parts, Wheel Cylinder Assy	No	1	30	95	72	TATA Refuse Compactor Spare parts, Wheel Cylinder Assy labor charge	No	59.95
73	TATA Refuse Compactor Spare parts, Feed Pump	No	1	30	95	73	TATA Refuse Compactor Spare parts, Feed Pump changing	No	495
74	TATA Refuse Compactor Spare parts, Fuel Supply Pump	No	1	30	195	74	TATA Refuse Compactor Spare parts, Fuel Supply Pump changing	No	895
75	TATA Refuse Compactor Spare parts, Fuel Totter & Head	Set	1	30	12.95	75	TATA Refuse Compactor Spare parts, Fuel Totter & Head changing	Set	10.95
76	TATA Refuse Compactor Spare parts, Delivery Valve	Set	1	30	95	76	TATA Refuse Compactor Spare parts, Delivery Valve changing	Set	2.95
77	TATA Refuse Compactor Spare parts, Oil Supply Pump	Set	1	30	995	77	TATA Refuse Compactor Spare parts, Oil Supply Pump labor charge	Set	95
78	TATA Refuse Compactor Spare parts, Valve Oil Seal	Set	1	30	95	78	TATA Refuse Compactor Spare parts, Valve Oil Seal labor charge	Set	88.95

79	TATA Refuse Compactor Spare parts, Clutch Plate	Set	1	30	4995	79	TATA Refuse Compactor Spare parts, Clutch Plate labor charge	Set	2995
80	TATA Refuse Compactor Spare parts, Pressure Plate	No	1	30	5995	80	TATA Refuse Compactor Spare parts, Pressure Plate labor charge	No	3995
81	TATA Refuse Compactor Spare parts, Release Bearing	No	1	30	1995	81	TATA Refuse Compactor Spare parts, Release Bearing labor charge	No	1295
82	TATA Refuse Compactor Spare parts, Master Cylinder Kit	No	1	30	1.95	82	TATA Refuse Compactor Spare parts, Master Cylinder Kit changing	No	995
83	TATA Refuse Compactor Spare parts, Master Cylinder	No	1	30	2.95	83	TATA Refuse Compactor Spare parts, Master Cylinder changing	No	595
84	TATA Refuse Compactor Spare parts, Clutch Cylinder Upper	No	1	30	2295	84	TATA Refuse Compactor Spare parts, Clutch Cylinder Upper changing	No	495
85	TATA Refuse Compactor Spare parts, Clutch Cylinder Lower	No	1	30	4595	85	TATA Refuse Compactor Spare parts, Clutch Cylinder Lower changing	No	395
86	TATA Refuse Compactor Spare parts, Brake Booster	No	1	30	95	86	TATA Refuse Compactor Spare parts, Brake Booster labor charge	No	495
87	TATA Refuse Compactor Spare parts, Cross Bearing	No	1	30	1995	87	TATA Refuse Compactor Spare parts, Cross Bearing labor charge	No	795
88	TATA Refuse Compactor Spare parts, Link	No	1	30	95	88	TATA Refuse Compactor Spare parts, Link changing	No	95
89	TATA Refuse Compactor Spare parts, C V Joint	No	1	30	12.95	89	TATA Refuse Compactor Spare parts, C V Joint changing	No	38.95
90	TATA Refuse Compactor Spare parts, Drive Shaft Assy	No	1	30	13.95	90	TATA Refuse Compactor Spare parts, Drive Shaft Assy, changing	No	12.95
91	TATA Refuse Compactor Spare parts,Rear Spring Shackel	No	1	30	895	91	TATA Refuse Compactor Spare parts,Rear Spring Shackel changing	No	595
92	TATA Refuse Compactor Spare parts, Tie Rod End Small	No	1	30	695	92	TATA Refuse Compactor Spare parts, Tie Rod End Small changing	No	695
93	TATA Refuse Compactor Spare parts, Tie Rod End Big	No	1	30	895	93	TATA Refuse Compactor Spare parts, Tie Rod End Big changing	No	595
94	TATA Refuse Compactor Spare parts, Tie Rod End	Set	1	30	2795	94	TATA Refuse Compactor Spare parts, Tie Rod End changing	Set	1995
95	TATA Refuse Compactor Spare parts, King Pin Bearing	Set	1	30	2995	95	TATA Refuse Compactor Spare parts, King Pin Bearing changing	Set	1295
96	TATA Refuse Compactor Spare parts, King Pin Kit	Set	1	30	1495	96	TATA Refuse Compactor Spare parts, King Pin Kit changing	Set	1395
97	TATA Refuse Compactor Spare parts, Radiator Cap	Set	1	30	295	97	TATA Refuse Compactor Spare parts, Radiator Cap changing	Set	95
98	TATA Refuse Compactor Spare parts, Wheel Nuts & Bolts	No	1	30	295	98	TATA Refuse Compactor Spare parts, Wheel Nuts & Bolts changing	No	20.95
99	TATA Refuse Compactor Spare parts, Self Armature	No	1	30	2895	99	TATA Refuse Compactor Spare parts, Self Armature, changing	No	1295
100	TATA Refuse Compactor Spare parts, Self Carbon	No	1	30	495	100	TATA Refuse Compactor Spare parts, Self Carbon, changing	No	895
101	TATA Refuse Compactor Spare parts, Self Carnon Rocker	No	1	30	95	101	TATA Refuse Compactor Spare parts, Self Carnon Rocker changing	No	995

102	TATA Refuse Compactor Spare parts, Self Plunger	No	1	30	95		102	TATA Refuse Compactor Spare parts, Self Plunger changing	No	195
103	TATA Refuse Compactor Spare parts, Timing Belt	No	1	30	95		103	TATA Refuse Compactor Spare parts, Timing Belt changing	No	95
104	TATA Refuse Compactor Spare parts, Glow Plug	No	1	30	1995		104	TATA Refuse Compactor Spare parts, Glow Plug changing	No	595
105	TATA Refuse Compactor Spare parts, Engine Mounting	No	1	30	295		105	TATA Refuse Compactor Spare parts, Engine Mounting labor charge	No	295
106	TATA Refuse Compactor Spare parts, Gear Box Mounting	No	1	30	395		106	TATA Refuse Compactor Spare parts, Gear Box Mounting labor charge	No	195
107	TATA Refuse Compactor Spare parts, Wiper Blade	No	1	30	395		107	TATA Refuse Compactor Spare parts, Wiper Blade changing	No	20.95
108	TATA Refuse Compactor Spare parts, Battery	No	1	30	9995		108	TATA Refuse Compactor Spare parts, Battery changing	No	95
109	TATA Refuse Compactor Spare parts, Brake Oil	Ltr	1	30	395		109	TATA Refuse Compactor Spare parts, Brake Oil labor charge	Ltr	195
110	TATA Refuse Compactor Spare parts, Power Steering Oil	Ltr	1	30	395		110	TATA Refuse Compactor Spare parts, Power Steering Oil labor charge	Ltr	295
111	TATA Refuse Compactor Spare parts, Key Lock Set	Set	1	30	495		111	TATA Refuse Compactor Spare parts, Key Lock Set labor charge	Set	395
112	TATA Refuse Compactor Spare parts, Parking Cable Rear	No	1	30	195		112	TATA Refuse Compactor Spare parts, Parking Cable Rear changing	No	95
113	TATA Refuse Compactor Spare parts, Parking Cable Front	No	1	30	495		113	TATA Refuse Compactor Spare parts, Parking Cable Front changing	No	9.95
114	TATA Refuse Compactor Spare parts, Accelerator Cable	No	1	30	95		114	TATA Refuse Compactor Spare parts, Accelerator Cable changing	No	595
115	TATA Refuse Compactor Spare parts, Km Cable	No	1	30	95		115	TATA Refuse Compactor Spare parts, Km Cable labor charge	No	195
116	TATA Refuse Compactor Spare parts, Rear Axle Corn	No	1	30	395		116	TATA Refuse Compactor Spare parts, Rear Axle Corn changing	No	95
117	TATA Refuse Compactor Spare parts, Spring Pad	No	1	30	95		117	TATA Refuse Compactor Spare parts, Spring Pad changing	No	195
118	TATA Refuse Compactor Spare parts, Piston	Set	1	30	3995		118	TATA Refuse Compactor Spare parts, Piston changing	Set	3995
119	TATA Refuse Compactor Spare parts, Piston Ring	Set	1	30	3995		119	TATA Refuse Compactor Spare parts, Piston Ring changing	Set	2995
120	TATA Refuse Compactor Spare parts, Linner	Set	1	30	1995		120	TATA Refuse Compactor Spare parts, Linner changing	Set	2995
121	TATA Refuse Compactor Spare parts, Intake Valve	Set	1	30	95		121	TATA Refuse Compactor Spare parts, Intake Valve changing	Set	595
122	TATA Refuse Compactor Spare parts, Exhaust Valve	Set	1	30	395		122	TATA Refuse Compactor Spare parts, Exhaust Valve changing	Set	395
123	TATA Refuse Compactor Spare parts, Valve Guide	Set	1	30	295		123	TATA Refuse Compactor Spare parts, Valve Guide labor charge	Set	895
124	TATA Refuse Compactor Spare parts, Valve Seat	Set	1	30	3495		124	TATA Refuse Compactor Spare parts, Valve Seat labor charge	Set	695

125	TATA Refuse Compactor Spare parts, Connecting Bearing	Set	1	30	2995		125	TATA Refuse Compactor Spare parts, Connecting Bearing changing	Set	1595
126	TATA Refuse Compactor Spare parts, Main Bearing	Set	1	30	1995		126	TATA Refuse Compactor Spare parts, Main Bearing changing	Set	1695
127	TATA Refuse Compactor Spare parts, Cam Shaft Bearing	Set	1	30	2295		127	TATA Refuse Compactor Spare parts, Cam Shaft Bearing changing	Set	1295
128	TATA Refuse Compactor Spare parts, Thrush Washer	Set	1	30	195		128	TATA Refuse Compactor Spare parts, Thrush Washer labor charge	Set	895
129	TATA Refuse Compactor Spare parts, Crank Shaft	No	1	30	195		129	TATA Refuse Compactor Spare parts, Crank Shaft changing	No	1295
130	TATA Refuse Compactor Spare parts, Connecting Rod	No	1	30	695		130	TATA Refuse Compactor Spare parts, Connecting Rod changing	No	895
131	TATA Refuse Compactor Spare parts, Valve Set	Set	1	30	1995		131	TATA Refuse Compactor Spare parts, Valve Set changing	Set	2995
132	TATA Refuse Compactor Spare parts, Grease	Kg	1	30	695		132	TATA Refuse Compactor Spare parts, Grease servicing	Kg	20.95
133	TATA Refuse Compactor Spare parts, Dhoti	Kg	1	30	35.95		133	TATA Refuse Compactor Spare parts, Sk Oil changing	Ltr	0
134	TATA Refuse Compactor Spare parts, Sk Oil	Ltr	1	30	130.95		134	TATA Refuse Compactor Spare parts, Water Paper labor charge	No	95
135	TATA Refuse Compactor Spare parts, Water Paper	No	1	30	95		135	TATA Refuse Compactor Spare parts, 4W Yok And Teeth changing	Set	695
136	TATA Refuse Compactor Spare parts, 4W Yok And Teeth	Set	1	30	1995		136	TATA Refuse Compactor Spare parts, 2W Yok And Teeth changing	Set	595
137	TATA Refuse Compactor Spare parts, 2W Yok And Teeth	Set	1	30	1695		137	TATA Refuse Compactor Spare parts, Main Bearing Oil Seal changing	No	1495
138	TATA Refuse Compactor Spare parts, Main Bearing Oil Seal	No	1	30	1695		138	TATA Refuse Compactor Spare parts, U-Bolt changing	No	995
139	TATA Refuse Compactor Spare parts, U-Bolt	No	1	30	1495		139	TATA Refuse Compactor Spare parts, Mobil Filter changing	No	295
140	TATA Refuse Compactor Spare parts, Mobil Filter	No	1	30	1295		140	TATA Refuse Compactor Spare parts, Diesel Filter changing	No	295
141	TATA Refuse Compactor Spare parts, Diesel Filter	No	1	30	995		141	TATA Refuse Compactor Spare parts, CV Joint Assembly changing	No	95
142	TATA Refuse Compactor Spare parts, CV Joint Assembly	No	1	30	95		142	TATA Refuse Compactor Spare parts, Dust Guard back and front changing	Set	695
143	TATA Refuse Compactor Spare parts, Dust Guard back and front	Set	1	30	195		143	TATA Refuse Compactor Spare parts, Engine Oil changing	Ltr	495
144	TATA Refuse Compactor Spare parts, Engine Oil	Ltr	1	30	495		144	TATA Refuse Compactor Spare parts, Coolant changing	Ltr	395
145	TATA Refuse Compactor Spare parts, Coolant	Ltr	1	30	395		145	TATA Refuse Compactor Spare parts, Distilled Water labor charge	Ltr	0
146	TATA Refuse Compactor Spare parts, Distilled Water	Ltr	1	30	55.95		146	TATA Refuse Compactor Spare parts, Bonnet Cable changing	Set	195
147	TATA Refuse Compactor Spare parts, Bonnet Cable	Set	1	30	12.95		147	TATA Refuse CompactorS are parts, Hand Brake Cable changing	Set	95

148	TATA Refuse CompactorS are parts, Hand Brake Cable	Set	1	30	1.95		148	TATA Refuse Compactor Spare parts, Door Rubber changing	Set	395
149	TATA Refuse Compactor Spare parts, Door Rubber	Set	1	30	1295		149	TATA Refuse Compactor Spare parts,Safe Guard changing	Set	195
150	TATA Refuse Compactor Spare parts,Safe Guard	Set	1	30	595		150	TATA Refuse Compactor Spare parts, Fog Light changing	Set	895
151	TATA Refuse Compactor Spare parts, Fog Light	Set	1	30	1695		151	TATA Refuse Compactor Spare parts, Horn changing	No	695
152	TATA Refuse Compactor Spare parts, Horn	No	1	30	1795		152	TATA Refuse Compactor Spare parts, Pop.Shaft-Yoke & Teeth changing	No	995
153	TATA Refuse Compactor Spare parts, Pop.Shaft-Yoke & Teeth	No	1	30	2995		153	TATA Refuse Compactor Spare parts, Fuse changing	No	50.95
154	TATA Refuse Compactor Spare parts, Fuse	No	1	30	20.95		154	TATA Refuse Compactor Spare parts, Wheel Bearing changing	No	995
155	TATA Refuse Compactor Spare parts, Wheel Bearing	No	1	30	1995		155	TATA Refuse compactor spare parts, Sileacer pipe changing	No	295
156	TATA Refuse compactor spare parts, Sileacer pipe	No	1	30	195		156	TATA Refuse compactor spare parts, A/C filter chanching	no	95
157	TATA Refuse compactor spare parts, A/C filter	no	1	30	1.95		157	TATA Refuse compactor spare parts, Alternator carbon bush changing	each	495
158	TATA Refuse compactor spare parts, Alternator carbon bush	each	1	30	795		158	TATA Refuse compactor spare parts,Alternator cut out changing	each	595
159	TATA Refuse compactor spare parts,Alternator cut out	each	1	30	1295		159	TATA Refuse compactor spare parts, Anabond paste (Big) changing	each	150.95
160	TATA Refuse compactor spare parts, Anabond paste (Big)	each	1	30	150.95		160	TATA Refuse compactor spare parts, Anabond paste (Small) changing	each	95
161	TATA Refuse compactor spare parts, Anabond paste (Small)	each	1	30	95		161	TATA Refuse compactor spare parts, Back bumper cover changing	each	195
162	TATA Refuse compactor spare parts, Back bumper cover	each	1	30	95		162	TATA Refuse compactor spare parts, Battery cable +ive	each	195
163	TATA Refuse compactor spare parts, Battery cable +ive	each	1	30	895		163	TATA Refuse compactor spare parts, Battery cable -ive changing	each	195
164	TATA Refuse compactor spare parts, Battery cable -ive	each	1	30	595		164	TATA Refuse compactor spare parts, Bendix pinion changing	each	1295
165	TATA Refuse compactor spare parts, Bendix pinion	each	1	30	1595		165	TATA Refuse compactor spare parts, Bulb 1141 changing	each	50.95
166	Black tape	each	1	30	30.95		166	TATA Refuse compactor spare parts,s Bulb 67 changing	each	50.95
167	TATA Refuse compactor spare parts, Bulb 1141	each	1	30	40.95		167	TATA Refuse compactor spare parts, bush stabilzer changing	per piece	395
168	TATA Refuse compactor spare parts,s Bulb 67	each	1	30	30.95		168	TATA Refuse compactor spare parts, Carbon bush 12 v changing	no	595
169	TATA Refuse compactor spare parts, bush stabilzer	per piece	1	30	395		169	TATA Refuse compactor spare parts,Carbon holder changing	no	495



170	TATA Refuse compactor spare parts, Carbon bush 12 v	no	1	30	395		170	TATA Refuse compactor spare parts, Carbon rocker 12v changing	no	295
171	TATA Refuse compactor spare parts,Carbon holder	no	1	30	495		171	TATA Refuse compactor spare parts, Dynamo bearing changing	no	595
172	TATA Refuse compactor spare parts, Carbon rocker 12v	no	1	30	395		172	TATA Refuse compactor spare parts,Spiadle bush changing	no	595
173	TATA Refuse compactor spare parts, Dynamo bearing	no	1	30	195		173	TATA Refuse compactor spare parts, Spiadle assy changing	no	495
174	TATA Refuse compactor spare parts,Spiadle bush	no	1	30	295		174	TATA Refuse compactor spare parts, Axle cross changing	no	195
175	TATA Refuse compactor spare parts, Spiadle assy	no	1	30	395		175	TATA Refuse compactor spare parts, Front bumper cover changing	each	2995
176	TATA Refuse compactor spare parts, Axle cross	no	1	30	95		176	TATA Refuse compactor spare parts, fuel pipe changing	per piece	495
177	TATA Refuse compactor spare parts, foot mat	set	1	30	1995		177	TATA Refuse compactor spare parts, grease gun labor charge	each	0
178	TATA Refuse compactor spare parts, Front bumper cover	each	1	30	1495		178	TATA Refuse compactor spare parts, Horn high changing	each	695
179	TATA Refuse compactor spare parts, fuel pipe	per piece	1	30	695		179	TATA Refuse compactor spare parts, Horn low changing	each	695
180	TATA Refuse compactor spare parts, grease gun	each	1	30	195		180	TATA Refuse compactor spare parts, Horn relay changing	each	95
181	TATA Refuse compactor spare parts, Horn high	each	1	30	1695		181	TATA Refuse compactor spare parts, horn switch changing	each	95
182	TATA Refuse compactor spare parts, Horn low	each	1	30	1295		182	TATA Refuse compactor spare parts, hour metre changing	each	95
183	TATA Refuse compactor spare parts, Horn relay	each	1	30	195		183	TATA Refuse compactor spare parts, ignition switch changing	each	295
184	TATA Refuse compactor spare parts, horn switch	each	1	30	95		184	TATA Refuse compactor spare parts, LT wire 5mm changing	each	95
185	TATA Refuse compactor spare parts, hour metre	each	1	30	195		185	TATA Refuse compactor spare parts, LT wire 6mm changing	each	95
186	TATA Refuse compactor spare parts, ignition switch	each	1	30	95		186	TATA Refuse compactor spare parts, LT wire 8mm changing	each	95
187	TATA Refuse compactor spare parts, LT wire 5mm	each	1	30	95		187	TATA Refuse compactor spare parts, nozzle pipe changing	per piece	95
188	TATA Refuse compactor spare parts, LT wire 6mm	each	1	30	95		188	TATA Refuse compactor spare parts,rain guard changing	each	295
189	TATA Refuse compactor spare parts, LT wire 8mm	each	1	30	95		189	TATA Refuse compactor spare parts, seat cover changing	set	595
190	TATA Refuse compactor spare parts, nozzle pipe	per piece	1	30	195		190	TATA Refuse compactor spare parts,vacuum nozzle pipe changing	each	95
191	TATA Refuse compactor spare parts,rain guard	each	1	30	1695		191	TATA Refuse compactor spare parts,vehicle no. plate changing	per piece	95
192	TATA Refuse compactor spare parts, seat cover	set	1	30	3995		192	TATA Refuse compactor spare parts,wheel Drum changing	per piece	395
193	TATA Refuse compactor spare parts,vacuum nozzle pipe	each	1	30	95		193	TATA Refuse compactor spare parts,Wiper blade Assy changing	each	40.95

194	TATA Refuse compactor spare parts,vehicle no. plate	per piece	1	30	395	194	TATA Refuse compactor spare parts,steering cover changing	each	95
195	TATA Refuse compactor spare parts,wheel Drum	per piece	1	30	195	195	TATA Refuse compactor spare parts, Wiper motor changing	each	295
196	TATA Refuse compactor spare parts,Wiper blade Assy	each	1	30	295	196	TATA Refuse compactor spare parts, Bearing 6202 changing	each	295
197	TATA Refuse compactor spare parts,steering cover	each	1	30	595	197	TATA Refuse compactor spare parts,Bearing 6302 changing	each	195
198	TATA Refuse compactor spare parts, Wiper motor	each	1	30	295	198	TATA Refuse compactor spare parts,Crank shaft oil seal changing	each	895
199	TATA Refuse compactor spare parts, Bearing 6202	each	1	30	295	199	TATA Refuse compactor spare parts,Drain plug changing	each	695
200	TATA Refuse compactor spare parts,Bearing 6302	each	1	30	295	200	TATA Refuse compactor spare parts,Element Assy, Fuel changing	each	295
201	TATA Refuse compactor spare parts,Crank shaft oil seal	each	1	30	1295	201	TATA Refuse compactor spare parts, Element sub assy, Air labor charge	each	395
202	TATA Refuse compactor spare parts,Drain plug	each	1	30	95	202	TATA Refuse compactor spare parts,Engine head gasket labor charge	each	2995
203	TATA Refuse compactor spare parts,Element Assy, Fuel	each	1	30	1595	203	TATA Refuse compactor spare parts, Engine mounting ;abor charge	each	195
204	TATA Refuse compactor spare parts, Element sub assy, Air	each	1	30	995	204	TATA Refuse compactor spare parts, Engine pacing changing	each	1995
205	TATA Refuse compactor spare parts,Engine head gasket	each	1	30	4995	205	TATA Refuse compactor spare parts, Engine ring labor charge	each	1995
206	TATA Refuse compactor spare parts, Engine mounting	each	1	30	995	206	TATA Refuse compactor spare parts, Fuel injection overflow pipe labor charge	each	195
207	TATA Refuse compactor spare parts, Engine pacing	each	1	30	2995	207	TATA Refuse compactor spare parts, Fuel injector nozzel changing	each	295
208	TATA Refuse compactor spare parts, Engine ring	each	1	30	4995	208	TATA Refuse compactor spare parts, Fuel injector pipe changing	each	295
209	TATA Refuse compactor spare parts, Fuel injection overflow pipe	each	1	30	995	209	TATA Refuse compactor spare parts, Fuel pump Assy changing	each	295
210	TATA Refuse compactor spare parts, Fuel injector nozzel	each	1	30	95	210	TATA Refuse compactor spare parts, Fuel pump washer changing	each	395
211	TATA Refuse compactor spare parts, Fuel injector pipe	each	1	30	95	211	TATA Refuse compactor spare parts,Fuel pump changing	each	195
212	TATA Refuse compactor spare parts, Fuel pump Assy	each	1	30	1295	212	TATA Refuse compactor spare parts, Hydraulic jack (Heavy Duty)	each	0
213	TATA Refuse compactor spare parts, Fuel pump washer	each	1	30	195	213	TATA Refuse compactor spare parts, Hydraulic jack (Light Duty) changing	each	0
214	TATA Refuse compactor spare parts,Fuel pump	each	1	30	495	214	TATA Refuse compactor spare parts,mobile changing	per ltr	495

215	TATA Refuse compactor spare parts, Hydraulic jack (Heavy Duty)	each	1	30	2395		215	TATA Refuse compactor spare parts, Timing belt changing	each	9.95
216	TATA Refuse compactor spare parts, Hydraulic jack (Light Duty)	each	1	30	1995		216	TATA Refuse compactor spare parts, Timing cover changing	each	10.95
217	TATA Refuse compactor spare parts, mobile	per ltr	1	30	395		217	TATA Refuse compactor spare parts, Timing cover gear changing	each	8.95
218	TATA Refuse compactor spare parts, Timing belt	each	1	30	95		218	TATA Refuse compactor spare parts, Axle lock labor charge	each	10.95
219	TATA Refuse compactor spare parts, Timing cover	each	1	30	95		219	TATA Refuse compactor spare parts, Axle shaft labor charge	each	99.95
220	TATA Refuse compactor spare parts, Timing cover gear	each	1	30	195		220	TATA Refuse compactor spare parts, Axle shaft oil seal labor charge	each	295
221	TATA Refuse compactor spare parts, Axle lock	each	1	30	95		221	TATA Refuse compactor spare parts, C.V joint labor charge	per piece	1.95
222	TATA Refuse compactor spare parts, Axle shaft	each	1	30	195		222	TATA Refuse compactor spare parts, Center bearing labor charge	each	1495
223	TATA Refuse compactor spare parts, Axle shaft oil seal	each	1	30	195		223	TATA Refuse compactor spare parts, Clutch cylinder Assy changing	each	695
224	TATA Refuse compactor spare parts, C.V joint	per piece	1	30	1.95		224	TATA Refuse compactor spare parts, Clutch cylinder kit changing	each	695
225	TATA Refuse compactor spare parts, Center bearing	each	1	30	2395		225	TATA Refuse compactor spare parts, Clutch kit changing	each	95
226	TATA Refuse compactor spare parts, Clutch cylinder Assy	each	1	30	295		226	TATA Refuse compactor spare parts, Clutch kit box changing	each	595
227	TATA Refuse compactor spare parts, Clutch cylinder kit	each	1	30	995		227	TATA Refuse compactor spare parts, Clutch release bearing changing	each	995
228	TATA Refuse compactor spare parts, Clutch kit	each	1	30	395		228	TATA Refuse compactor spare parts, Clutch rod changing	each	495
229	TATA Refuse compactor spare parts, Clutch kit box	each	1	30	395		229	TATA Refuse compactor spare parts, Fly wheel changing	each	395
230	TATA Refuse compactor spare parts, Clutch release bearing	each	1	30	1495		230	TATA Refuse compactor spare parts, Fly wheel ring labor charge	each	695
231	TATA Refuse compactor spare parts, Clutch rod	each	1	30	195		231	TATA Refuse compactor spare parts, Pilot bearing labor charge	each	295
232	TATA Refuse compactor spare parts, Fly wheel	each	1	30	195		232	TATA Refuse compactor spare parts, Tail pinion bearing (inner) changing	each	995
233	TATA Refuse compactor spare parts, Fly wheel ring	each	1	30	295		233	TATA Refuse compactor spare parts, Tail pinion bearing (Outer) changing	each	1295
234	TATA Refuse compactor spare parts, Pilot bearing	each	1	30	1685		234	TATA Refuse compactor spare parts, Wheel bearing oil seal inner (Front) labor charge	each	195

235	TATA Refuse compactor spare parts, Tail pinion bearing (inner)	each	1	30	1495		235	TATA Refuse compactor spare parts, Wheel bearing oil seal inner (Rear) labor charge	each	195
236	TATA Refuse compactor spare parts, Tail pinion bearing (Outer)	each	1	30	2995		236	TATA Refuse compactor spare parts, Main leaf spring ( R ) labor charge	each	495
237	TATA Refuse compactor spare parts, Wheel bearing oil seal inner (Front)	each	1	30	1295		237	TATA Refuse compactor spare parts, Main leaf spring (F) labor charge	each	395
238	TATA Refuse compactor spare parts, Wheel bearing oil seal inner (Rear)	each	1	30	695		238	TATA Refuse compactor spare parts, Air filter hose pipe labor charge	each	195
239	TATA Refuse compactor spare parts, Main leaf spring ( R )	each	1	30	1995		239	TATA Refuse compactor spare parts, Hose pipe clamp changing	each	95
240	TATA Refuse compactor spare parts, Main leaf spring (F)	each	1	30	1795		240	TATA Refuse compactor spare parts, Power steering box Assy changing	each	395
241	TATA Refuse compactor spare parts, Air filter hose pipe	each	1	30	695		241	TATA Refuse compactor spare parts, back glass labor charge	each	795
242	TATA Refuse compactor spare parts, Hose pipe clamp	each	1	30	95		242	TATA Refuse compactor spare parts, Front Windshield glass labor charge	each	995
243	TATA Refuse compactor spare parts, Power steering box Assy	each	1	30	2995		243	TATA Refuse compactor spare parts,crown overhauling changing	each	1395
244	TATA Refuse compactor spare parts, back glass	each	1	30	395		244	TATA Refuse compactor spare parts, denting and painting charge	per metre	0
245	TATA Refuse compactor spare parts, Front Windshield glass	each	1	30	6995		245	TATA Refuse compactor spare parts, Looking glass ( R ) labor charge	each	195
246	TATA Refuse compactor spare parts,crown overhauling	each	1	30	2995		246	TATA Refuse compactor spare parts, Looking glass (L) labor charge	each	195
247	TATA Refuse compactor spare parts, denting and painting	per metre	1	30	0		247	TATA Refuse compactor spare parts, Window glass labor charge	each	495
248	TATA Refuse compactor spare parts, Looking glass ( R )	each	1	30	795		248	TATA Refuse Compactor spare parts, Reflector White Sticker labor charge	no	1395
249	TATA Refuse compactor spare parts, Looking glass (L)	each	1	30	695		249	TATA Refuse Compactor spare parts, Vaccum pipe Fr/Rr changing	no	595
250	TATA Refuse compactor spare parts, Window glass	each	1	30	6995		250	TATA Refuse Compactor Spare parts, Fr. Bumper reflector LH and RH labor charge	no	295
251	TATA Refuse Compactor spare parts, Reflector White Sticker	no	1	30	295		251	TATA Refuse Compactor Spare parts, audio tape (sony) labor charge	no	695
252	TATA Refuse Compactor spare parts, Vaccum pipe Fr/Rr	no	1	30	2295		252	TATA Refuse Compactor Spare parts, Electrical line check up charge	no	1595
253	TATA Refuse Compactor Spare parts, Fr. Bumper reflector LH and RH	no	1	30	795		253	TATA Refuse Compactor Spare parts,Caliper assymby changing	no	1.95

254	TATA Refuse Compactor Spare parts, audio tape (sony)	no	1	30	6995	254	TATA Refuse Compactor Spare parts,Rear wheel sylinder changing	no	9.95
255	TATA Refuse Compactor Spare parts, Electrical line check up	no	1	30	1595	255	TATA Refuse Compactor Spare parts,Clutch cable labor charge	no	2.95
256	TATA Refuse Compactor Spare parts,Caliper assymbly	no	1	30	1.95	256	TATA Refuse Compactor Spare parts,Wheel drum changing	no	995
257	TATA Refuse Compactor Spare parts,Rear wheel sylinder	no	1	30	21.95	257	TATA Refuse Compactor Spare parts,RTV labor charge	no	0
258	TATA Refuse Compactor Spare parts,Clutch cable	no	1	30	6.95	258	TATA Refuse Compactor Spare parts,Crown tail pinion inner changing	no	595
259	TATA Refuse Compactor Spare parts,Wheel drum	no	1	30	1.95	259	TATA Refuse Compactor Spare parts,Crown tail pinion bearing front changing	no	696
260	TATA Refuse Compactor Spare parts,RTV	no	1	30	150.95	260	TATA Refuse Compactor Spare parts,Crown bearing side changing	no	995
261	TATA Refuse Compactor Spare parts,Crown tail pinion inner	no	1	30	1295	261	TATA Refuse Compactor Spare parts,Backgear switch changing	no	295
262	TATA Refuse Compactor Spare parts,Crown tail pinion bearing front	no	1	30	1095	262	TATA Refuse Compactor Spare parts,Brake light switch changing	no	195
263	TATA Refuse Compactor Spare parts,Crown bearing side	no	1	30	1595	263	TATA Refuse Compactor Spare parts,Combination switch changing	no	395
264	TATA Refuse Compactor Spare parts,Backgear switch	no	1	30	395	264	TATA Refuse Compactor Spare parts,Gear box oil seal changing	no	595
265	TATA Refuse Compactor Spare parts,Brake light switch	no	1	30	195	265	TATA Refuse Compactor Spare parts,Tail pinion oil seal labor charge	no	395
266	TATA Refuse Compactor Spare parts,Combination switch	no	1	30	695	266	TATA Refuse Compactor Spare parts,Door lock labor charge	no	295
267	TATA Refuse Compactor Spare parts,Gear box oil seal	no	1	30	395	267	TATA Refuse Compactor Spare parts,Trailing arm labor charge	no	9.95
268	TATA Refuse Compactor Spare parts,Tail pinion oil seal	no	1	30	295	268	TATA Refuse Compactor Spare parts,Shocket rear changing	no	395
269	TATA Refuse Compactor Spare parts,Door lock	no	1	30	395	269	TATA Refuse Compactor Spare parts,Shocket front changing	no	495
270	TATA Refuse Compactor Spare parts,Trailing arm	no	1	30	1.95	270	TATA Refuse Compactor Spare parts,Indicator lamp changing	no	195
271	TATA Refuse Compactor Spare parts,Shocket rear	no	1	30	1995	271	TATA Refuse Compactor Spare parts,Head lamp changing	no	395
272	TATA Refuse Compactor Spare parts,Shocket front	no	1	30	1595	272	TATA Refuse Compactor Spare parts,Door glass machine changing	no	295
273	TATA Refuse Compactor Spare parts,Indicator lamp	no	1	30	295	273	TATA Refuse Compactor Spare parts, rubber labor charge	no	195
274	TATA Refuse Compactor Spare parts,Head lamp	no	1	30	3995	274	TATA Refuse Compactor Spare parts,Door pad labor charge	no	295
275	TATA Refuse Compactor Spare parts,Door glass machine	no	1	30	495	275	TATA Refuse Compactor Spare parts,Crown assembly changing	no	1595

276	TATA Refuse Compactor Spare parts, rubber	no	1	30	595		276	TATA Refuse Compactor Spare parts,Populashaft assymby changing	no	595
277	TATA Refuse Compactor Spare parts,Door pad	no	1	30	695		277	TATA Refuse Compactor Spare parts,Rear axle oil seal changing	no	595
278	TATA Refuse Compactor Spare parts,Crown assembly	no	1	30	2995		278	TATA Refuse Compactor Spare parts,Rear axle cone changing	no	1.95
279	TATA Refuse Compactor Spare parts,Populashaft assymby	no	1	30	17995		279	TATA Refuse Compactor Spare parts,Rear axle changing	no	395
280	TATA Refuse Compactor Spare parts,Rear axle oil seal	no	1	30	295		280	TATA Refuse Compactor Spare parts,Wheel bolt changing	no	295
281	TATA Refuse Compactor Spare parts,Rear axle cone	no	1	30	95		281	TATA Refuse Compactor Spare parts,heel knot changing	no	195
282	TATA Refuse Compactor Spare parts,Rear axle	no	1	30	1995		282	TATA Refuse Compactor Spare parts,Suspension arm changing	no	95
283	TATA Refuse Compactor Spare parts,Wheel bolt	no	1	30	295		283	TATA Refuse Compactor Spare parts,Tierod end changing	no	595
284	TATA Refuse Compactor Spare parts,heel knot	no	1	30	195		284	TATA Refuse Compactor Spare parts,Steering rack changing	no	95
285	TATA Refuse Compactor Spare parts,Suspension arm	no	1	30	95		285	TATA Refuse Compactor Spare parts,Thermostat valve labor charge	no	395
286	TATA Refuse Compactor Spare parts,Tierod end	no	1	30	795		286	TATA Refuse Compactor Spare parts,Radiator hose set metail changing	no	495
287	TATA Refuse Compactor Spare parts,Steering rack	no	1	30	95		287	TATA Refuse Compactor Spare parts,Radiator hose rubber changing	no	195
288	TATA Refuse Compactor Spare parts,Thermostat valve	no	1	30	195		288	TATA Refuse Compactor Spare parts,Radiator assembly changing	no	995
289	TATA Refuse Compactor Spare parts,Radiator hose set metail	no	1	30	295		289	TATA Refuse Compactor Spare parts,Valve oil seal changing	no	295
290	TATA Refuse Compactor Spare parts,Radiator hose rubber	no	1	30	695		290	TATA Refuse Compactor Spare parts,valve changing	no	395
291	TATA Refuse Compactor Spare parts,Radiator assembly	no	1	30	13995		291	TATA Refuse Compactor Spare parts,Engine gasket changing	no	4995
292	TATA Refuse Compactor Spare parts,Valve oil seal	no	1	30	295		292	TATA Refuse Compactor Spare parts,Number plate changing	no	20.95
293	TATA Refuse Compactor Spare parts,valve	no	1	30	295		293	TATA Refuse Compactor Spare parts,Nipple greasing labor charge	no	20.95
294	TATA Refuse Compactor Spare parts,Engine gasket	no	1	30	4995		294	TATA Refuse Compactor Spare parts,Bulb 12v changing	no	95
295	TATA Refuse Compactor Spare parts,Number plate	no	1	30	495		295	TATA Refuse Compactor Spare parts,Jack and lever labor charge	no	0
296	TATA Refuse Compactor Spare parts,Nipple greasing	no	1	30	0		296	TATA Refuse Compactor Spare parts,Grease gum labor charge	no	0
297	TATA Refuse Compactor Spare parts,Bulb 12v	no	1	30	95		297	TATA Refuse compactor spare parts,rain guard changing	no	95
298	TATA Refuse Compactor Spare parts,Jack and lever	no	1	30	2995		298	TATA Refuse Compactor Spare parts,Battery pole holding clamp nut and bolt labor charge	no	95

299	TATA Refuse Compactor Spare parts,Grease gum	no	1	30	295		299	TATA Refuse Compactor Spare parts,d bush changing	no	195
300	TATA Refuse Compactor Spare parts,Rain guard	no	1	30	95		300	TATA Refuse Compactor Spare parts,link rod changing	no	95
301	TATA Refuse Compactor Spare parts,Battery pole holding clamp nut and bolt	no	1	30	95		301	TATA Refuse Compactor Spare parts,fan belt changing	no	495
302	TATA Refuse Compactor Spare parts,d bush	no	1	30	295		302	TATA Refuse Compactor Spare parts,distilled water labor charge	bottle	0
303	TATA Refuse Compactor Spare parts,link rod	no	1	30	95		303	TATA Refuse Compactor Spare parts,Hub greasing labor charge	no	1695
304	TATA Refuse Compactor Spare parts,fan belt	no	1	30	1595		304	TATA Refuse Compactor Spare parts,Spring clamp changing	no	95
305	TATA Refuse Compactor Spare parts,distilled water	bottle	1	30	55.95		305	Radiator Servicing	No	1995
306	TATA Refuse Compactor Spare parts,Hub greasing	no	1	30	0		306	Water pump assy servicing	No	95
307	TATA Refuse Compactor Spare parts,Spring clamp	no	1	30	195		307	Water pump opening and fitting	No	95
308	TATA Refuse Compactor Spare parts,Vaccum nozzle pipe	no	1	30	495		308	Wind shelid glass fitting Labour Charge	No	2995
309	TATA Refuse Compactor Spare parts,Top shaft bearing	No	1	30	1295		309	Wiper motor repairing	No	999
310	Tappet adjustment	No	1	30	0		310	Whole body greeasing Labour Charge	No	20.95
							311	Wheel Alignment Labour Charge	No	295
							312	vacuum nozzle pipe changing	No	95
							313	Tyre fitting andchanging	No	395
							314	Tyre opening and drum change	No	385
							315	Top shaft bearing changing	No	295