

SKY jacker, Phuntsho Automobile Workshop					
SI No	Description of Item	Unit of Measure ment	Quantity	Period of Delivery (No. of Days)	Rate
1	Mobil 15 W40	No	1	30	495
2	Oil filter	No	1	30	1295
3	Fuel filter	No	1	30	495
4	Gear oil	No	1	30	495
5	Brake oil	No	1	30	295
6	Hydraulic oil	No	1	30	395
7	Hydraulic oil filter	No	1	30	805
8	Power steering oil	No	1	30	295
9	Brake lining (shoe)	No	1	30	2895
10	Wheel alignment assembly	No	1	30	295
11	TMC assembly	No	1	30	4995
12	CMC assembly	No	1	30	2995
13	CSC assembly	No	1	30	2295
14	Wheel bearing outer front	No	1	30	1595
15	Wheel bearing inner rear	No	1	30	1495
16	Wheel bearing outer rear	No	1	30	1695
17	Wheel bearing inner rear	No	1	30	1395
18	Cross bearing	No	1	30	1795
19	Spring bush	No	1	30	395
20	Spring main leaf	No	1	30	2295
21	Spring second leaf	No	1	30	1895
22	Spring third leaf	No	1	30	1695
23	Spring fourth leaf	No	1	30	1295
24	Spring fifth leaf	No	1	30	1195
26	Tube	No	1	30	1295
27	Coolant	No	1	30	395
28	Greese	No	1	30	695

Labour charge, Phuntsho automobile workshop			
SI No	Description of Item	Unit of Measure ment	Rate
1	Mobil 15 W40 changing	No	395
2	Oil filter changing	No	195
3	Fuel filter changing	No	295
4	Gear oil changing	No	295
5	Brake oil changing	No	295
6	Hydraulic oil changing	No	495
7	Hydraulic oil filter changing	No	295
8	Power steering oil changing	No	295
9	Brake lining (shoe) changing	No	495
10	Wheel alignment assembly changing	No	295
11	TMC assembly changing changing	No	795
12	CMC assembly changing	No	695
13	CSC assembly changing	No	595
14	Wheel bearing outer front changing	No	495
15	Wheel bearing inner rear changing	No	495
16	Wheel bearing outer rear changing	No	495
17	Wheel bearing inner rear changing	No	495
18	Cross bearing changing	No	695
19	Spring bush changing	No	295
20	Spring main leaf changing	No	595
21	Spring second leaf changing	No	595
22	Spring third leaf changing	No	595
23	Spring fourth leaf changing	No	595
24	Spring fifth leaf changing	No	595
25	Tyres fitting and changing	No	395
26	Tube changing	No	395
27	Coolant labor charge	No	395

29	Accerator cable	No	1	30	595		28	Greeseing charge	No	20
30	Accerator sensor	No	1	30	795		29	Accerator cable changing	No	295
31	Steering box assembly	No	1	30	195		30	Accerator sensor changing	No	395
32	Engine mounting	No	1	30	295		31	Steering box assembly changing	No	995
33	Gear box mounting	No	1	30	1595		32	Engine mounting changing	No	395
34	Side view mirror	No	1	30	1495		33	Gear box mounting changing	No	295
35	Wheel nut and bolt	No	1	30	295		34	Side view mirror changing	No	95
36	Popular shaft nut and bolt	No	1	30	195		35	Wheel nut and bolt changing	No	195
37	PTO switch	No	1	30	3995		36	Popular shaft nut and bolt changing	No	95
38	Horn	No	1	30	1595		37	PTO switch changing	No	495
39	Bulb head lamp	No	1	30	295		38	Horn changing	No	695
40	Clutch plate	No	1	30	4995		39	Bulb head lamp changing	No	295
41	Pressure plate	No	1	30	5995		40	Clutch plate labor charge	No	1995
42	Wiper blade	No	1	30	395		41	Pressure plate labor charge	No	1295
43	Door outer handle	No	1	30	395		42	Wiper blade changing	No	20.95
44	Hydraulic pipe	No	1	30	1895		43	Door outer handle changing	No	295
45	PTO pipe	No	1	30	295		44	Hydraulic pipe changing	No	595
46	Gear line end	No	1	30	95		45	PTO pipe changing	No	195
47	Tie rod end	No	1	30	895		46	Gear line end changing	No	1.95
48	Back light assembly	No	1	30	1395		47	Tie rod end changing	No	295
49	Side light assembly	No	1	30	895		48	Back light assembly changing	No	195
50	Center bolt	No	1	30	195		49	Side light assembly changing	No	95
51	Diesel pipe	No	1	30	495		50	Center bolt changing	No	195
52	Steering cross	No	1	30	895		51	Diesel pipe changing	No	295
53	Crown	No	1	30	3995		52	Steering cross changing	No	395
54	Gear pinion 1st	No	1	30	2995		53	Crown changing	No	1295
55	Gear pinion 2nd	No	1	30	1995		54	Gear pinion 1st changing	No	1395
56	Gear pinion 3rd	No	1	30	1395		55	Gear pinion 2nd changing	No	1495
57	Gear pinion 4th	No	1	30	1295		56	Gear pinion 3rd changing	No	1395
58	Gear pinion 5th	No	1	30	1195		57	Gear pinion 4th changing	No	1495
59	Gear hub 1st speed	No	1	30	995		58	Gear pinion 5th changing	No	1495
60	Gear hub 4th speed	No	1	30	895		59	Gear hub 1st speed changing	No	1395
61	Drain out bolt	No	1	30	95		60	Gear hub 4th speed changing	No	1295

62	U bolt	No	1	30	395		61	Drain out bolt changing	No	95
63	Shackle pin	No	1	30	195		62	U bolt changing	No	295
64	Shoe bush	No	1	30	295		63	Shackle pin changing	No	295
65	Dash board km sensor (sky jacker)	No	1	30	95		64	Shoe bush changing	No	195
66	Excide battery 12v DC	No	1	30	9995		65	Dash board km sensor (sky jacker)	No	195
67	Brake pad	No	1	30	12.95		66	Excide battery 12v DC changing	No	195
68	Brake shoe Rr.	No	1	30	2695		67	Brake pad changing	No	95
69	Spring bush Rr.	No	1	30	195		68	Brake shoe Rr. changing	No	495
70	Ball joint front upper	No	1	30	95		69	Spring bush Rr. changing	No	295
71	Ball joint front lower	No	1	30	95		70	Ball joint front upper changing	No	95
72	Spring main leaf	No	1	30	1995		71	Ball joint front lower changing	No	95
73	Spring second leaf	No	1	30	1695		72	Spring main leaf changing	No	995
74	Spring third leaf	No	1	30	1495		73	Spring second leaf changing	No	795
75	Spring fourth leaf	No	1	30	1295		74	Spring third leaf changing	No	695
76	Hub bearing F inner	No	1	30	1495		75	Spring fourth leaf changing	No	795
77	Hub bearing F outer	No	1	30	1295		76	Hub bearing F inner changing	No	495
78	Axle bearing	No	1	30	1595		77	Hub bearing F outer changing	No	395
79	Check nut	No	1	30	195		78	Axle bearing changing	No	95
80	Check nut washer	No	1	30	95		79	Check nut changing	No	95
81	Brake shoe hold down kit	No	1	30	95		80	Check nut washer changing	No	195
82	Head light bulb	No	1	30	295		81	Brake shoe hold down kit changing	No	95
83	Brake light bulb	No	1	30	50.95		82	Head light bulb changing	No	295
84	Handbrake cable fr	No	1	30	595		83	Brake light bulb changing	No	95
85	Hand brake cable Rr.	No	1	30	695		84	Handbrake cable fr changing	No	395
86	Weather strip	No	1	30	495		85	Hand brake cable Rr. changing	No	495
87	Alternator assy	No	1	30	8995		86	Weather strip changing	No	195
88	Indicator bulb	No	1	30	95		87	Alternator assy changing	No	995
91	Release bearing	No	1	30	1295		88	Indicator bulb changing	No	50.95
93	Self starter assy	No	1	30	9995		91	Release bearing changing	No	395
94	Self bendix pinion	No	1	30	1495		93	Self starter assy changing	No	1295
95	Self Armature	No	1	30	2495		94	Self bendix pinion changing	No	395
96	Self bush	No	1	30	95		95	Self Armature changing	No	695
97	Self carbon bush	No	1	30	495		96	Self bush changing	No	695

98	Solenoid switch	No	1	30	1595		97	Self carbon bush changing	No	495
100	Wc assy (Wheel cylinder)	No	1	30	1495		98	Solenoid switch changing	No	595
101	TMC assy (Master cylinder)	No	1	30	4995		99	Tyre repairing	No	395
102	CMC assy (Clutch cylinder upper)	No	1	30	2995		100	Wc assy (Wheel cylinder) changing	No	395
103	CSC assy (Clutch cylinder lower)	No	1	30	2995		101	TMC assy (Master cylinder) changing	No	695
104	Fuse	No	1	30	20.95		102	CMC assy (Clutch cylinder upper) changing	No	495
105	Link Rod	No	1	30	95		103	CSC assy (Clutch cylinder lower) changing	No	495
106	D bush	No	1	30	95		104	Fuse changing	No	30.95
107	Shocker bush	No	1	30	95		105	Link Rod changing	No	95
108	RTV	No	1	30	95		106	D bush changing	No	95
109	Sk oil	No	1	30	130.95		107	Shocker bush changing	No	195
110	Engine oil	No	1	30	395		108	RTV changing	No	0
113	Distilled water	No	1	30	50.95		109	Sk oil changing	No	0
114	Brake oil	No	1	30	195		110	Engine oil changing	No	395
115	Power steering oil	No	1	30	295		113	Distilled water labor charge	No	50.95
116	Cloth (Doti)	No	1	30	35.95		114	Brake oil labor charge	No	295
117	Fan belt	No	1	30	495		115	Power steering oil labor charge	No	295
118	Desk board polish	No	1	30	295		117	Fan belt changing	No	395
120	Spring clamp	No	1	30	195		118	Desk board polish labor charge	No	95
121	Grease 1kg	No	1	30	695		120	Spring clamp changing	No	195
124	Vaccuum set (air brake)	No	1	30	895		121	Grease 1kg changing	No	20.95
125	Popular shaft	No	1	30	695		122	Hub greasing changing	No	895
126	Water pump	No	1	30	1995		123	Nipple greasing	No	20.95
127	Wiper motor	No	1	30	595		124	Vaccuum set (air brake) changing	No	595
128	Vaccuum compressor (Head block and packing)	No	1	30	6995		125	Popular shaft changing	No	395
129	Excide battery 12v DC	No	1	30	9995		126	Water pump changing	No	1695
130	Battery pole holding clamp, nut and bolt	No	1	30	95		127	Wiper motor changing	No	395

132	Looking glass both	Set	1	30	1295		128	Vaccuum compressor (Head block and packing) changing	No	2995
133	Looking glass 1 no left/right	No	1	30	595		129	Excide battery 12v DC changing	No	195
135	Rear light holder with bulb (Right & left)	Set	1	30	695		130	Battery pole holding clamp, nut and bolt changing	No	95
137	Publuser nut and bolt	No	1	30	195		132	Looking glass both changing	Set	95
142	Foot mat	No	1	30	1895		133	Looking glass 1 no left/right changing	No	95
143	Steering wheel cover	No	1	30	995		135	Rear light holder with bulb (Right & left) changing	Set	395
144	Rain guard	No	1	30	1695		137	Publuser nut and bolt changing	No	195
146	Grease gum	No	1	30	95		142	Foot mat changing	No	95
147	Jack and lever	No	1	30	1795		143	Steering wheel cover changing	No	95
148	Bulb 12v	No	1	30	30.95		144	Rain guard changing	No	195
150	Number plate	No	1	30	495		145	Coolant	No	395
151	Piston set	No	1	30	3995		146	Grease gum changing	No	95
152	Piston ring	No	1	30	2995		147	Jack and lever changing	No	95
153	Head gasket	No	1	30	2595		148	Bulb 12v changing	No	95
154	Engine gasket	No	1	30	2305		150	Number plate changing	No	95
155	Connecting bearing	No	1	30	1495		151	Piston set changing	No	95
156	Main bearing	No	1	30	1595		152	Piston ring changing	No	2995
157	Valve	No	1	30	395		153	Head gasket changing	No	3995
158	Valve oil seal	No	1	30	195		154	Engine gasket changing	No	2995
159	Thermostat cap	No	1	30	395		155	Connecting bearing changing	No	2995
160	Radiator assembly	No	1	30	7995		156	Main bearing changing	No	1785
161	Radiator hose rubber	No	1	30	495		157	Valve changing	No	895
162	Radiator hose set metail	No	1	30	395		158	Valve oil seal changing	No	695
163	Thermostat valve	No	1	30	895		159	Thermostat cap changing	No	795
164	Steering rack	No	1	30	95		160	Radiator assembly changing	No	795
165	Tierod end	No	1	30	695		161	Radiator hose rubber	No	195
166	Suspension arm	No	1	30	95		162	Radiator hose set metail changing	No	595
167	heel knot	No	1	30	195		163	Thermostat valve changing	No	395
168	Wheel bolt	No	1	30	295		164	Steering rack changing	No	95

169	Rear acle bearing	No	1	30	395		165	Tierod end changing	No	395
170	Rear axle	No	1	30	95		166	Suspension arm changing	No	95
171	Rear axle cone	No	1	30	95		167	heel knot changing	No	95
172	Rear axle oil seal	No	1	30	395		168	Wheel bolt changing	No	95
173	Populashaft assymbly	No	1	30	2195		169	Rear acle bearing changing	No	95
174	Crown assembly	No	1	30	1995		170	Rear axle changing	No	95
175	Door pad	No	1	30	195		171	Rear axle cone changing	No	95
176	Windshield glass	No	1	30	6995		172	Rear axle oil seal changing	No	195
177	Windshield rubber	No	1	30	595		173	Populashaft assymbly changing	No	395
178	Door glass machine	No	1	30	495		174	Crown assembly changing	No	2495
179	Head lamp	No	1	30	2995		175	Door pad changing	No	195
180	Indicator lamp	No	1	30	195		176	Windshield glass changing	No	1295
181	Shocket front	No	1	30	1895		177	Windshield rubber changing	No	495
182	Shocket rear	No	1	30	1395		178	Door glass machine changing	No	395
183	Trailing arm	No	1	30	95		179	Head lamp changing	No	194
184	Door lock	No	1	30	95		180	Indicator lamp changing	No	95
185	Dickey lock	No	1	30	195		181	Shocket front changing	No	395
186	Tail pinion oil seal	No	1	30	795		182	Shocket rear changing	No	495
187	Gear box oil seal	No	1	30	495		183	Trailing arm changing	No	30.95
188	Fuel pump	No	1	30	595		184	Door lock changing	No	195
189	Relay	No	1	30	95		185	Dickey lock changing	No	95
190	Wire 3mm	m	1	30	95		186	Tail pinion oil seal changing	No	595
191	Combination switch	No	1	30	295		187	Gear box oil seal changing	No	395
192	Brake light switch	No	1	30	95		188	Fuel pump changing	No	195
193	Backgear switch	No	1	30	195		189	Relay changing	No	95
194	Crown bearing side	No	1	30	1295		190	Wire 3mm changing	m	95
195	Crown tail pinion bearing front	No	1	30	1195		191	Combination switch changing	No	295
196	Crown tail pinion inner	No	1	30	895		192	Brake light switch changing	No	195
197	Cloth (Doti)	No	1	30	35.95		193	Backgear switch changing	No	295
198	RTV	No	1	30	150.95		194	Crown bearing side changing	No	1495
199	PVC Insulation tape	No	1	30	30.95		195	Crown tail pinion bearing front changing	No	1295
200	Wheel drum	No	1	30	1295		196	Crown tail pinion inner changing	No	1195

201	Clutch cable	No	1	30	195		198	RTV changing	No	0
202	Rear wheel sylinder	No	1	30	1795		200	Wheel drum changing	No	395
203	Caliper assymbly	No	1	30	95		201	Clutch cable changing	No	95
204	Spare key	No	1	30	195		202	Rear wheel sylinder changing	No	595
205	Electrical line check up	No	1	30	1595		203	Caliper assymbly changing	No	95
206	Seat cover	No	1	30	3995		204	Spare key changing	No	95
207	Water servecing	No	1	30	395		205	Electrical line check up changing	No	795
208	Audio tape (Sony)	No	1	30	6995		206	Seat cover changing	No	395
							207	Water servecing	No	395
							208	Audio tape (Sony) changing	No	695