

VIGO HILUX, Phuntsho Automobile Workshop						
SI No	Description of Item	Unit of Measurement	Quantity	Period of Delivery (No. of Days)	Brand	Rate
1	TOYOTA Hilux Spare parts, Air Filter, (ISI standard)	No	1	30	THAILAND	1995
2	TOYOTA Hilux Spare parts, Brake Shoe, (ISI standard)	Set	1	30	THAILAND	7995
3	TOYOTA Hilux Spare parts, Brake Pad, (ISI standard)	Set	1	30	THAILAND	7995
4	TOYOTA Hilux Spare parts, Hub Bearing F Inner, (ISI standard)	No	1	30	THAILAND	5995
5	TOYOTA Hilux Spare parts, Hub Bearing F Outer, (ISI standard)	No	1	30	THAILAND	5995
6	TOYOTA Hilux Spare parts, Hub Oil Seal, (ISI standard)	No	1	30	THAILAND	195
7	TOYOTA Hilux Spare parts, Tube Oil Seal, (ISI standard)	No	1	30	THAILAND	95
8	TOYOTA Hilux Spare parts, Brake Disc, (ISI standard)	No	1	30	THAILAND	1995
9	TOYOTA Hilux Spare parts, Hub Check Nut, (ISI standard)	No	1	30	THAILAND	195
10	TOYOTA Hilux Spare parts, Check Nut Lock, (ISI standard)	No	1	30	THAILAND	95
11	TOYOTA Hilux Spare parts, Hub Splender, (ISI standard)	No	1	30	THAILAND	195
12	TOYOTA Hilux Spare parts, Shock Absorber Front, (ISI standard)	No	1	30	THAILAND	7995
13	TOYOTA Hilux Spare parts, Shock Absorber Rear, (ISI standard)	No	1	30	THAILAND	3995
14	TOYOTA Hilux Spare parts, Shock Absorber Bush, (ISI standard)	No	1	30	THAILAND	195
15	TOYOTA Hilux Spare parts, Stabilizer Bar Bush Front, (ISI standard)	No	1	30	THAILAND	795
16	TOYOTA Hilux Spare parts, Stabilizer Bar Bush Rear, (ISI standard)	No	1	30	THAILAND	95
17	TOYOTA Hilux Spare parts, Link Bush Front, (ISI standard)	No	1	30	THAILAND	95
18	TOYOTA Hilux Spare parts, Link Bush Rear, (ISI standard)	No	1	30	THAILAND	95
19	TOYOTA Hilux Spare parts, Spring Main Rear, (ISI standard)	No	1	30	THAILAND	1595

Labour charge, Phuntsho Automobile Workshop			
SI No	Description of Item	Unit of Measurement	Rate
1	TOYOTA Hilux Spare parts, Air Filter, (ISI standard) changing	No	195
2	TOYOTA Hilux Spare parts, Brake Shoe, (ISI standard) changing	Set	1295
3	TOYOTA Hilux Spare parts, Brake Pad, (ISI standard) changing	Set	595
4	TOYOTA Hilux Spare parts, Hub Bearing F Inner, (ISI standard) changing	No	795
5	TOYOTA Hilux Spare parts, Hub Bearing F Outer, (ISI standard) changing	No	995
6	TOYOTA Hilux Spare parts, Hub Oil Seal, (ISI standard) changing	No	395
7	TOYOTA Hilux Spare parts, Tube Oil Seal, (ISI standard) changing	No	295
8	TOYOTA Hilux Spare parts, Brake Disc, (ISI standard) changing	No	695
9	TOYOTA Hilux Spare parts, Hub Check Nut, (ISI standard) changing	No	295
10	TOYOTA Hilux Spare parts, Check Nut Lock, (ISI standard) changing	No	95
11	TOYOTA Hilux Spare parts, Hub Splender, (ISI standard) changing	No	395
12	TOYOTA Hilux Spare parts, Shock Absorber Front, (ISI standard) changing	No	1995
13	TOYOTA Hilux Spare parts, Shock Absorber Rear, (ISI standard) changing	No	495
14	TOYOTA Hilux Spare parts, Shock Absorber Bush, (ISI standard) changing	No	95
15	TOYOTA Hilux Spare parts, Stabilizer Bar Bush Front, (ISI standard) changing	No	395
16	TOYOTA Hilux Spare parts, Stabilizer Bar Bush Rear, (ISI standard) changing	No	195
17	TOYOTA Hilux Spare parts, Link Bush Front, (ISI standard) changing	No	195
18	TOYOTA Hilux Spare parts, Link Bush Rear, (ISI standard) changing	No	95
19	TOYOTA Hilux Spare parts, Spring Main Rear, (ISI standard) changing	No	695

20	TOYOTA Hilux Spare parts, Spring Main Front, (ISI standard)	No	1	30	THAILAND	195	20	TOYOTA Hilux Spare parts, Spring Main Front, (ISI standard) changing	No	95
21	TOYOTA Hilux Spare parts, Spring Bush Small, (ISI standard)	No	1	30	THAILAND	495	21	TOYOTA Hilux Spare parts, Spring Bush Small, (ISI standard) changing	No	395
22	TOYOTA Hilux Spare parts, Spring Bush Big, (ISI standard)	No	1	30	THAILAND	595	22	TOYOTA Hilux Spare parts, Spring Bush Big, (ISI standard) changing	No	395
23	TOYOTA Hilux Spare parts, Spring Clamp, (ISI standard)	No	1	30	THAILAND	195	23	TOYOTA Hilux Spare parts, Spring Clamp, (ISI standard) changing	No	195
24	TOYOTA Hilux Spare parts, Spring Bush Metal, (ISI standard)	No	1	30	THAILAND	595	24	TOYOTA Hilux Spare parts, Spring Bush Metal, (ISI standard) changing	No	495
25	TOYOTA Hilux Spare parts, Center Bolt, (ISI standard)	No	1	30	THAILAND	195	25	TOYOTA Hilux Spare parts, Center Bolt, (ISI standard) changing	No	95
26	TOYOTA Hilux Spare parts, Fuel Filter, (ISI standard)	No	1	30	THAILAND	1995	26	TOYOTA Hilux Spare parts, Fuel Filter, (ISI standard) changing changing	No	295
27	TOYOTA Hilux Spare parts, Oil Filter, (ISI standard)	No	1	30	THAILAND	1495	27	TOYOTA Hilux Spare parts, Oil Filter, (ISI standard) changing	No	195
28	TOYOTA Hilux Spare parts, Oil (Castrol), (ISI standard)	Ltr	1	30	THAILAND	495	28	TOYOTA Hilux Spare parts, Oil (Castrol), (ISI standard) labor charge	Ltr	395
29	TOYOTA Hilux Spare parts, Oil Mak, (ISI standard)	Ltr	1	30	THAILAND	395	29	TOYOTA Hilux Spare parts, Oil Mak, (ISI standard) labor charge	Ltr	395
30	TOYOTA Hilux Spare parts, Oil Rimula, (ISI standard)	Ltr	1	30	THAILAND	495	30	TOYOTA Hilux Spare parts, Oil Rimula, (ISI standard) changing	Ltr	395
31	TOYOTA Hilux Spare parts, Gear Oil Castrol, (ISI standard)	Ltr	1	30	THAILAND	395	31	TOYOTA Hilux Spare parts, Gear Oil Castrol, (ISI standard) changing	Ltr	395
32	TOYOTA Hilux Spare parts, Gear Oil Mak, (ISI standard)	Ltr	1	30	THAILAND	395	32	TOYOTA Hilux Spare parts, Gear Oil Mak, (ISI standard) changing	Ltr	395
33	TOYOTA Hilux Spare parts, Trasmission Oil, (ISI standard)	Ltr	1	30	THAILAND	395	33	TOYOTA Hilux Spare parts, Trasmission Oil, (ISI standard) changing	Ltr	395
34	TOYOTA Hilux Spare parts, Hyudraulic Oil, (ISI standard)	Ltr	1	30	THAILAND	295	34	TOYOTA Hilux Spare parts, Hyudraulic Oil, (ISI standard) changing	Ltr	95
35	TOYOTA Hilux Spare parts, Axle Bearing, (ISI standard)	No	1	30	THAILAND	3995	35	TOYOTA Hilux Spare parts, Axle Bearing, (ISI standard) changing	No	795
36	TOYOTA Hilux Spare parts, Axle Oil Seal Inner, (ISI standard)	No	1	30	THAILAND	1895	36	TOYOTA Hilux Spare parts, Axle Oil Seal Inner, (ISI standard) changing	No	495
37	TOYOTA Hilux Spare parts, Axle Oil Seal Outer, (ISI standard)	No	1	30	THAILAND	1295	37	TOYOTA Hilux Spare parts, Axle Oil Seal Outer, (ISI standard) changing	No	495
38	TOYOTA Hilux Spare parts, Axle Tube Oil Seal, (ISI standard)	No	1	30	THAILAND	95	38	TOYOTA Hilux Spare parts, Axle Tube Oil Seal, (ISI standard) changing	No	95
39	TOYOTA Hilux Spare parts,Rear Differential Assy, (ISI standard)	No	1	30	THAILAND	6995	39	TOYOTA Hilux Spare parts,Rear Differential Assy, (ISI standard) changing	No	1595
40	TOYOTA Hilux Spare parts, Differential Side Bearing, (ISI standard)	No	1	30	THAILAND	1995	40	TOYOTA Hilux Spare parts, Differential Side Bearing, (ISI standard) changing	No	1695
41	TOYOTA Hilux Spare parts, Tail Inner Bearing, (ISI standard)	No	1	30	THAILAND	1795	41	TOYOTA Hilux Spare parts, Tail Inner Bearing, (ISI standard) changing	No	1995

42	TOYOTA Hilux Spare parts, Tail Outer Bearing, (ISI standard)	No	1	30	THAILAND	1695	42	TOYOTA Hilux Spare parts, Tail Outer Bearing, (ISI standard) changing	No	1895
43	TOYOTA Hilux Spare parts, Tail Oil Seal, (ISI standard)	No	1	30	THAILAND	1495	43	TOYOTA Hilux Spare parts, Tail Oil Seal, (ISI standard) labor charge	No	895
44	TOYOTA Hilux Spare parts, Crown & Tail Assy, (ISI standard)	Set	1	30	THAILAND	295	44	TOYOTA Hilux Spare parts, Crown & Tail Assy, (ISI standard) changing	Set	1995
45	TOYOTA Hilux Spare parts,Ball Joint Upper, (ISI standard)	No	1	30	THAILAND	3995	45	TOYOTA Hilux Spare parts,Ball Joint Upper, (ISI standard) changing	No	795
46	TOYOTA Hilux Spare parts, Ball Joint Lower,(ISI standard)	No	1	30	THAILAND	3795	46	TOYOTA Hilux Spare parts, Ball Joint Lower,(ISI standard) changing	No	695
47	TOYOTA Hilux Spare parts, Arm Lower, (ISI standard)	No	1	30	THAILAND	195	47	TOYOTA Hilux Spare parts, Arm Lower, (ISI standard) changing	No	995
48	TOYOTA Hilux Spare parts, Arm Upper, (ISI standard)	No	1	30	THAILAND	295	48	TOYOTA Hilux Spare parts, Arm Upper, (ISI standard) changing	No	695
49	TOYOTA Hilux Spare parts, Arm Bush Lower, (ISI standard)	No	1	30	THAILAND	195	49	TOYOTA Hilux Spare parts, Arm Bush Lower, (ISI standard) changing	No	395
50	TOYOTA Hilux Spare parts, Arm Bush Upper, (ISI standard)	No	1	30	THAILAND	295	50	TOYOTA Hilux Spare parts, Arm Bush Upper, (ISI standard) changing	No	695
51	TOYOTA Hilux Spare parts, Brake Hose Front, (ISI standard)	No	1	30	THAILAND	1095	51	TOYOTA Hilux Spare parts, Brake Hose Front, (ISI standard) changing	No	495
52	TOYOTA Hilux Spare parts, Brake Hose Rear, (ISI standard)	No	1	30	THAILAND	895	52	TOYOTA Hilux Spare parts, Brake Hose Rear, (ISI standard) changing	No	395
53	TOYOTA Hilux Spare parts, Back Light, (ISI standard)	No	1	30	THAILAND	6995	53	TOYOTA Hilux Spare parts, Back Light, (ISI standard) changing	No	295
54	TOYOTA Hilux Spare parts, Back Light Bulb, (ISI standard)	No	1	30	THAILAND	95	54	TOYOTA Hilux Spare parts, Back Light Bulb, (ISI standard) changing	No	95
55	TOYOTA Hilux Spare parts, Side Light, (ISI standard)	No	1	30	THAILAND	95	55	TOYOTA Hilux Spare parts, Side Light, (ISI standard) changing	No	95
56	TOYOTA Hilux Spare parts, Side Light Bulb, (ISI standard)	No	1	30	THAILAND	95	56	TOYOTA Hilux Spare parts, Side Light Bulb, (ISI standard) changing	No	95
57	TOYOTA Hilux Spare parts, Head Light, (ISI standard)	No	1	30	THAILAND	8995	57	TOYOTA Hilux Spare parts, Head Light, (ISI standard) changing	No	595
58	TOYOTA Hilux Spare parts, Head Light Bulb, (ISI standard)	No	1	30	THAILAND	295	58	TOYOTA Hilux Spare parts, Head Light Bulb, (ISI standard) changing	No	295
59	TOYOTA Hilux Spare parts, Head Gasket, (ISI standard)	No	1	30	THAILAND	5995	59	TOYOTA Hilux Spare parts, Head Gasket, (ISI standard) changing	No	4995
60	TOYOTA Hilux Spare parts, Head Gasket Set, (ISI standard)	Set	1	30	THAILAND	3995	60	TOYOTA Hilux Spare parts, Head Gasket Set, (ISI standard) changing	Set	3995
61	TOYOTA Hilux Spare parts, Water Pump, (ISI standard)	No	1	30	THAILAND	6995	61	TOYOTA Hilux Spare parts, Water Pump, (ISI standard) changing	No	2995
62	TOYOTA Hilux Spare parts, Fan Belt, (ISI standard)	No	1	30	THAILAND	4995	62	TOYOTA Hilux Spare parts, Fan Belt, (ISI standard) changing	No	795
63	TOYOTA Hilux Spare parts, Power Steering Belt, (ISI standard)	No	1	30	THAILAND	295	63	TOYOTA Hilux Spare parts, Power Steering Belt, (ISI standard) changing	No	95

64	TOYOTA Hilux Spare parts, Acc Belt, (ISI standard)	No	1	30	THAILAND	195	64	TOYOTA Hilux Spare parts, Acc Belt, (ISI standard) changing	No	95
65	TOYOTA Hilux Spare parts, Steering Damper, (ISI standard)	No	1	30	THAILAND	295	65	TOYOTA Hilux Spare parts, Steering Damper, (ISI standard) changing	No	195
66	TOYOTA Hilux Spare parts, Steering Relay, (ISI standard)	No	1	30	THAILAND	95	66	TOYOTA Hilux Spare parts, Steering Relay, (ISI standard) changing	No	95
67	TOYOTA Hilux Spare parts, Steering Drop Arm, (ISI standard)	No	1	30	THAILAND	295	67	TOYOTA Hilux Spare parts, Steering Drop Arm, (ISI standard) changing	No	95
68	TOYOTA Hilux Spare parts, Steering Relay Kit, (ISI standard)	No	1	30	THAILAND	95	68	TOYOTA Hilux Spare parts, Steering Relay Kit, (ISI standard) changing	No	95
69	TOYOTA Hilux Spare parts, Brake Buckket Kit, (ISI standard)	No	1	30	THAILAND	95	69	TOYOTA Hilux Spare parts, Brake Buckket Kit, (ISI standard)changing	No	95
70	TOYOTA Hilux Spare parts, Wheel Cylinder Assy, (ISI standard)	No	1	30	THAILAND	3595	70	TOYOTA Hilux Spare parts, Wheel Cylinder Assy, (ISI standard) changing	No	395
71	TOYOTA Hilux Spare parts, Feed Pump, (ISI standard)	No	1	30	THAILAND	95	71	TOYOTA Hilux Spare parts, Feed Pump, (ISI standard) changing	No	95
72	TOYOTA Hilux Spare parts, Fuel Supply Pump, (ISI standard)	No	1	30	THAILAND	195	72	TOYOTA Hilux Spare parts, Fuel Supply Pump, (ISI standard) changing	No	495
73	TOYOTA Hilux Spare parts, Fuel Totter & Head,(ISI standard)	Set	1	30	THAILAND	95	73	TOYOTA Hilux Spare parts, Fuel Totter & Head,(ISI standard) changing	Set	395
74	TOYOTA Hilux Spare parts, Delivery Valve, (ISI standard)	Set	1	30	THAILAND	495	74	TOYOTA Hilux Spare parts, Delivery Valve, (ISI standard) changing	Set	495
75	TOYOTA Hilux Spare parts, Oil Supply Pump, (ISI standard)	Set	1	30	THAILAND	995	75	TOYOTA Hilux Spare parts, Oil Supply Pump, (ISI standard) changing	Set	95
76	TOYOTA Hilux Spare parts, Valve Oil Seal, (ISI standard)	Set	1	30	THAILAND	695	76	TOYOTA Hilux Spare parts, Valve Oil Seal, (ISI standard) changing	Set	395
77	TOYOTA Hilux Spare parts, Clutch Plate, (ISI standard)	Set	1	30	THAILAND	15995	77	TOYOTA Hilux Spare parts, Clutch Plate, (ISI standard) changing	Set	2595
78	TOYOTA Hilux Spare parts, Pressure Plate, (ISI standard)	No	1	30	THAILAND	17995	78	TOYOTA Hilux Spare parts, Pressure Plate, (ISI standard) changing	No	2495
79	TOYOTA Hilux Spare parts, Release Bearing, (ISI standard)	No	1	30	THAILAND	4995	79	TOYOTA Hilux Spare parts, Release Bearing, (ISI standard) changing	No	395
80	TOYOTA Hilux Spare parts, Master Cylinder Kit, (ISI standard)	No	1	30	THAILAND	95	80	TOYOTA Hilux Spare parts, Master Cylinder Kit, (ISI standard) changing	No	95
81	TOYOTA Hilux Spare parts, Master Cylinder, (ISI standard)	No	1	30	THAILAND	9995	81	TOYOTA Hilux Spare parts, Master Cylinder, (ISI standard) changing	No	1295
82	TOYOTA Hilux Spare parts, Clutch Cylinder Upper, (ISI standard)	No	1	30	THAILAND	3995	82	TOYOTA Hilux Spare parts, Clutch Cylinder Upper, (ISI standard) changing	No	1395
83	TOYOTA Hilux Spare parts, Clutch Cylinder Lower, (ISI standard)	No	1	30	THAILAND	2995	83	TOYOTA Hilux Spare parts, Clutch Cylinder Lower, (ISI standard) changing	No	995
84	TOYOTA Hilux Spare parts, Brake Booster, (ISI standard)	No	1	30	THAILAND	395	84	TOYOTA Hilux Spare parts, Brake Booster, (ISI standard) changing	No	95
85	TOYOTA Hilux Spare parts, Cross Bearing, (ISI standard)	No	1	30	THAILAND	3995	85	TOYOTA Hilux Spare parts, Cross Bearing, (ISI standard) changing	No	595

86	TOYOTA Hilux Spare parts, Link,(ISI standard)	No	1	30	THAILAND	1695	86	TOYOTA Hilux Spare parts, Link,(ISI standard) changing	No	95
87	TOYOTA Hilux Spare parts, C V Joint, (ISI standard)	No	1	30	THAILAND	17995	87	TOYOTA Hilux Spare parts, C V Joint, (ISI standard) changing	No	795
88	TOYOTA Hilux Spare parts, Drive Shaft Assy,(ISI standard)	No	1	30	THAILAND	0	88	TOYOTA Hilux Spare parts, Drive Shaft Assy,(ISI standard) changing	No	795
89	TOYOTA Hilux Spare parts,Rear Spring Shackel, (ISI standard)	No	1	30	THAILAND	195	89	TOYOTA Hilux Spare parts,Rear Spring Shackel, (ISI standard) changing	No	295
90	TOYOTA Hilux Spare parts, Tie Rod End Small, (ISI standard)	No	1	30	THAILAND	995	90	TOYOTA Hilux Spare parts, Tie Rod End Small, (ISI standard) changing	No	495
91	TOYOTA Hilux Spare parts, Tie Rod End Big, (ISI standard)	No	1	30	THAILAND	895	91	TOYOTA Hilux Spare parts, Tie Rod End Big, (ISI standard) changing	No	495
92	TOYOTA Hilux Spare parts, Tie Rod End, (ISI standard)	Set	1	30	THAILAND	995	92	TOYOTA Hilux Spare parts, Tie Rod End, (ISI standard) changing	Set	395
93	TOYOTA Hilux Spare parts, King Pin Bearing,(ISI standard)	Set	1	30	THAILAND	95	93	TOYOTA Hilux Spare parts, King Pin Bearing,(ISI standard) changing	Set	95
94	TOYOTA Hilux Spare parts, King Pin Kit, ((ISI standard)	Set	1	30	THAILAND	95	94	TOYOTA Hilux Spare parts, King Pin Kit, ((ISI standard) changing	Set	95
95	TOYOTA Hilux Spare parts, Radiator Cap, (ISI standard)	Set	1	30	THAILAND	695	95	TOYOTA Hilux Spare parts, Radiator Cap, (ISI standard) changing	Set	20.95
96	TOYOTA Hilux Spare parts, Wheel Nuts & Bolts,(ISI standard)	No	1	30	THAILAND	95	96	TOYOTA Hilux Spare parts, Wheel Nuts & Bolts, (ISI standard)changing	No	495
97	TOYOTA Hilux Spare parts, Self Armature, (ISI standard)	No	1	30	THAILAND	2995	97	TOYOTA Hilux Spare parts, Self Armature, (ISI standard) changing	No	695
98	TOYOTA Hilux Spare parts, Self Carbon, (ISI standard)	No	1	30	THAILAND	1795	98	TOYOTA Hilux Spare parts, Self Carbon, (ISI standard) changing	No	895
99	TOYOTA Hilux Spare parts, Self Carnon Rocker, (ISI standard)	No	1	30	THAILAND	95	99	TOYOTA Hilux Spare parts, Self Carnon Rocker, (ISI standard) changing	No	295
100	TOYOTA Hilux Spare parts, Self Plunger, (ISI standard)	No	1	30	THAILAND	495	100	TOYOTA Hilux Spare parts, Self Plunger, (ISI standard) changing	No	195
101	TOYOTA Hilux Spare parts, Timing Belt, (ISI standard)	No	1	30	THAILAND	6995	101	TOYOTA Hilux Spare parts, Timing Belt,(ISI standard) changing	No	2995
102	TOYOTA Hilux Spare parts, Glow Plug, (ISI standard)	No	1	30	THAILAND	2995	102	TOYOTA Hilux Spare parts, Glow Plug, (ISI standard) changing	No	895
103	TOYOTA Hilux Spare parts, Engine Mounting, (ISI standard)	No	1	30	THAILAND	95	103	TOYOTA Hilux Spare parts, Engine Mounting, (ISI standard) changing	No	95
104	TOYOTA Hilux Spare parts, Gear Box Mounting, (ISI standard)	No	1	30	THAILAND	95	104	TOYOTA Hilux Spare parts, Gear Box Mounting, (ISI standard) changing	No	95
105	TOYOTA Hilux Spare parts, Wiper Blade, (ISI standard)	No	1	30	THAILAND	395	105	TOYOTA Hilux Spare parts, Wiper Blade, (ISI standard) changing	No	20.95
106	TOYOTA Hilux Spare parts, Battery, (ISI standard)	No	1	30	THAILAND	9995	106	TOYOTA Hilux Spare parts, Battery, (ISI standard) labor charge	No	95
107	TOYOTA Hilux Spare parts, Brake Oil, (ISI standard)	Ltr	1	30	THAILAND	295	107	TOYOTA Hilux Spare parts, Brake Oil, (ISI standard) labor charge	Ltr	195

108	TOYOTA Hilux Spare parts, Power Steering Oil, (ISI standard)	Ltr	1	30	THAILAND	395	108	TOYOTA Hilux Spare parts, Power Steering Oil, (ISI standard) labor charge	Ltr	195
109	TOYOTA Hilux Spare parts, Key Lock Set, (ISI standard)	Set	1	30	THAILAND	3995	109	TOYOTA Hilux Spare parts, Key Lock Set, (ISI standard) labor charge	Set	295
110	TOYOTA Hilux Spare parts, Parking Cable Rear, (ISI standard)	No	1	30	THAILAND	2995	110	TOYOTA Hilux Spare parts, Parking Cable Rear, (ISI standard) changing	No	1295
111	TOYOTA Hilux Spare parts, Parking Cable Front, (ISI standard)	No	1	30	THAILAND	1995	111	TOYOTA Hilux Spare parts, Parking Cable Front, (ISI standard) changing	No	995
112	TOYOTA Hilux Spare parts, Accelator Cable,(ISI standard)	No	1	30	THAILAND	95	112	TOYOTA Hilux Spare parts, Accelator Cable,(ISI standard) changing	No	95
113	TOYOTA Hilux Spare parts, Km Cable, (ISI standard)	No	1	30	THAILAND	95	113	TOYOTA Hilux Spare parts, Km Cable, (ISI standard) changing	No	95
114	TOYOTA Hilux Spare parts, Rear Axle Corn, (ISI standard)	No	1	30	THAILAND	1595	114	TOYOTA Hilux Spare parts, Rear Axle Corn, (ISI standard) changing	No	395
115	TOYOTA Hilux Spare parts, Spring Pad, (ISI standard)	No	1	30	THAILAND	95	115	TOYOTA Hilux Spare parts, Spring Pad, (ISI standard) changing	No	95
116	TOYOTA Hilux Spare parts, Piston, (ISI standard)	Set	1	30	THAILAND	3995	116	TOYOTA Hilux Spare parts, Piston, (ISI standard) changing	Set	3995
117	TOYOTA Hilux Spare parts, Piston Ring, (ISI standard)	Set	1	30	THAILAND	4995	117	TOYOTA Hilux Spare parts, Piston Ring, (ISI standard) changing	Set	4995
118	TOYOTA Hilux Spare parts, Linner, (ISI standard)	Set	1	30	THAILAND	295	118	TOYOTA Hilux Spare parts, Linner, (ISI standard) changing	Set	95
119	TOYOTA Hilux Spare parts, Intake Valve, (ISI standard)	Set	1	30	THAILAND	895	119	TOYOTA Hilux Spare parts, Intake Valve, (ISI standard) changing	Set	1595
120	TOYOTA Hilux Spare parts, Exhaust Valve, (ISI standard)	Set	1	30	THAILAND	795	120	TOYOTA Hilux Spare parts, Exhaust Valve, (ISI standard) changing	Set	1295
121	TOYOTA Hilux Spare parts, Vale Guide, (ISI standard)	Set	1	30	THAILAND	95	121	TOYOTA Hilux Spare parts, Vale Guide,(ISI standard) changing	Set	1195
122	TOYOTA Hilux Spare parts, Vaive Seat, (ISI standard)	Set	1	30	THAILAND	95	122	TOYOTA Hilux Spare parts, Vaive Seat, (ISI standard) changing	Set	1595
123	TOYOTA Hilux Spare parts, Connecting Bearing, (ISI standard)	Set	1	30	THAILAND	3995	123	TOYOTA Hilux Spare parts, Connecting Bearing, (ISI standard) changing	Set	3995
124	TOYOTA Hilux Spare parts, Main Bearing, (ISI standard)	Set	1	30	THAILAND	2995	124	TOYOTA Hilux Spare parts, Main Bearing, (ISI standard) changing	Set	4995
125	TOYOTA Hilux Spare parts, Cam Shaft Bearing, (ISI standard)	Set	1	30	THAILAND	2995	125	TOYOTA Hilux Spare parts, Cam Shaft Bearing, (ISI standard) changing	Set	2995
126	TOYOTA Hilux Spare parts, Thrush Washer, (ISI standard)	Set	1	30	THAILAND	95	126	TOYOTA Hilux Spare parts, Thrush Washer, (ISI standard) changing	Set	495
127	TOYOTA Hilux Spare parts, Crank Shaft, (ISI standard)	No	1	30	THAILAND	195	127	TOYOTA Hilux Spare parts, Crank Shaft, (ISI standard) changing	No	3995
128	TOYOTA Hilux Spare parts, Connecting Rod, (ISI standard)	No	1	30	THAILAND	395	128	TOYOTA Hilux Spare parts, Connecting Rod, (ISI standard) changing	No	2995
129	TOYOTA Hilux Spare parts, Valve Set, (ISI standard)	Set	1	30	THAILAND	1895	129	TOYOTA Hilux Spare parts, Valve Set, (ISI standard) changing	Set	1995

130	TOYOTA Hilux Spare parts, Grease, (ISI standard)	Kg	1	30	THAILAND	695		134	TOYOTA Hilux Spare parts, 4W Yok And Teeth, (ISI standard) changing	Set	295
131	TOYOTA Hilux Spare parts, Dhoti, (ISI standard)	Kg	1	30	THAILAND	35.95		135	TOYOTA Hilux Spare parts, 2W Yok And Teeth, (ISI standard) changing	Set	195
132	TOYOTA Hilux Spare parts, Sk Oil, (ISI standard)	Ltr	1	30	THAILAND	130.95		136	TOYOTA Hilux Spare parts, Main Bearing Oil Seal, (ISI standard) labor charge	No	1995
133	TOYOTA Hilux Spare parts, Water Paper, (ISI standard)	No	1	30	THAILAND	50.95		137	TOYOTA Hilux Spare parts, U-Bolt,(ISI standard) changing	No	95
134	TOYOTA Hilux Spare parts, 4W Yok And Teeth, (ISI standard)	Set	1	30	THAILAND	395		138	TOYOTA Hilux Spare parts, Mobil Filter, (ISI standard) changing	No	195
135	TOYOTA Hilux Spare parts, 2W Yok And Teeth, (ISI standard)	Set	1	30	THAILAND	295		139	TOYOTA Hilux Spare parts, Diesel Filter, (ISI standard) changing	No	295
136	TOYOTA Hilux Spare parts, Main Bearing Oil Seal,(ISI standard)	No	1	30	THAILAND	1895		142	TOYOTA Hilux Spare parts, Engine Oil, (ISI standard) labor charge	Ltr	295
137	TOYOTA Hilux Spare parts, U-Bolt,(ISI standard)	No	1	30	THAILAND	295		143	TOYOTA Hilux Spare parts, Coolant, (ISI standard) labor charge	Ltr	295
138	TOYOTA Hilux Spare parts, Mobil Filter, (ISI standard)	No	1	30	THAILAND	1495		144	TOYOTA Hilux Spare parts, Distilled Water, (ISI standard) labor charge	Ltr	50.95
139	TOYOTA Hilux Spare parts, Diesel Filter, (ISI standard)	No	1	30	THAILAND	1995		145	TOYOTA Hilux Spare parts, Bonnet Cable, (ISI standard) labor charge	Set	95
140	TOYOTA Hilux Spare parts, CV Joint Assembly, (ISI standard)	No	1	30	THAILAND	17995		147	TOYOTA Hilux Spare parts, Door Rubber, (ISI standard) labor charge	Set	195
141	TOYOTA Hilux Spare parts, Dust Guard back and front, (ISI standard)	Set	1	30	THAILAND	495		148	TOYOTA Hilux Spare parts, Safe Guard, (ISI standard) changing	Set	95
142	TOYOTA Hilux Spare parts, Engine Oil, (ISI standard)	Ltr	1	30	THAILAND	395		149	TOYOTA Hilux Spare parts, Fog Light, (ISI standard) labor charge	Set	1995
143	TOYOTA Hilux Spare parts, Coolant, (ISI standard)	Ltr	1	30	THAILAND	395		150	TOYOTA Hilux Spare parts, Horn, (ISI standard) labor charge	No	795
144	TOYOTA Hilux Spare parts, Distilled Water, (ISI standard)	Ltr	1	30	THAILAND	50.95		151	TOYOTA Hilux Spare parts, Pop.Shaft-Yoke & Teeth, (ISI standard) labor charge	No	795
145	TOYOTA Hilux Spare parts, Bonnet Cable, (ISI standard)	Set	1	30	THAILAND	95		152	TOYOTA Hilux Spare parts, Fuse, (ISI standard) labor charge	No	50.95
146	TOYOTA Hilux Spare parts, Hand Brake Cable, (ISI standard)	Set	1	30	THAILAND	1995		153	TOYOTA Hilux Spare parts, Wheel Bearing, (ISI standard) changing	No	1295
147	TOYOTA Hilux Spare parts, Door Rubber, (ISI standard)	Set	1	30	THAILAND	1595		154	TOYOTA Hilux spare parts, sileacer pipe , (ISI standard) changing	No	95
148	TOYOTA Hilux Spare parts, Safe Guard, (ISI standard)	Set	1	30	THAILAND	295		155	TOYOTA Hilux spare parts A/C filter, (ISI standard) changing	No	50.95
149	TOYOTA Hilux Spare parts, Fog Light, (ISI standard)	Set	1	30	THAILAND	8995		156	TOYOTA Hilux spare parts Alternator Assy, (ISI standard) changing	each	1595
150	TOYOTA Hilux Spare parts, Horn, (ISI standard)	No	1	30	THAILAND	1295		157	TOYOTA Hilux spare parts Alternator carbon bush, (ISI standard) changing	each	1295
151	TOYOTA Hilux Spare parts, Pop.Shaft-Yoke & Teeth, (ISI standard)	No	1	30	THAILAND	195		158	TOYOTA Hilux spare parts Alternator cut out, (ISI standard) changing	each	895

152	TOYOTA Hilux Spare parts, Fuse, (ISI standard)	No	1	30	THAILAND	20.95	161	TOYOTA Hilux spare parts Back bumper, (ISI standard) changing	each	1295
153	TOYOTA Hilux Spare parts, Wheel Bearing, (ISI standard)	No	1	30	THAILAND	9995	162	TOYOTA Hilux spare parts Battery cable +ive, (ISI standard) labor charge	Each	95
154	TOYOTA Hilux spare parts, sileacer pipe , (ISI standard)	No	1	30	THAILAND	395	163	TOYOTA Hilux spare parts Battery cable -ive, (ISI standard) labor charge	Each	95
155	TOYOTA Hilux spare partsA/C filter, (ISI standard)	No	1	30	THAILAND	395	164	TOYOTA Hilux spare parts Bendix pinion, (ISI standard) changing	each	1295
156	TOYOTA Hilux spare partsAlternator Assy, (ISI standard)	each	1	30	THAILAND	36695	166	TOYOTA Hilux spare parts Bulb 1141, (ISI standard) labor charge	each	95
157	TOYOTA Hilux spare parts Alternator carbon bush, (ISI standard)	each	1	30	THAILAND	6995	167	TOYOTA Hilux spare parts Bulb 67, (ISI standard) labor charge	each	95
158	TOYOTA Hilux spare partsAlternator cut out, (ISI standard)	each	1	30	THAILAND	8995	168	TOYOTA Hilux spare parts bush stabilzer, (ISI standard) labor charge	per piece	295
159	TOYOTA Hilux spare partsAnabond paste (Big), (ISI standard)	Each	1	30	THAILAND	15.95	169	TOYOTA Hilux spare parts Carbon bush 12 v, (ISI standard) labor charge	each	895
160	TOYOTA Hilux spare partsAnabond paste (Small), (ISI standard)	Each	1	30	THAILAND	95	170	TOYOTA Hilux spare parts Carbon holder, (ISI standard) changing	each	795
161	TOYOTA Hilux spare parts Back bumper, (ISI standard)	each	1	30	THAILAND	5995	171	TOYOTA Hilux spare parts Carbon rocker 12v, (ISI standard) changing	each	95
162	TOYOTA Hilux spare parts Battery cable +ive, (ISI standard)	Each	1	30	THAILAND	95	172	cloth piece, (ISI standard)	per metre	35.95
163	TOYOTA Hilux spare parts Battery cable -ive, (ISI standard)	Each	1	30	THAILAND	95	173	dash board polish, (ISI standard) labor charge	per piece	95
164	TOYOTA Hilux spare parts Bendix pinion, (ISI standard)	each	1	30	THAILAND	7995	174	TOYOTA Hilux spare parts Dynamo bearing, (ISI standard) changing	each	295
165	Black tape, (ISI standard)	each	1	30	THAILAND	30.95	175	TOYOTA hilux spare parts, Spiadle bush , (ISI standard) changing	no	95
166	TOYOTA Hilux spare parts Bulb 1141, (ISI standard)	each	1	30	THAILAND	95	176	TOYOTA hilux spare parts, Spiadle assy , (ISI standard) changing	no	295
167	TOYOTA Hilux spare parts Bulb 67, (ISI standard)	each	1	30	THAILAND	95	177	TOYOTA hilux spare parts, Axle cross, (ISI standard) changing	no	95
168	TOYOTA Hilux spare parts bush stabilzer, (ISI standard)	per piece	1	30	THAILAND	695	178	TOYOTA hilux spare parts, foot mat, (ISI standard) changing	set	95
169	TOYOTA Hilux spare parts Carbon bush 12 v, (ISI standard)	each	1	30	THAILAND	395	179	TOYOTA hilux spare parts, Front bumper, (ISI standard) changing	each	1595
170	TOYOTA Hilux spare parts Carbon holder, (ISI standard)	each	1	30	THAILAND	995	180	TOYOTA hilux spare parts, fuel pipe, (ISI standard) changing	per piece	95
171	TOYOTA Hilux spare parts Carbon rocker 12v, (ISI standard)	each	1	30	THAILAND	95	181	TOYOTA hilux spare parts, grease gun, (ISI standard) changing	each	95
172	cloth piece, (ISI standard)	per metre	1	30	THAILAND	35.95	182	TOYOTA hilux spare parts, Horn high, (ISI standard) changing	each	795
173	dash board polish, (ISI standard)	per piece	1	30	THAILAND	295	183	TOYOTA hilux spare parts, Horn low, (ISI standard) changing	each	695

174	TOYOTA Hilux spare parts Dynamo bearing, (ISI standard)	each	1	30	THAILAND	595	184	TOYOTA hilux spare parts, Horn relay, (ISI standard) changing	each	95
175	TOYOTA hilux spare parts, Spiadle bush , (ISI standard)	no	1	30	THAILAND	495	185	TOYOTA hilux spare parts, horn switch, (ISI standard) changing	each	12.95
176	TOYOTA hilux spare parts, Spiadle assy , (ISI standard)	no	1	30	THAILAND	895	186	TOYOTA hilux spare parts, hour metre, (ISI standard) changing	each	95
177	TOYOTA hilux spare parts, Axle cross, (ISI standard)	no	1	30	THAILAND	195	187	TOYOTA hilux spare parts, ignition switch, (ISI standard) changing	each	95
178	TOYOTA hilux spare parts, foot mat, (ISI standard)	set	1	30	THAILAND	2995	188	TOYOTA hilux spare parts, LT wire 5mm, (ISI standard) labor charge	each	95
179	TOYOTA hilux spare parts, Front bumper, (ISI standard)	each	1	30	THAILAND	5995	189	TOYOTA hilux spare parts, LT wire 6mm, (ISI standard) labor charge	each	95
180	TOYOTA hilux spare parts, fuel pipe, (ISI standard)	per piece	1	30	THAILAND	195	190	TOYOTA hilux spare parts, LT wire 8mm, (ISI standard) labor charge	each	95
181	TOYOTA hilux spare parts, grease gun, (ISI standard)	each	1	30	THAILAND	95	191	TOYOTA hilux spare parts, nozzle pipe , (ISI standard) changing	per piece	95
182	TOYOTA hilux spare parts, Horn high, (ISI standard)	each	1	30	THAILAND	1995	192	TOYOTA hilux spare parts,rain guard, (ISI standard) changing	each	95
183	TOYOTA hilux spare parts, Horn low, (ISI standard)	each	1	30	THAILAND	1495	193	TOYOTA hilux spare parts, seat cover, (ISI standard) changing	set	495
184	TOYOTA hilux spare parts, Horn relay, (ISI standard)	each	1	30	THAILAND	95	194	TOYOTA hilux spare parts,vacuum nozzle pipe, (ISI standard) changing	each	95
185	TOYOTA hilux spare parts, horn switch, (ISI standard)	each	1	30	THAILAND	195	195	TOYOTA hilux spare parts,vehicle no. plate, (ISI standard) changing	per piece	95
186	TOYOTA hilux spare parts, hour metre, (ISI standard)	each	1	30	THAILAND	95	196	TOYOTA hilux spare parts,wheel Drum, (ISI standard) changing	per piece	395
187	TOYOTA hilux spare parts, ignition switch, (ISI standard)	each	1	30	THAILAND	95	197	TOYOTA hilux spare parts,Wiper blade Assy, (ISI standard) changing	each	50.95
188	TOYOTA hilux spare parts, LT wire 5mm, (ISI standard)	each	1	30	THAILAND	95	198	TOYOTA hilux spare parts,steering cover, (ISI standard) changing	each	95
189	TOYOTA hilux spare parts, LT wire 6mm, (ISI standard)	each	1	30	THAILAND	95	199	TOYOTA hilux spare parts, Wiper motor, (ISI standard) changing	each	95
190	TOYOTA hilux spare parts, LT wire 8mm, (ISI standard)	each	1	30	THAILAND	95	200	TOYOTA hilux spare parts, Bearing 6202, (ISI standard) changing	each	395
191	TOYOTA hilux spare parts, nozzle pipe , (ISI standard)	per piece	1	30	THAILAND	295	201	TOYOTA hilux spare parts,Bearing 6302, (ISI standard) changing	each	295
192	TOYOTA hilux spare parts,rain guard, (ISI standard)	each	1	30	THAILAND	5995	202	TOYOTA hilux spare parts,Crank shaft oil seal, (ISI standard) changing	each	1595
193	TOYOTA hilux spare parts, seat cover, (ISI standard)	set	1	30	THAILAND	6995	203	TOYOTA hilux spare parts,Drain plug, (ISI standard) changing	each	95
194	TOYOTA hilux spare parts,vacuum nozzle pipe, (ISI standard)	each	1	30	THAILAND	95	204	TOYOTA hilux spare parts,Element Assy, Fuel, (ISI standard) changing	each	295
195	TOYOTA hilux spare parts,vehicle no. plate, (ISI standard)	per piece	1	30	THAILAND	595	205	TOYOTA hilux spare parts, Element sub assy, Air, (ISI standard) changing	each	195

196	TOYOTA hilux spare parts,wheel Drum, (ISI standard)	per piece	1	30	THAILAND	395	206	TOYOTA hilux spare parts,Engine head gasket, (ISI standard) changing	each	2995
197	TOYOTA hilux spare parts,Wiper blade Assy, (ISI standard)	each	1	30	THAILAND	395	207	TOYOTA hilux spare parts, Engine mounting, (ISI standard) changing	each	95
198	TOYOTA hilux spare parts,steering cover, (ISI standard)	each	1	30	THAILAND	1295	208	TOYOTA hilux spare parts, Engine pacing, (ISI standard) changing	each	3995
199	TOYOTA hilux spare parts, Wiper motor, (ISI standard)	each	1	30	THAILAND	195	209	TOYOTA hilux spare parts, Engine ring, (ISI standard) changing	each	3995
200	TOYOTA hilux spare parts, Bearing 6202, (ISI standard)	each	1	30	THAILAND	495	210	TOYOTA hilux spare parts, Fuel injection overflow pipe, (ISI standard) changing	each	95
201	TOYOTA hilux spare parts,Bearing 6302, (ISI standard)	each	1	30	THAILAND	395	211	TOYOTA hilux spare parts, Fuel injector nozzel, (ISI standard) changing	each	295
202	TOYOTA hilux spare parts,Crank shaft oil seal, (ISI standard)	each	1	30	THAILAND	1795	212	TOYOTA hilux spare parts, Fuel injector pipe, (ISI standard) changing	each	495
203	TOYOTA hilux spare parts,Drain plug, (ISI standard)	each	1	30	THAILAND	95	213	TOYOTA hilux spare parts, Fuel pump Assy, (ISI standard) changing	each	895
204	TOYOTA hilux spare parts,Element Assy, Fuel, (ISI standard)	each	1	30	THAILAND	295	214	TOYOTA hilux spare parts, Fuel pump washer, (ISI standard) changing	each	95
205	TOYOTA hilux spare parts, Element sub assy, Air, (ISI standard)	each	1	30	THAILAND	495	215	TOYOTA hilux spare parts, Hydraulic jack (Heavy Duty), (ISI standard) changing	each	0
206	TOYOTA hilux spare parts,Engine head gasket, (ISI standard)	each	1	30	THAILAND	4995	216	TOYOTA hilux spare parts, Hydraulic jack (Light Duty), (ISI standard) changing	each	0
207	TOYOTA hilux spare parts, Engine mounting, (ISI standard)	each	1	30	THAILAND	95	217	TOYOTA hilux spare parts,mobile, (ISI standard) changing	per ltr	395
208	TOYOTA hilux spare parts, Engine pacing, (ISI standard)	each	1	30	THAILAND	3995	218	TOYOTA hilux spare parts, Timing belt, (ISI standard) changing	each	2995
209	TOYOTA hilux spare parts, Engine ring, (ISI standard)	each	1	30	THAILAND	5995	219	TOYOTA hilux spare parts, Timing cover, (ISI standard) changing	each	95
210	TOYOTA hilux spare parts, Fuel injection overflow pipe, (ISI standard)	each	1	30	THAILAND	1995	220	TOYOTA hilux spare parts, Timing cover gear, (ISI standard) changing	each	95
211	TOYOTA hilux spare parts, Fuel injector nozzel, (ISI standard)	each	1	30	THAILAND	295	221	TOYOTA hilux spare parts,Axel lock, (ISI standard) changing	each	95
212	TOYOTA hilux spare parts, Fuel injector pipe, (ISI standard)	each	1	30	THAILAND	95	222	TOYOTA hilux spare parts, Axel shaft, (ISI standard) changing	each	50.95
213	TOYOTA hilux spare parts, Fuel pump Assy, (ISI standard)	each	1	30	THAILAND	395	223	TOYOTA hilux spare parts, Axel shaft oil seal, (ISI standard) changing	each	495
214	TOYOTA hilux spare parts, Fuel pump washer, (ISI standard)	each	1	30	THAILAND	295	224	TOYOTA hilux spare parts,C.V joint, (ISI standard) changing	per piece	195
215	TOYOTA hilux spare parts, Hydraulic jack (Heavy Duty), (ISI standard)	each	1	30	THAILAND	2595	225	TOYOTA hilux spare parts, Center bearing, (ISI standard) changing	each	95
216	TOYOTA hilux spare parts, Hydraulic jack (Light Duty), (ISI standard)	each	1	30	THAILAND	1995	226	TOYOTA hilux spare parts, Clutch cylinder Assy, (ISI standard) changing	each	495

217	TOYOTA hilux spare parts,mobile, (ISI standard)	per ltr	1	30	THAILAND	395	227	TOYOTA hilux spare parts, Clutch cylinder kit, (ISI standard) changing	each	95
218	TOYOTA hilux spare parts, Timing belt, (ISI standard)	each	1	30	THAILAND	6995	228	TOYOTA hilux spare parts, Clutch kit, (ISI standard) changing	each	295
219	TOYOTA hilux spare parts, Timing cover, (ISI standard)	each	1	30	THAILAND	395	229	TOYOTA hilux spare parts, Clutch kit box, (ISI standard) changing	each	95
220	TOYOTA hilux spare parts, Timing cover gear, (ISI standard)	each	1	30	THAILAND	295	230	TOYOTA hilux spare parts, Clutch relese bearing, (ISI standard) changing	each	595
221	TOYOTA hilux spare parts,Axel lock, (ISI standard)	each	1	30	THAILAND	195	231	TOYOTA hilux spare parts,Clutch rod, (ISI standard) changing	each	395
222	TOYOTA hilux spare parts, Axel shaft, (ISI standard)	each	1	30	THAILAND	295	232	TOYOTA hilux spare parts,Fly wheel, (ISI standard) changing	each	195
223	TOYOTA hilux spare parts, Axel shaft oil seal, (ISI standard)	each	1	30	THAILAND	695	233	TOYOTA hilux spare parts, Fly wheel ring, (ISI standard) changing	each	95
224	TOYOTA hilux spare parts,C.V joint, (ISI standard)	per piece	1	30	THAILAND	0	234	TOYOTA hilux spare parts, Pilot bearing, (ISI standard) changing	each	495
225	TOYOTA hilux spare parts, Center bearing, (ISI standard)	each	1	30	THAILAND	4995	235	TOYOTA hilux spare parts, Tail pinion bearing (inner), (ISI standard) changing	each	1395
226	TOYOTA hilux spare parts, Clutch cylinder Assy, (ISI standard)	each	1	30	THAILAND	1995	236	TOYOTA hilux spare parts, Tail pinion bearing (Outer), (ISI standard) changing	each	1295
227	TOYOTA hilux spare parts, Clutch cylinder kit, (ISI standard)	each	1	30	THAILAND	95	237	TOYOTA hilux spare parts, Wheel bearing oil seal inner (Front), (ISI standard) changing	each	395
228	TOYOTA hilux spare parts, Clutch kit, (ISI standard)	each	1	30	THAILAND	195	238	TOYOTA hilux spare parts, Wheel bearing oil seal inner (Rear), (ISI standard) changing	each	295
229	TOYOTA hilux spare parts, Clutch kit box, (ISI standard)	each	1	30	THAILAND	295	239	TOYOTA hilux spare parts, Main leaf spring (R), (ISI standard) changing	each	795
230	TOYOTA hilux spare parts, Clutch relese bearing, (ISI standard)	each	1	30	THAILAND	4995	240	TOYOTA hilux spare parts, Main leaf spring (F), (ISI standard) changing	each	895
231	TOYOTA hilux spare parts,Clutch rod, (ISI standard)	each	1	30	THAILAND	95	241	TOYOTA hilux spare parts, Air filter hose pipe, (ISI standard) changing	each	195
232	TOYOTA hilux spare parts,Fly wheel, (ISI standard)	each	1	30	THAILAND	995	242	TOYOTA hilux spare parts, Hose pipe clamp, (ISI standard) changing	each	95
233	TOYOTA hilux spare parts, Fly wheel ring, (ISI standard)	each	1	30	THAILAND	395	243	TOYOTA hilux spare parts, Power steering box Assy, (ISI standard) changing	each	195
234	TOYOTA hilux spare parts, Pilot bearing, (ISI standard)	each	1	30	THAILAND	695	244	TOYOTA hilux spare parts, back glass, (ISI standard) changing	each	395
235	TOYOTA hilux spare parts, Tail pinion bearing (inner), (ISI standard)	each	1	30	THAILAND	1295	245	TOYOTA hilux spare parts, Front Windshield glass, (ISI standard) changing	each	4995
236	TOYOTA hilux spare parts, Tail pinion bearing (Outer), (ISI standard)	each	1	30	THAILAND	1395	246	TOYOTA hilux spare parts,crown overhauling, (ISI standard) changing	each	4995
237	TOYOTA hilux spare parts, Wheel bearing oil seal inner (Front), (ISI standard)	each	1	30	THAILAND	1895	248	TOYOTA hilux spare parts, Looking glass (R), (ISI standard) changing	each	95

238	TOYOTA hilux spare parts, Wheel bearing oil seal inner (Rear), (ISI standard)	each	1	30	THAILAND	195		249	TOYOTA hilux spare parts, Looking glass (L), (ISI standard) changing	each	95
239	TOYOTA hilux spare parts, Main leaf spring (R), (ISI standard)	each	1	30	THAILAND	2995		250	TOYOTA hilux spare parts, Window glass, (ISI standard) changing	each	495
240	TOYOTA hilux spare parts, Main leaf spring (F), (ISI standard)	each	1	30	THAILAND	95		251	Tyre changing and fitting	Each	395
241	TOYOTA hilux spare parts, Air filter hose pipe, (ISI standard)	each	1	30	THAILAND	295					
242	TOYOTA hilux spare parts, Hose pipe clamp, (ISI standard)	each	1	30	THAILAND	95					
243	TOYOTA hilux spare parts, Power steering box Assy, (ISI standard)	each	1	30	THAILAND	995					
244	TOYOTA hilux spare parts, back glass, (ISI standard)	each	1	30	THAILAND	995					
245	TOYOTA hilux spare parts, Front Windshield glass, (ISI standard)	each	1	30	THAILAND	18895					
246	TOYOTA hilux spare parts,crown overhauling, (ISI standard)	each	1	30	THAILAND	1495					
247	TOYOTA hilux spare parts, denting and painting, (ISI standard)	per metre	1	30	THAILAND	0					
248	TOYOTA hilux spare parts, Looking glass (R), (ISI standard)	each	1	30	THAILAND	6995					
249	TOYOTA hilux spare parts, Looking glass (L), (ISI standard)	each	1	30	THAILAND	6995					
250	TOYOTA hilux spare parts, Window glass, (ISI standard)	each	1	30	THAILAND	3995					