

Pajero Ambulance, Phuntsho Automobile workshop						
SI No	Description of Item	Unit of Measurement	Quantity	Period of Delivery (No. of Days)	Country of Origin	Rate
1	Alternator set	Each	1	30	JAPAN	18995
2	Camshaft pully	Each	1	30	JAPAN	495
3	Catalytic Converter	Each	1	30	JAPAN	395
4	Charge pipe	Each	1	30	JAPAN	95
5	Connecting rod	Each	1	30	JAPAN	395
6	Cooling fan	Each	1	30	JAPAN	295
7	Crankshaft	Each	1	30	JAPAN	3995
8	Cylinder Head	Each	1	30	JAPAN	2995
9	Cylinder Head cover	Each	1	30	JAPAN	2595
10	Cylinder Head cover gasket	Each	1	30	JAPAN	5995
11	Distributor	Each	1	30	JAPAN	50.95
12	Distributor O-ring	Each	1	30	JAPAN	95
13	Down pipe	Each	1	30	JAPAN	195
14	Drain bolt crush washer	Each	1	30	JAPAN	95
15	Engine Block	Each	1	30	JAPAN	5995
16	Engine oil (Brand includes: Castrol MAGNATEC/Shell Helix Ultra/Castrol Edge/Shoppertize SERVO Futura G Plus brand)	Ltr	1	30	JAPAN	495
17	Exhaust Manifold	Each	1	30	JAPAN	95
18	Exhaust Manifold Gasket	Each	1	30	JAPAN	95
19	Fan coupling	Each	1	30	JAPAN	195
20	Fuel rail	Each	1	30	JAPAN	12995
21	Head Gasket	Each	1	30	JAPAN	2995
22	Ignition switch	Each	1	30	JAPAN	95
23	Intake manifold	Each	1	30	JAPAN	195
24	Intake manifold gasket	Each	1	30	JAPAN	95
25	Intake pipe	Each	1	30	JAPAN	195
26	Intercooler	Each	1	30	JAPAN	295
27	Lower radiator hose	Each	1	30	JAPAN	2995
28	Modules	Each	1	30	JAPAN	95
29	Motor mount	Each	1	30	JAPAN	95
30	Muffler and Resonator	Each	1	30	JAPAN	295
31	Oil Filter	Each	1	30	JAPAN	2395
32	Oil Pan	Each	1	30	JAPAN	95

Labour Charge, Phuntsho Automobile Workshop			
SI No	Description of Item	Unit of Measurement	Rate
1	Alternator set changing	Each	995
2	Camshaft pully changing	Each	395
3	Catalytic Converter changing	Each	95
4	Charge pipe changing	Each	295
5	Connecting rod changing	Each	395
6	Cooling fan changing	Each	195
7	Crankshaft changing	Each	395
8	Cylinder Head changing	Each	1595
9	Cylinder Head cover changing	Each	1495
10	Cylinder Head cover gasket changing	Each	895
11	Distributor changing	Each	95
12	Distributor O-ring changing	Each	195
13	Down pipe changing	Each	95
14	Drain bolt crush washer changing	Each	95
15	Engine Block changing	Each	1795
16	Engine oil (Brand includes: Castrol MAGNATEC/Shell Helix Ultra/Castrol Edge/Shoppertize SERVO Futura G Plus brand) labor charge	Ltr	395
17	Exhaust Manifold changing	Each	95
18	Exhaust Manifold Gasket changing	Each	195
19	Fan coupling changing	Each	395
20	Fuel rail changing	Each	495
21	Head Gasket changing	Each	1895
22	Ignition switch changing	Each	295
23	Intake manifold changing	Each	495
24	Intake manifold gasket changing	Each	295
25	Intake pipe changing	Each	695
26	Intercooler changing changing	Each	795
27	Lower radiator hose changing	Each	495
28	Modules changing	Each	195
29	Motor mount changing	Each	395
30	Muffler and Resonator changing	Each	495
31	Oil Filter changing	Each	195
32	Oil Pan changing	Each	195

33	Oil Pan drain bolt	Each	1	30	JAPAN	95
34	Oil Pan gasket	Each	1	30	JAPAN	95
35	Pistons	Each	1	30	JAPAN	295
36	Rubber gromments	Each	1	30	JAPAN	95
37	Starter	Each	1	30	JAPAN	1295
38	Starter motor	Each	1	30	JAPAN	7995
39	Starter soleoid	Each	1	30	JAPAN	3995
40	Thermostat	Each	1	30	JAPAN	95
41	Timming Belt	Each	1	30	JAPAN	9995
42	Turbo Charger	Each	1	30	JAPAN	495
43	upper radiator hose	Each	1	30	JAPAN	1995
44	Valve cover	Each	1	30	JAPAN	495
45	Valves	Each	1	30	JAPAN	595
46	Wastegate actuator	Each	1	30	JAPAN	95
47	Water pump	Each	1	30	JAPAN	8795
48	Water pump gasket	Each	1	30	JAPAN	595
49	Fuel System	NA	1	30	JAPAN	1595
50	Air Cleaner	Each	1	30	JAPAN	95
51	Air Filter	Each	1	30	JAPAN	2895
52	Carburetor	Each	1	30	JAPAN	95
53	Crankcase Breather element	Each	1	30	JAPAN	95
54	Filler pipe	Each	1	30	JAPAN	95
55	Float	Each	1	30	JAPAN	195
56	Fuel cap	Each	1	30	JAPAN	295
57	Fuel feed line	Each	1	30	JAPAN	95
58	Fuel filter	Each	1	30	JAPAN	2795
59	Fuel injector	Each	1	30	JAPAN	195
60	Fuel injector nozzle	Each	1	30	JAPAN	95
61	Fuel inlet	Each	1	30	JAPAN	95
62	Fuel level gauge sensor	Each	1	30	JAPAN	295
63	Fuel pressure regulator	Each	1	30	JAPAN	395
64	Fuel return	Each	1	30	JAPAN	295
65	Fuel return line	Each	1	30	JAPAN	195
66	Fuel tank	Each	1	30	JAPAN	195
67	In-tank fuel filter	Each	1	30	JAPAN	95
68	In-tank fuel pump	Each	1	30	JAPAN	295
69	Throttle plate	Each	1	30	JAPAN	95
70	Transmission fluid	Each	1	30	JAPAN	395
71	Vaccum motor	Each	1	30	JAPAN	95
72	Ignition coils	Each	1	30	JAPAN	195
73	Spark plugs	Each	1	30	JAPAN	95
74	Brake booster	Each	1	30	JAPAN	95
75	Brake cables	Each	1	30	JAPAN	495
76	Brake caliper	Each	1	30	JAPAN	595

33	Oil Pan drain bolt changing	Each	95
34	Oil Pan gasket changing	Each	395
35	Pistons changing	Each	795
36	Rubber gromments changing	Each	295
37	Starter changing	Each	1295
38	Starter motor changing	Each	1495
39	Starter soleoid changing	Each	1195
40	Thermostat changing	Each	295
41	Timming Belt changing	Each	2995
42	Turbo Charger changing	Each	295
43	upper radiator hose changing	Each	395
44	Valve cover changing	Each	195
45	Valves changing	Each	195
46	Wastegate actuator changing	Each	95
47	Water pump changing	Each	2995
48	Water pump gasket changing	Each	295
49	Fuel System changing	NA	595
50	Air Cleaner changing	Each	95
51	Air Filter changing	Each	195
52	Carburetor changing	Each	195
53	Crankcase Breather element changing	Each	95
54	Filler pipe changing	Each	295
55	Float changing	Each	395
56	Fuel cap changing	Each	95
57	Fuel feed line changing	Each	495
58	Fuel filter changing	Each	295
59	Fuel injector changing	Each	195
60	Fuel injector nozzle changing	Each	295
61	Fuel inlet changing	Each	495
62	Fuel level gauge sensor changing	Each	295
63	Fuel pressure regulator changing	Each	495
64	Fuel return changing	Each	195
65	Fuel return line changing	Each	295
66	Fuel tank changing	Each	195
67	In-tank fuel filter changing	Each	295
68	In-tank fuel pump changing	Each	295
69	Throttle plate changing	Each	95
70	Transmission fluid changing	Each	295
71	Vaccum motor changing	Each	95
72	Ignition coils changing	Each	95
73	Spark plugs changing	Each	95
74	Brake booster changing	Each	395
75	Brake cables changing	Each	595
76	Brake caliper changing	Each	395

77	Brake disc or Rotor	Each	1	30	JAPAN	7995
78	Brake Drum	Each	1	30	JAPAN	4995
79	Brake fluid	Each	1	30	JAPAN	95
80	Brake hose	Each	1	30	JAPAN	395
81	Brake pad	Each	1	30	JAPAN	8995
82	Brake pedal	Each	1	30	JAPAN	95
83	Brake sensor	Each	1	30	JAPAN	495
84	Brake Shoe	Each	1	30	JAPAN	8995
85	Brake valve	Each	1	30	JAPAN	95
86	Hand brake	Each	1	30	JAPAN	95
87	Hand brake cable	Each	1	30	JAPAN	1995
88	Knuckle Hub Assy(Front RH/LH)	Each	1	30	JAPAN	295
89	Knuckle Hub Assy(Rear RH/LH)	Each	1	30	JAPAN	395
90	Master cylinder	Each	1	30	JAPAN	14995
91	Ball joints	Each	1	30	JAPAN	4995
92	Drag link	Each	1	30	JAPAN	95
93	Idler arm	Each	1	30	JAPAN	95
94	Pitman arm	Each	1	30	JAPAN	95
95	Power Steering oil line	Each	1	30	JAPAN	595
96	Power Steering oil pump	Each	1	30	JAPAN	120.95
97	Power steering pump	Each	1	30	JAPAN	495
98	Shocks and struts	Each	1	30	JAPAN	4995
99	Steering column and cover	Each	1	30	JAPAN	995
100	Steering gear	Each	1	30	JAPAN	395
101	Steering knuckle	Each	1	30	JAPAN	495
102	Steering linkage	Each	1	30	JAPAN	129.95
103	Steering wheel	Each	1	30	JAPAN	95
104	Suspension spring	Each	1	30	JAPAN	1795
105	Tie rods	Each	1	30	JAPAN	995
106	Wheel bearings	Each	1	30	JAPAN	9995
107	Adjustment nut	Each	1	30	JAPAN	95
108	Anti-rattle spring	Each	1	30	JAPAN	95
109	Clutch Cover	Each	1	30	JAPAN	95
110	Clutch Disc	Each	1	30	JAPAN	95
111	Clutch plate	Each	1	30	JAPAN	17995
112	Eyebolt Pin	Each	1	30	JAPAN	95
113	Flywheel	Each	1	30	JAPAN	195
114	Pressure Plate	Each	1	30	JAPAN	18995
115	Release bearing and Hub assy	Set	1	30	JAPAN	6995
116	Release bearing retainer	Each	1	30	JAPAN	595

77	Brake disc or Rotor changing	Each	595
78	Brake Drum changing	Each	695
79	Brake fluid changing	Each	395
80	Brake hose changing	Each	295
81	Brake pad changing	Each	195
82	Brake pedal changing	Each	95
83	Brake sensor changing	Each	95
84	Brake Shoe changing	Each	695
85	Brake valve changing	Each	95
86	Hand brake changing	Each	695
87	Hand brake cable changing	Each	595
88	Knuckle Hub Assy(Front RH/LH) changing	Each	295
89	Knuckle Hub Assy(Rear RH/LH) changing	Each	195
90	Master cylinder changing	Each	895
91	Ball joints changing	Each	595
92	Drag link changing	Each	95
93	Idler arm changing	Each	95
94	Pitman arm changing	Each	195
95	Power Steering oil line changing	Each	295
96	Power Steering oil pump changing	Each	395
97	Power steering pump changing	Each	395
98	Shocks and struts changing	Each	295
99	Steering column and cover changing	Each	195
100	Steering gear changing	Each	95
101	Steering knuckle changing	Each	295
102	Steering linkage changing	Each	195
103	Steering wheel changing	Each	395
104	Suspension spring changing	Each	595
105	Tie rods changing	Each	495
106	Wheel bearings changing	Each	1595
107	Adjustment nut changing	Each	295
108	Anti-rattle spring changing	Each	195
109	Clutch Cover changing	Each	95
110	Clutch Disc changing	Each	2995
111	Clutch plate changing	Each	3995
112	Eyebolt Pin changing	Each	95
113	Flywheel changing	Each	195
114	Pressure Plate changing	Each	3995
115	Release bearing and Hub assy changing	Set	395
116	Release bearing retainer changing	Each	295

117	Release fork	Each	1	30	JAPAN	95
118	Release Lever	Each	1	30	JAPAN	95
119	Release Lever Eyebolt	Each	1	30	JAPAN	95
120	Release Lever Plate	Each	1	30	JAPAN	95
121	Release Lever Retainer	Each	1	30	JAPAN	95
122	Release Lever Strut	Each	1	30	JAPAN	195
123	Securing bolt	Each	1	30	JAPAN	295
124	Spring washer	Each	1	30	JAPAN	10.95
125	Trust Spring	Each	1	30	JAPAN	95
126	Bumper front	Each	1	30	JAPAN	3995
127	Bumper rear	Each	1	30	JAPAN	2995
128	Door glass front RH/LH	Each	1	30	JAPAN	1295
129	Door glass Rear RH/LH	Each	1	30	JAPAN	1195
130	Fender	Each	1	30	JAPAN	95
131	Hub cap	Each	1	30	JAPAN	95
132	Mirror RH/LH	Each	1	30	JAPAN	12995
133	Mud guard	Each	1	30	JAPAN	1895
134	Radiator Grille	Each	1	30	JAPAN	95
135	Rear view mirror	Each	1	30	JAPAN	395
136	Window quarter glass RH/LH	Each	1	30	JAPAN	395
137	Window Regulator	Each	1	30	JAPAN	295
138	Windshield set	Each	1	30	JAPAN	8995
139	windshield washer tank	Each	1	30	JAPAN	3995
140	windshield wiper fluid	Each	1	30	JAPAN	95
141	Wiper Arm	Each	1	30	JAPAN	295
142	Wiper Blade	Each	1	30	JAPAN	395
143	Wiper Linkage	Each	1	30	JAPAN	95
144	Wiper Motor	Each	1	30	JAPAN	195
145	wiper nozzle	Each	1	30	JAPAN	95
146	Wiping cloth	Each	1	30	JAPAN	35.95
147	Repairing of Back door, denting and painting RH/LH	Each	1	30	JAPAN	0
148	Repairing of Chassis	Each	1	30	JAPAN	0
149	Repairing of front bumper, denting and painting	Each	1	30	JAPAN	0
150	Repairing of front door, denting and painting RH/LH	Each	1	30	JAPAN	0

117	Release fork changing	Each	195
118	Release Lever changing	Each	95
119	Release Lever Eyebolt changing	Each	295
120	Release Lever Plate changing	Each	95
121	Release Lever Retainer changing	Each	495
122	Release Lever Strut changing	Each	295
123	Securing bolt changing	Each	395
124	Spring washer changing	Each	95
125	Trust Spring changing	Each	495
126	Bumper front changing	Each	1595
127	Bumper rear changing	Each	1295
128	Door glass front RH/LH changing	Each	495
129	Door glass Rear RH/LH changing	Each	395
130	Fender changing	Each	495
131	Hub cap changing	Each	95
132	Mirror RH/LH changing	Each	195
133	Mud guard changing	Each	295
134	Radiator Grille changing	Each	395
135	Rear view mirror changing	Each	195
136	Window quarter glass RH/LH changing	Each	495
137	Window Regulator changing	Each	395
138	Windshield set changing	Each	495
139	windshield washer tank changing	Each	195
140	windshield wiper fluid changing	Each	95
141	Wiper Arm changing	Each	195
142	Wiper Blade changing	Each	395
143	Wiper Linkage changing	Each	195
144	Wiper Motor changing	Each	195
145	wiper nozzle changing	Each	295
146	Wiping cloth changing	Each	10.95
147	Repairing of Back door, denting and painting RH/LH	Each	0
148	Repairing of Chassis	Each	295
149	Repairing of front bumper, denting and painting	Each	5995
150	Repairing of front door, denting and painting RH/LH	Each	7995

151	Repairing of Front Fender, denting and painting RH/LH	Each	1	30	JAPAN	0		151	Repairing of Front Fender, denting and painting RH/LH	Each	4995
152	Repairing of Hood, denting and painting RH/LH	Each	1	30	JAPAN	0		152	Repairing of Hood, denting and painting RH/LH	Each	3995
153	Repairing of Rear bumper, denting and painting	Each	1	30	JAPAN	0		153	Repairing of Rear bumper, denting and painting	Each	5995
154	Repairing of Rear Fender, denting and painting RH/LH	Each	1	30	JAPAN	0		154	Repairing of Rear Fender, denting and painting RH/LH	Each	4995
155	Repairing of windshield washer pump	Each	1	30	JAPAN	0		155	Repairing of windshield washer pump	Each	95
156	Lightning System (No need to quote against this particular heading)	NA	1	30	JAPAN	295		156	Lightning System (No need to quote against this particular heading)	NA	95
157	Bulb (Headlight, Indicators, Brake, Rear, Side)	Each	1	30	JAPAN	395		157	Bulb (Headlight, Indicators, Brake, Rear, Side) changing	Each	95
158	Fog light	Set	1	30	JAPAN	4995		158	Fog light changing	Set	1295
159	Headlight Assy	Set	1	30	JAPAN	21995		159	Headlight Assy changing	Set	395
160	Tail lights Assy	Set	1	30	JAPAN	9995		160	Tail lights Assy changing	Set	295
161	Axle shafts	Each	1	30	JAPAN	295		161	Axle shafts changing	Each	295
162	CV joint Front Assy	Set	1	30	JAPAN	495		162	CV joint Front Assy changing	Set	496
163	CV joint Rear Assy	Set	1	30	JAPAN	595		163	CV joint Rear Assy changing	Set	495
164	Differential assembly	Set	1	30	JAPAN	18995		164	Differential assembly changing	Set	395
165	Driveshaft	Set	1	30	JAPAN	95		165	Driveshaft changing	Set	595
166	Transfer case assembly	Set	1	30	JAPAN	295		166	Transfer case assembly changing	Set	295
167	Universal joint	Set	1	30	JAPAN	3795		167	Universal joint changing	Set	395
168	Bracket Rear Suspension Spring LH/RH	Each	1	30	JAPAN	95		168	Bracket Rear Suspension Spring LH/RH changing	Each	95
169	Bracket,Front suspension LWR Arm support, LH/RH	Each	1	30	JAPAN	95		169	Bracket,Front suspension LWR Arm support, LH/RH changing	Each	395
170	Bracket,Front Suspension Stablizer Bar, UPR	Each	1	30	JAPAN	95		170	Bracket,Front Suspension Stablizer Bar, UPR changing	Each	595
171	Control arms (Front Right/Left lower)	Each	1	30	JAPAN	2995		171	Control arms (Front Right/Left lower) changing	Each	295
172	Control arms (Front Right/Left Upper)	Each	1	30	JAPAN	1995		172	Control arms (Front Right/Left Upper) changing	Each	495
173	Control arms (Rear Right/Left lower)	Each	1	30	JAPAN	95		173	Control arms (Rear Right/Left lower) changing	Each	195
174	Control arms (Rear Right/Left Upper)	Each	1	30	JAPAN	495		174	Control arms (Rear Right/Left Upper) changing	Each	395
175	Crossmember,chassis frame RR end	Each	1	30	JAPAN	395		175	Crossmember,chassis frame RR end changing	Each	895
176	Hook, traction FR	Each	1	30	JAPAN	395		176	Hook, traction FR changing	Each	995

177	Nuts and Bolt of chassis frame	Each	1	30	JAPAN	95
178	Shock Absorber Front (LH/RH)	Each	1	30	JAPAN	7995
179	Shock Absorber Rear (LH/RH)	Each	1	30	JAPAN	5995
180	Stablizer bar link	Each	1	30	JAPAN	2795
181	Strut Front (RH/LH)	Each	1	30	JAPAN	595
182	Washer Chassis Frame	Each	1	30	JAPAN	95
183	A/C & Heater control panel	Each	1	30	JAPAN	95
184	A/C condenser	Each	1	30	JAPAN	95
185	Air conditioner assemblies	Each	1	30	JAPAN	2995
186	coolant reservoir tank	Each	1	30	JAPAN	695
187	intercoolers	Each	1	30	JAPAN	95
188	Oil Coolers	Each	1	30	JAPAN	395
189	Radiator	Each	1	30	JAPAN	395
190	Radiator cooling fan	Each	1	30	JAPAN	1595
191	Air flow sensor	Each	1	30	JAPAN	95
192	Blower motor	Each	1	30	JAPAN	495
193	combination switches	Each	1	30	JAPAN	95
194	Door lock actuators	Each	1	30	JAPAN	295
195	Fuse boxes	Each	1	30	JAPAN	195
196	Power window switches	Each	1	30	JAPAN	795
197	Speedometer	Each	1	30	JAPAN	95
198	Starters	Each	1	30	JAPAN	1295
199	Battery( EXIDE equivalent or higher)	Each	1	30	JAPAN	9995
200	Collant	Ltr	1	30	JAPAN	395
201	Distil water	Ltr	1	30	JAPAN	60.95
202	Dust cloth	Pcs	1	30	JAPAN	35.95
203	Fuse	Each	1	30	JAPAN	30.95
204	Gear oil	Ltr	1	30	JAPAN	395

177	Nuts and Bolt of chassis frame changing	Each	195
178	Shock Absorber Front (LH/RH) changing	Each	2595
179	Shock Absorber Rear (LH/RH) changing	Each	695
180	Stablizer bar link changing	Each	195
181	Strut Front (RH/LH) changing	Each	2595
182	Washer Chassis Frame changing	Each	195
183	A/C & Heater control panel changing	Each	95
184	A/C condenser changing	Each	195
185	Air conditioner assemblies changing	Each	295
186	coolant reservoir tank changing	Each	195
187	intercoolers changing	Each	495
188	Oil Coolers changing	Each	495
189	Radiator changing	Each	995
190	Radiator cooling fan changing	Each	195
191	Air flow sensor changing	Each	395
192	Blower motor changing	Each	195
193	combination switches changing	Each	695
194	Door lock actuators changing	Each	95
195	Fuse boxes changing	Each	95
196	Power window switches changing	Each	595
197	Speedometer changing	Each	95
198	Starters changing	Each	295
199	Battery( EXIDE equivalent or higher) changing	Each	9995
200	Collant changing	Ltr	295
201	Distil water changing	Ltr	50.95
202	Dust cloth changing	Pcs	10.95
203	Fuse changing	Each	95
204	Gear oil changing	Ltr	395