

REVO HILUX, Phuntsho Automobile workshop					
SI NO	Description of Item	Unit of Measurement	Quantity	Period of Delivery (No. of Days)	Rate
1	TOYOTA Hilux Spare parts, Air Filter	No	1	30	2195
2	TOYOTA Hilux Spare parts, Brake Shoe	Set	1	30	8895
3	TOYOTA Hilux Spare parts, Brake Pad	Set	1	30	8995
4	TOYOTA Hilux Spare parts, Hub Bearing F Inner	No	1	30	6995
5	TOYOTA Hilux Spare parts, Hub Bearing F Outer	No	1	30	6995
6	TOYOTA Hilux Spare parts, Hub Oil Seal	No	1	30	595
7	TOYOTA Hilux Spare parts, Tube Oil Seal	No	1	30	95
8	TOYOTA Hilux Spare parts, Brake Disc	No	1	30	7995
9	TOYOTA Hilux Spare parts, Hub Check Nut	No	1	30	495
10	TOYOTA Hilux Spare parts, Check Nut Lock	No	1	30	295
11	TOYOTA Hilux Spare parts, Hub Splender	No	1	30	5995
12	TOYOTA Hilux Spare parts, Shock Absorber Front	No	1	30	9995
13	TOYOTA Hilux Spare parts, Shock Absorber Rear	No	1	30	6995
14	TOYOTA Hilux Spare parts, Shock Absorber Bush	No	1	30	95
15	TOYOTA Hilux Spare parts, Stablizer Bar Bush Front	No	1	30	895
16	TOYOTA Hilux Spare parts, Stablizer Bar Bush Rear	No	1	30	695
17	TOYOTA Hilux Spare parts, Link Bush Front	No	1	30	695
18	TOYOTA Hilux Spare parts, Link Bush Rear	No	1	30	95

Labour charge, Phuntsho Auto mobileworkshop			
SI NO	Description of Item	Unit of Measurement	Rate
1	TOYOTA Hilux Spare parts, Air Filter changing	No	195
2	TOYOTA Hilux Spare parts, Brake Shoe changing	Set	1295
3	TOYOTA Hilux Spare parts, Brake Pad changing	Set	595
4	TOYOTA Hilux Spare parts, Hub Bearing F Inner changing	No	795
5	TOYOTA Hilux Spare parts, Hub Bearing F Outer changing	No	995
6	TOYOTA Hilux Spare parts, Hub Oil Seal changing	No	395
7	TOYOTA Hilux Spare parts, Tube Oil Seal changing	No	295
8	TOYOTA Hilux Spare parts, Brake Disc changing	No	695
9	TOYOTA Hilux Spare parts, Hub Check Nut changing	No	295
10	TOYOTA Hilux Spare parts, Check Nut Lock changing	No	95
11	TOYOTA Hilux Spare parts, Hub Splender changing	No	395
12	TOYOTA Hilux Spare parts, Shock Absorber Front changing	No	1995
13	TOYOTA Hilux Spare parts, Shock Absorber Rear changing	No	495
14	TOYOTA Hilux Spare parts, Shock Absorber Bush changing	No	95
15	TOYOTA Hilux Spare parts, Stablizer Bar Bush Front changing	No	395
16	TOYOTA Hilux Spare parts, Stablizer Bar Bush Rear changing	No	195
17	TOYOTA Hilux Spare parts, Link Bush Front changing	No	195
18	TOYOTA Hilux Spare parts, Link Bush Rear changing	No	95

19	TOYOTA Hilux Spare parts, Spring Main Rear	No	1	30	2995	19	TOYOTA Hilux Spare parts, Spring Main Rear changing	No	695
24	TOYOTA Hilux Spare parts, Spring Main Front	No	1	30	95	24	TOYOTA Hilux Spare parts, Spring Main Front changing	No	95
29	TOYOTA Hilux Spare parts, Spring Bush Small	No	1	30	495	29	TOYOTA Hilux Spare parts, Spring Bush Small changing	No	395
30	TOYOTA Hilux Spare parts, Spring Bush Big	No	1	30	595	30	TOYOTA Hilux Spare parts, Spring Bush Big changing	No	395
31	TOYOTA Hilux Spare parts, Spring Clamp	No	1	30	95	31	TOYOTA Hilux Spare parts, Spring Clamp changing	No	195
32	TOYOTA Hilux Spare parts, Spring Bush Metal	No	1	30	795	32	TOYOTA Hilux Spare parts, Spring Bush Metal changing	No	495
33	TOYOTA Hilux Spare parts, Center Bolt	No	1	30	195	33	TOYOTA Hilux Spare parts, Center Bolt changing	No	95
34	TOYOTA Hilux Spare parts, Fuel Filter	No	1	30	1995	34	TOYOTA Hilux Spare parts, Fuel Filter changing	No	295
35	TOYOTA Hilux Spare parts, Oil Filter	No	1	30	1495	35	TOYOTA Hilux Spare parts, Oil Filter changing	No	195
36	TOYOTA Hilux Spare parts, Oil (Castrol)	Ltr	1	30	495	36	TOYOTA Hilux Spare parts, Oil (Castrol) labor charge	Ltr	395
37	TOYOTA Hilux Spare parts, Oil Mak	Ltr	1	30	395	37	TOYOTA Hilux Spare parts, Oil Mak labor charge	Ltr	395
38	TOYOTA Hilux Spare parts, Oil Rimula	Ltr	1	30	495	38	TOYOTA Hilux Spare parts, Oil Rimula labor charge	Ltr	395
39	TOYOTA Hilux Spare parts, Gear Oil Castrol	Ltr	1	30	495	39	TOYOTA Hilux Spare parts, Gear Oil Castrol labor charge	Ltr	395
40	TOYOTA Hilux Spare parts, Gear Oil Mak	Ltr	1	30	395	40	TOYOTA Hilux Spare parts, Gear Oil Mak labor charge	Ltr	395
41	TOYOTA Hilux Spare parts, Trasmission Oil	Ltr	1	30	395	41	TOYOTA Hilux Spare parts, Trasmission Oil labor charge	Ltr	395
42	TOYOTA Hilux Spare parts, Hyudraulic Oil	Ltr	1	30	195	42	TOYOTA Hilux Spare parts, Hyudraulic Oil labor charge	Ltr	95
43	TOYOTA Hilux Spare parts, Axle Bearing	No	1	30	4995	43	TOYOTA Hilux Spare parts, Axle Bearing labor charge	No	795
44	TOYOTA Hilux Spare parts, Axle Oil Seal Inner	No	1	30	2995	44	TOYOTA Hilux Spare parts, Axle Oil Seal Inner labor charge	No	495
45	TOYOTA Hilux Spare parts, Axle Oil Seal Outer	No	1	30	295	45	TOYOTA Hilux Spare parts, Axle Oil Seal Outer labor charge	No	495
46	TOYOTA Hilux Spare parts, Axle Tube Oil Seal	No	1	30	12.95	46	TOYOTA Hilux Spare parts, Axle Tube Oil Seal changing	No	95
47	TOYOTA Hilux Spare parts,Rear Differential Assy	No	1	30	6995	47	TOYOTA Hilux Spare parts,Rear Differential Assy changing	No	1595

48	TOYOTA Hilux Spare parts, Differential Side Bearing	No	1	30	1995
49	TOYOTA Hilux Spare parts, Tail Inner Bearing	No	1	30	1895
50	TOYOTA Hilux Spare parts, Tail Outer Bearing	No	1	30	1995
51	TOYOTA Hilux Spare parts, Tail Oil Seal	No	1	30	2195
52	TOYOTA Hilux Spare parts, Crown & Tail Assy	Set	1	30	2595
53	TOYOTA Hilux Spare parts,Ball Joint Upper	No	1	30	3995
54	TOYOTA Hilux Spare parts, Ball Joint Lower	No	1	30	4995
55	TOYOTA Hilux Spare parts, Arm Lower	No	1	30	2995
56	TOYOTA Hilux Spare parts, Arm Upper	No	1	30	1995
57	TOYOTA Hilux Spare parts, Arm Bush Lower	No	1	30	1995
58	TOYOTA Hilux Spare parts, Arm Bush Upper	No	1	30	1295
59	TOYOTA Hilux Spare parts, Brake Hose Front	No	1	30	2195
60	TOYOTA Hilux Spare parts, Brake Hose Rear	No	1	30	1995
61	TOYOTA Hilux Spare parts, Back Light	No	1	30	6995
62	TOYOTA Hilux Spare parts, Back Light Bulb	No	1	30	195
63	TOYOTA Hilux Spare parts, Side Light	No	1	30	195
64	TOYOTA Hilux Spare parts, Side Light Bulb	No	1	30	95
65	TOYOTA Hilux Spare parts, Head Light	No	1	30	395
66	TOYOTA Hilux Spare parts, Head Light Bulb	No	1	30	395
67	TOYOTA Hilux Spare parts, Head Gasket	No	1	30	3995
68	TOYOTA Hilux Spare parts, Head Gasket Set	Set	1	30	7995

48	TOYOTA Hilux Spare parts, Differential Side Bearing changing	No		1695
49	TOYOTA Hilux Spare parts, Tail Inner Bearing changing	No		1995
50	TOYOTA Hilux Spare parts, Tail Outer Bearing changing	No		1895
51	TOYOTA Hilux Spare parts, Tail Oil Seal changing	No		895
52	TOYOTA Hilux Spare parts, Crown & Tail Assy changing	Set		1995
53	TOYOTA Hilux Spare parts,Ball Joint Upper changing	No		795
54	TOYOTA Hilux Spare parts, Ball Joint Lower changing	No		695
55	TOYOTA Hilux Spare parts, Arm Lower changing	No		995
56	TOYOTA Hilux Spare parts, Arm Upper changing	No		695
57	TOYOTA Hilux Spare parts, Arm Bush Lower changing	No		395
58	TOYOTA Hilux Spare parts, Arm Bush Upper changing	No		695
59	TOYOTA Hilux Spare parts, Brake Hose Front changing	No		495
60	TOYOTA Hilux Spare parts, Brake Hose Rear changing	No		395
61	TOYOTA Hilux Spare parts, Back Light changing	No		295
62	TOYOTA Hilux Spare parts, Back Light Bulb changing	No		95
63	TOYOTA Hilux Spare parts, Side Light changing	No		95
64	TOYOTA Hilux Spare parts, Side Light Bulb changing	No		95
65	TOYOTA Hilux Spare parts, Head Light changing	No		595
66	TOYOTA Hilux Spare parts, Head Light Bulb changing	No		295
67	TOYOTA Hilux Spare parts, Head Gasket changing	No		4995
68	TOYOTA Hilux Spare parts, Head Gasket Set changing	Set		3995

69	TOYOTA Hilux Spare parts, Water Pump	No	1	30	8995	69	TOYOTA Hilux Spare parts, Water Pump changing	No	2995
70	TOYOTA Hilux Spare parts, Fan Belt	No	1	30	5995	70	TOYOTA Hilux Spare parts, Fan Belt changing	No	795
71	TOYOTA Hilux Spare parts, Power Steering Belt	No	1	30	95	71	TOYOTA Hilux Spare parts, Power Steering Belt changing	No	95
72	TOYOTA Hilux Spare parts, Acc Belt	No	1	30	95	72	TOYOTA Hilux Spare parts, Acc Belt changing	No	95
73	TOYOTA Hilux Spare parts, Steering Damper	No	1	30	295	73	TOYOTA Hilux Spare parts, Steering Damper changing	No	195
74	TOYOTA Hilux Spare parts, Steering Relay	No	1	30	95	74	TOYOTA Hilux Spare parts, Steering Relay changing	No	95
75	TOYOTA Hilux Spare parts, Steering Drop Arm	No	1	30	95	75	TOYOTA Hilux Spare parts, Steering Drop Arm changing	No	95
76	TOYOTA Hilux Spare parts, Steering Relay Kit	No	1	30	12.95	76	TOYOTA Hilux Spare parts, Steering Relay Kit changing	No	95
77	TOYOTA Hilux Spare parts, Brake Bucket Kit	No	1	30	95	77	TOYOTA Hilux Spare parts, Brake Bucket Kit changing	No	95
78	TOYOTA Hilux Spare parts, Wheel Cylinder Assy	No	1	30	3395	78	TOYOTA Hilux Spare parts, Wheel Cylinder Assy changing	No	395
79	TOYOTA Hilux Spare parts, Feed Pump	No	1	30	95	79	TOYOTA Hilux Spare parts, Feed Pump changing	No	95
80	TOYOTA Hilux Spare parts, Fuel Supply Pump	No	1	30	1395	80	TOYOTA Hilux Spare parts, Fuel Supply Pump changing	No	495
81	TOYOTA Hilux Spare parts, Fuel Totter & Head	Set	1	30	395	81	TOYOTA Hilux Spare parts, Fuel Totter & Head changing	Set	395
82	TOYOTA Hilux Spare parts, Delivery Valve	Set	1	30	1695	82	TOYOTA Hilux Spare parts, Delivery Valve changing	Set	495
83	TOYOTA Hilux Spare parts, Oil Supply Pump	Set	1	30	95	83	TOYOTA Hilux Spare parts, Oil Supply Pump changing	Set	95
84	TOYOTA Hilux Spare parts, Valve Oil Seal	Set	1	30	995	84	TOYOTA Hilux Spare parts, Valve Oil Seal labor charge	Set	395
85	TOYOTA Hilux Spare parts, Clutch Plate	Set	1	30	15995	85	TOYOTA Hilux Spare parts, Clutch Plate changing	Set	2595
86	TOYOTA Hilux Spare parts, Pressure Plate	No	1	30	17995	86	TOYOTA Hilux Spare parts, Pressure Plate changing	No	2495
87	TOYOTA Hilux Spare parts, Release Bearing	No	1	30	4995	87	TOYOTA Hilux Spare parts, Release Bearing changing	No	395
88	TOYOTA Hilux Spare parts, Master Cylinder Kit	No	1	30	95	88	TOYOTA Hilux Spare parts, Master Cylinder Kit changing	No	95
89	TOYOTA Hilux Spare parts, Master Cylinder	No	1	30	9995	89	TOYOTA Hilux Spare parts, Master Cylinder changing	No	1295

90	TOYOTA Hilux Spare parts, Clutch Cylinder Upper	No	1	30	6995		90	TOYOTA Hilux Spare parts, Clutch Cylinder Upper changing	No	1395
91	TOYOTA Hilux Spare parts, Clutch Cylinder Lower	No	1	30	6995		91	TOYOTA Hilux Spare parts, Clutch Cylinder Lower changing	No	995
92	TOYOTA Hilux Spare parts, Brake Booster	No	1	30	95		92	TOYOTA Hilux Spare parts, Brake Booster changing	No	95
93	TOYOTA Hilux Spare parts, Cross Bearing	No	1	30	3795		93	TOYOTA Hilux Spare parts, Cross Bearing changing	No	595
94	TOYOTA Hilux Spare parts, Link	No	1	30	2995		94	TOYOTA Hilux Spare parts, Link changing	No	95
95	TOYOTA Hilux Spare parts, C V Joint	No	1	30	18995		95	TOYOTA Hilux Spare parts, C V Joint changing	No	795
96	TOYOTA Hilux Spare parts, Drive Shaft Assy	No	1	30	95		96	TOYOTA Hilux Spare parts, Drive Shaft Assy changing	No	795
97	TOYOTA Hilux Spare parts,Rear Spring Shackel	No	1	30	1795		97	TOYOTA Hilux Spare parts,Rear Spring Shackel changing	No	295
98	TOYOTA Hilux Spare parts, Tie Rod End Small	No	1	30	1395		98	TOYOTA Hilux Spare parts, Tie Rod End Small changing	No	495
99	TOYOTA Hilux Spare parts, Tie Rod End Big	No	1	30	1795		99	TOYOTA Hilux Spare parts, Tie Rod End Big changing	No	495
100	TOYOTA Hilux Spare parts, Tie Rod End	Set	1	30	2395		100	TOYOTA Hilux Spare parts, Tie Rod End changing	Set	395
101	TOYOTA Hilux Spare parts, King Pin Bearing	Set	1	30	9.95		101	TOYOTA Hilux Spare parts, King Pin Bearing changing	Set	95
102	TOYOTA Hilux Spare parts, King Pin Kit	Set	1	30	2.95		102	TOYOTA Hilux Spare parts, King Pin Kit changing	Set	95
103	TOYOTA Hilux Spare parts, Radiator Cap	Set	1	30	995		103	TOYOTA Hilux Spare parts, Radiator Cap changing	Set	20.95
104	TOYOTA Hilux Spare parts, Wheel Nuts & Bolts	No	1	30	795		104	TOYOTA Hilux Spare parts, Wheel Nuts & Bolts changing	No	495
105	TOYOTA Hilux Spare parts, Self Armature	No	1	30	6995		105	TOYOTA Hilux Spare parts, Self Armature changing	No	695
106	TOYOTA Hilux Spare parts, Self Carbon	No	1	30	3995		106	TOYOTA Hilux Spare parts, Self Carbon changing	No	895
107	TOYOTA Hilux Spare parts, Self Carnon Rocker	No	1	30	95		107	TOYOTA Hilux Spare parts, Self Carnon Rocker changing	No	295
108	TOYOTA Hilux Spare parts, Self Plunger	No	1	30	1295		108	TOYOTA Hilux Spare parts, Self Plunger changing	No	195
109	TOYOTA Hilux Spare parts, Timing Belt	No	1	30	6995		109	TOYOTA Hilux Spare parts, Timing Belt changing	No	2995
110	TOYOTA Hilux Spare parts, Glow Plug	No	1	30	2995		110	TOYOTA Hilux Spare parts, Glow Plug changing	No	895

111	TOYOTA Hilux Spare parts, Engine Mounting	No	1	30	195		111	TOYOTA Hilux Spare parts, Engine Mounting changing	No	95
112	TOYOTA Hilux Spare parts, Gear Box Mounting	No	1	30	195		112	TOYOTA Hilux Spare parts, Gear Box Mounting changing	No	95
113	TOYOTA Hilux Spare parts, Wiper Blade	No	1	30	395		113	TOYOTA Hilux Spare parts, Wiper Blade changing	No	20.95
114	TOYOTA Hilux Spare parts, Battery	No	1	30	9995		114	TOYOTA Hilux Spare parts, Battery labor charge	No	95
115	TOYOTA Hilux Spare parts, Brake Oil	Ltr	1	30	295		115	TOYOTA Hilux Spare parts, Brake Oil labor charge	Ltr	195
116	TOYOTA Hilux Spare parts, Power Steering Oil	Ltr	1	30	295		116	TOYOTA Hilux Spare parts, Power Steering Oil labor charge	Ltr	195
117	TOYOTA Hilux Spare parts, Key Lock Set	Set	1	30	1995		117	TOYOTA Hilux Spare parts, Key Lock Set changing	Set	295
118	TOYOTA Hilux Spare parts, Parking Cable Rear	No	1	30	3195		118	TOYOTA Hilux Spare parts, Parking Cable Rear changing	No	1295
119	TOYOTA Hilux Spare parts, Parking Cable Front	No	1	30	2195		119	TOYOTA Hilux Spare parts, Parking Cable Front changing	No	995
120	TOYOTA Hilux Spare parts, Accelator Cablel	No	1	30	85.95		120	TOYOTA Hilux Spare parts, Accelator Cablel changing	No	95
121	TOYOTA Hilux Spare parts, Km Cable	No	1	30	50.95		121	TOYOTA Hilux Spare parts, Km Cable labor charge	No	95
122	TOYOTA Hilux Spare parts, Rear Axle Corn	No	1	30	1895		122	TOYOTA Hilux Spare parts, Rear Axle Corn changing	No	395
123	TOYOTA Hilux Spare parts, Spring Pad	No	1	30	20.95		123	TOYOTA Hilux Spare parts, Spring Pad changing	No	95
124	TOYOTA Hilux Spare parts, Piston	Set	1	30	8995		124	TOYOTA Hilux Spare parts, Piston changing	Set	3995
125	TOYOTA Hilux Spare parts, Piston Ring	Set	1	30	9995		125	TOYOTA Hilux Spare parts, Piston Ring changing	Set	4995
126	TOYOTA Hilux Spare parts, Linner	Set	1	30	1595		126	TOYOTA Hilux Spare parts, Linner changing	Set	95
127	TOYOTA Hilux Spare parts, Intake Valve	Set	1	30	3995		127	TOYOTA Hilux Spare parts, Intake Valve changing	Set	1595
128	TOYOTA Hilux Spare parts, Exhuast Valve	Set	1	30	2995		128	TOYOTA Hilux Spare parts, Exhuast Valve changing	Set	1295
129	TOYOTA Hilux Spare parts, Vale Guide	Set	1	30	595		129	TOYOTA Hilux Spare parts, Vale Guide changing	Set	1195
130	TOYOTA Hilux Spare parts, Vaive Seat	Set	1	30	3995		130	TOYOTA Hilux Spare parts, Vaive Seat changing	Set	1595
131	TOYOTA Hilux Spare parts, Connecting Bearing	Set	1	30	7995		131	TOYOTA Hilux Spare parts, Connecting Bearing changing	Set	3995
132	TOYOTA Hilux Spare parts, Main Bearing	Set	1	30	7995		132	TOYOTA Hilux Spare parts, Main Bearing changing	Set	4995

133	TOYOTA Hilux Spare parts, Cam Shaft Bearing	Set	1	30	2995	133	TOYOTA Hilux Spare parts, Cam Shaft Bearing changing	Set	2995
134	TOYOTA Hilux Spare parts, Thrush Washer	Set	1	30	95	134	TOYOTA Hilux Spare parts, Thrush Washer changing	Set	495
135	TOYOTA Hilux Spare parts, Crank Shaft	No	1	30	195	135	TOYOTA Hilux Spare parts, Crank Shaft changing	No	3995
136	TOYOTA Hilux Spare parts, Connecting Rod	No	1	30	1995	136	TOYOTA Hilux Spare parts, Connecting Rod changing	No	2995
137	TOYOTA Hilux Spare parts, Valve Set	Set	1	30	2395	137	TOYOTA Hilux Spare parts, Valve Set changing	Set	1995
138	TOYOTA Hilux Spare parts, Grease	Kg	1	30	695	142	TOYOTA Hilux Spare parts, 4W Yok And Teeth changing	Set	295
139	TOYOTA Hilux Spare parts, Dhoti	Kg	1	30	35.95	143	TOYOTA Hilux Spare parts, 2W Yok And Teeth changing	Set	195
140	TOYOTA Hilux Spare parts, Sk Oil	Ltr	1	30	130.95	144	TOYOTA Hilux Spare parts, Main Bearing Oil Seal labor charge	No	1995
141	TOYOTA Hilux Spare parts, Water Paper	No	1	30	50.95	145	TOYOTA Hilux Spare parts, U-Bolt changing	No	95
142	TOYOTA Hilux Spare parts, 4W Yok And Teeth	Set	1	30	595	146	TOYOTA Hilux Spare parts, Mobil Filter changing	No	195
143	TOYOTA Hilux Spare parts, 2W Yok And Teeth	Set	1	30	1895	147	TOYOTA Hilux Spare parts, Diesel Filter changing	No	295
144	TOYOTA Hilux Spare parts, Main Bearing Oil Seal	No	1	30	3595	150	TOYOTA Hilux Spare parts, Engine Oil labor charge	Ltr	295
145	TOYOTA Hilux Spare parts, U-Bolt	No	1	30	395	151	TOYOTA Hilux Spare parts, Coolant labor charge	Ltr	295
146	TOYOTA Hilux Spare parts, Mobil Filter	No	1	30	1495	152	TOYOTA Hilux Spare parts, Distilled Water labor charge	Ltr	50.95
147	TOYOTA Hilux Spare parts, Diesel Filter	No	1	30	195	153	TOYOTA Hilux Spare parts, Bonnet Cable labor charge	Set	95
148	TOYOTA Hilux Spare parts, CV Joint Assembly	No	1	30	0	155	TOYOTA Hilux Spare parts, Door Rubber changing	Set	195
149	TOYOTA Hilux Spare parts, Dust Guard back and front	Set	1	30	1895	156	TOYOTA Hilux Spare parts, Safe Guard changing	Set	95
150	TOYOTA Hilux Spare parts, Engine Oil	Ltr	1	30	495	157	TOYOTA Hilux Spare parts, Fog Light labor charge	Set	1995
151	TOYOTA Hilux Spare parts, Coolant	Ltr	1	30	395	158	TOYOTA Hilux Spare parts, Horn changing	No	795
152	TOYOTA Hilux Spare parts, Distilled Water	Ltr	1	30	60.95	159	TOYOTA Hilux Spare parts, Pop.Shaft-Yoke & Teeth changing	No	795
153	TOYOTA Hilux Spare parts, Bonnet Cable	Set	1	30	25.95	160	TOYOTA Hilux Spare parts, Fuse labor charge	No	50.95

154	TOYOTA Hilux Spare parts, Hand Brake Cable	Set	1	30	3995		161	TOYOTA Hilux Spare parts, Wheel Bearing changing	No	1295
155	TOYOTA Hilux Spare parts, Door Rubber	Set	1	30	2995		162	TOYOTA Hilux spare parts, sileacer pipe changing	No	95
156	TOYOTA Hilux Spare parts, Safe Guard	Set	1	30	595		163	TOYOTA Hilux spare parts A/C filter changing	No	50.95
157	TOYOTA Hilux Spare parts, Fog Light	Set	1	30	8995		164	TOYOTA Hilux spare parts Alternator Assy changing	each	1595
158	TOYOTA Hilux Spare parts, Horn	No	1	30	2595		165	TOYOTA Hilux spare parts Alternator carbon bush changing	each	1295
159	TOYOTA Hilux Spare parts, Pop. Shaft-Yoke & Teeth	No	1	30	695		166	TOYOTA Hilux spare parts Alternator cut out changing	each	895
160	TOYOTA Hilux Spare parts, Fuse	No	1	30	20.95		169	TOYOTA Hilux spare parts Back bumper changing	each	1295
161	TOYOTA Hilux Spare parts, Wheel Bearing	No	1	30	10995		170	TOYOTA Hilux spare parts Battery cable +ive labor charge	Each	95
162	TOYOTA Hilux spare parts, sileacer pipe	No	1	30	195		171	TOYOTA Hilux spare parts Battery cable -ive labor charge	Each	95
163	TOYOTA Hilux spare parts A/C filter	No	1	30	395		172	TOYOTA Hilux spare parts Bendix pinion changing	each	1295
164	TOYOTA Hilux spare parts Alternator Assy	each	1	30	35595		174	TOYOTA Hilux spare parts Bulb 1141 labor charge	each	95
165	TOYOTA Hilux spare parts Alternator carbon bush	each	1	30	6995		175	TOYOTA Hilux spare parts Bulb 67 labor charge	each	95
166	TOYOTA Hilux spare parts Alternator cut out	each	1	30	7995		176	TOYOTA Hilux spare parts bush stabilizer changing	per piece	295
167	TOYOTA Hilux spare parts Anabond paste (Big)	Each	1	30	150.95		177	TOYOTA Hilux spare parts Carbon bush 12 v changing	each	895
168	TOYOTA Hilux spare parts Anabond paste (Small)	Each	1	30	95		178	TOYOTA Hilux spare parts Carbon holder changing	each	795
169	TOYOTA Hilux spare parts Back bumper	each	1	30	18895		179	TOYOTA Hilux spare parts Carbon rocker 12v changing	each	95
170	TOYOTA Hilux spare parts Battery cable +ive	Each	1	30	95		180	cloth piece	per metre	35.95
171	TOYOTA Hilux spare parts Battery cable -ive	Each	1	30	95		181	dash board polish labor charge	per piece	95
172	TOYOTA Hilux spare parts Bendix pinion	each	1	30	7995		182	TOYOTA Hilux spare parts Dynamo bearing changing	each	295
173	Black tape	each	1	30	40.95		183	TOYOTA hilux spare parts, Spiadle bush changing	no	95
174	TOYOTA Hilux spare parts Bulb 1141	each	1	30	95		184	TOYOTA hilux spare parts, Spiadle assy changing	no	295

175	TOYOTA Hilux spare parts Bulb 67	each	1	30	95		185	TOYOTA hilux spare parts, Axle cross changing	no	95
176	TOYOTA Hilux spare parts bush stabilizer	per piece	1	30	695		186	TOYOTA hilux spare parts, foot mat changing	set	95
177	TOYOTA Hilux spare parts Carbon bush 12 v	each	1	30	595		187	TOYOTA hilux spare parts, Front bumper changing	each	1595
178	TOYOTA Hilux spare parts Carbon holder	each	1	30	2995		188	TOYOTA hilux spare parts, fuel pipe changing	per piece	95
179	TOYOTA Hilux spare parts Carbon rocker 12v	each	1	30	22.95		195	TOYOTA hilux spare parts, grease gun changing	each	95
180	cloth piece	per metre	1	30	50.95		196	TOYOTA hilux spare parts, Horn high changing	each	795
181	dash board polish	per piece	1	30	295		197	TOYOTA hilux spare parts, Horn low changing	each	695
182	TOYOTA Hilux spare parts Dynamo bearing	each	1	30	195		198	TOYOTA hilux spare parts, Horn relay changing	each	95
183	TOYOTA hilux spare parts, Spiadle bush	no	1	30	55.95		199	TOYOTA hilux spare parts, horn switch changing	each	12.95
184	TOYOTA hilux spare parts, Spiadle assy	no	1	30	0		200	TOYOTA hilux spare parts, hour metre changing	each	95
185	TOYOTA hilux spare parts, Axle cross	no	1	30	0		201	TOYOTA hilux spare parts, ignition switch changing	each	95
186	TOYOTA hilux spare parts, foot mat	set	1	30	3295		202	TOYOTA hilux spare parts, LT wire 5mm labor charge	each	95
187	TOYOTA hilux spare parts, Front bumper	each	1	30	17995		203	TOYOTA hilux spare parts, LT wire 6mm labor charge	each	95
188	TOYOTA hilux spare parts, fuel pipe	per piece	1	30	1995		204	TOYOTA hilux spare parts, LT wire 8mm labor charge	each	95
195	TOYOTA hilux spare parts, grease gun	each	1	30	95		205	TOYOTA hilux spare parts, nozzle pipe changing	per piece	95
196	TOYOTA hilux spare parts, Horn high	each	1	30	1995		206	TOYOTA hilux spare parts,rain guard changing	each	95
197	TOYOTA hilux spare parts, Horn low	each	1	30	1295		207	TOYOTA hilux spare parts, seat cover changing	set	495
198	TOYOTA hilux spare parts, Horn relay	each	1	30	25.95		208	TOYOTA hilux spare parts,vacuum nozzle pipe changing	each	95
199	TOYOTA hilux spare parts, horn switch	each	1	30	20.95		209	TOYOTA hilux spare parts,vehicle no. plate changing	per piece	95
200	TOYOTA hilux spare parts, hour metre	each	1	30	69.95		210	TOYOTA hilux spare parts,wheel Drum changing	per piece	395
201	TOYOTA hilux spare parts, ignition switch	each	1	30	95		211	TOYOTA hilux spare parts,Wiper blade Assy changing	each	50.95

202	TOYOTA hilux spare parts, LT wire 5mm	each	1	30	95		212	TOYOTA hilux spare parts,steering cover changing	each	95
203	TOYOTA hilux spare parts, LT wire 6mm	each	1	30	95		213	TOYOTA hilux spare parts, Wiper motor changing	each	95
204	TOYOTA hilux spare parts, LT wire 8mm	each	1	30	95		214	TOYOTA hilux spare parts, Bearing 6202 changing	each	395
205	TOYOTA hilux spare parts, nozzle pipe	per piece	1	30	95		215	TOYOTA hilux spare parts,Bearing 6302 changing	each	295
206	TOYOTA hilux spare parts,rain guard	each	1	30	5695		216	TOYOTA hilux spare parts,Crank shaft oil seal labor charge	each	1595
207	TOYOTA hilux spare parts, seat cover	set	1	30	8995		217	TOYOTA hilux spare parts,Drain plug changing	each	95
208	TOYOTA hilux spare parts,vacuum nozzle pipe	each	1	30	95		218	TOYOTA hilux spare parts,Element Assy, Fuel changing	each	295
209	TOYOTA hilux spare parts,vehicle no. plate	per piece	1	30	495		219	TOYOTA hilux spare parts, Element sub assy, Air changing	each	195
210	TOYOTA hilux spare parts,wheel Drum	per piece	1	30	1995		220	TOYOTA hilux spare parts,Engine head gasket changing	each	2995
211	TOYOTA hilux spare parts,Wiper blade Assy	each	1	30	395		221	TOYOTA hilux spare parts, Engine mounting changing	each	95
212	TOYOTA hilux spare parts,steering cover	each	1	30	1295		222	TOYOTA hilux spare parts, Engine pacing changing	each	3995
213	TOYOTA hilux spare parts, Wiper motor	each	1	30	295		223	TOYOTA hilux spare parts, Engine ring changing	each	3995
214	TOYOTA hilux spare parts, Bearing 6202	each	1	30	495		224	TOYOTA hilux spare parts, Fuel injection overflow pipe changing	each	95
215	TOYOTA hilux spare parts,Bearing 6302	each	1	30	495		225	TOYOTA hilux spare parts, Fuel injector nozzle changing	each	295
216	TOYOTA hilux spare parts,Crank shaft oil seal	each	1	30	2595		226	TOYOTA hilux spare parts, Fuel injector pipe changing	each	495
217	TOYOTA hilux spare parts,Drain plug	each	1	30	95		227	TOYOTA hilux spare parts, Fuel pump Assy changing	each	895
218	TOYOTA hilux spare parts,Element Assy, Fuel	each	1	30	95		228	TOYOTA hilux spare parts, Fuel pump washer changing	each	95
219	TOYOTA hilux spare parts, Element sub assy, Air	each	1	30	95		231	TOYOTA hilux spare parts,mobile changing	per ltr	395
220	TOYOTA hilux spare parts,Engine head gasket	each	1	30	7995		232	TOYOTA hilux spare parts, Timing belt changing	each	2995
221	TOYOTA hilux spare parts, Engine mounting	each	1	30	95		233	TOYOTA hilux spare parts, Timing cover changing	each	95

222	TOYOTA hilux spare parts, Engine pacing	each	1	30	5995		234	TOYOTA hilux spare parts, Timing cover gear changing	each	95
223	TOYOTA hilux spare parts, Engine ring	each	1	30	0		235	TOYOTA hilux spare parts,Axel lock changing	each	95
224	TOYOTA hilux spare parts, Fuel injection overflow pipe	each	1	30	95		236	TOYOTA hilux spare parts, Axel shaft changing	each	50.95
225	TOYOTA hilux spare parts, Fuel injector nozzle	each	1	30	995		237	TOYOTA hilux spare parts, Axel shaft oil seal changing	each	495
226	TOYOTA hilux spare parts, Fuel injector pipe	each	1	30	50.95		238	TOYOTA hilux spare parts,C.V joint changing	per piece	195
227	TOYOTA hilux spare parts, Fuel pump Assy	each	1	30	1995		239	TOYOTA hilux spare parts, Center bearing changing	each	95
228	TOYOTA hilux spare parts, Fuel pump washer	each	1	30	95		240	TOYOTA hilux spare parts, Clutch cylinder Assy changing	each	495
229	TOYOTA hilux spare parts, Hydraulic jack (Heavy Duty)	each	1	30	2795		241	TOYOTA hilux spare parts, Clutch cylinder kit changing	each	95
230	TOYOTA hilux spare parts, Hydraulic jack (Light Duty)	each	1	30	1995		242	TOYOTA hilux spare parts, Clutch kit changing	each	295
231	TOYOTA hilux spare parts,mobile	per ltr	1	30	495		243	TOYOTA hilux spare parts, Clutch kit box changing	each	95
232	TOYOTA hilux spare parts, Timing belt	each	1	30	7995		244	TOYOTA hilux spare parts, Clutch relese bearing changing	each	595
233	TOYOTA hilux spare parts, Timing cover	each	1	30	595		245	TOYOTA hilux spare parts,Clutch rod changing	each	395
234	TOYOTA hilux spare parts, Timing cover gear	each	1	30	95		246	TOYOTA hilux spare parts,Fly wheel changing	each	195
235	TOYOTA hilux spare parts,Axel lock	each	1	30	995		247	TOYOTA hilux spare parts, Fly wheel ring changing	each	95
236	TOYOTA hilux spare parts, Axel shaft	each	1	30	3995		248	TOYOTA hilux spare parts, Pilot bearing changing	each	495
237	TOYOTA hilux spare parts, Axel shaft oil seal	each	1	30	1995		249	TOYOTA hilux spare parts, Tail pinion bearing (inner) changing	each	1395
238	TOYOTA hilux spare parts,C.V joint	per piece	1	30	0		250	TOYOTA hilux spare parts, Tail pinion bearing (Outer) changing	each	1295
239	TOYOTA hilux spare parts, Center bearing	each	1	30	7995		251	TOYOTA hilux spare parts, Wheel bearing oil seal inner (Front) changing	each	395
240	TOYOTA hilux spare parts, Clutch cylinder Assy	each	1	30	0		252	TOYOTA hilux spare parts, Wheel bearing oil seal inner (Rear) changing	each	295

241	TOYOTA hilux spare parts, Clutch cylinder kit	each	1	30	0		253	TOYOTA hilux spare parts, Main leaf spring (R) changing	each	795
242	TOYOTA hilux spare parts, Clutch kit	each	1	30	295		254	TOYOTA hilux spare parts, Main leaf spring (F) changing	each	895
243	TOYOTA hilux spare parts, Clutch kit box	each	1	30	95		255	TOYOTA hilux spare parts, Air filter hose pipe changing	each	195
244	TOYOTA hilux spare parts, Clutch relese bearing	each	1	30	5995		256	TOYOTA hilux spare parts, Hose pipe clamp changing	each	95
245	TOYOTA hilux spare parts,Clutch rod	each	1	30	195		257	TOYOTA hilux spare parts, Power steering box Assy changing	each	195
246	TOYOTA hilux spare parts,Fly wheel	each	1	30	1895		258	TOYOTA hilux spare parts, back glass changing	each	395
247	TOYOTA hilux spare parts, Fly wheel ring	each	1	30	695		259	TOYOTA hilux spare parts, Front Windshield glass changing	each	4995
248	TOYOTA hilux spare parts, Pilot bearing	each	1	30	1295		260	TOYOTA hilux spare parts,crown overhauling changing	each	4995
249	TOYOTA hilux spare parts, Tail pinion bearing (inner)	each	1	30	1995		262	TOYOTA hilux spare parts, Looking glass (R) changing	each	95
250	TOYOTA hilux spare parts, Tail pinion bearing (Outer)	each	1	30	1095		263	TOYOTA hilux spare parts, Looking glass (L) changing	each	95
251	TOYOTA hilux spare parts, Wheel bearing oil seal inner (Front)	each	1	30	1795		264	TOYOTA hilux spare parts, Window glass changing	each	495
252	TOYOTA hilux spare parts, Wheel bearing oil seal inner (Rear)	each	1	30	595		265	Tyre fitting and changing	each	395
253	TOYOTA hilux spare parts, Main leaf spring (R)	each	1	30	2995					
254	TOYOTA hilux spare parts, Main leaf spring (F)	each	1	30	95					
255	TOYOTA hilux spare parts, Air filter hose pipe	each	1	30	895					
256	TOYOTA hilux spare parts, Hose pipe clamp	each	1	30	195					
257	TOYOTA hilux spare parts, Power steering box Assy	each	1	30	2995					
258	TOYOTA hilux spare parts, back glass	each	1	30	2995					
259	TOYOTA hilux spare parts, Front Windshield glass	each	1	30	15995					

260	TOYOTA hilux spare parts,crown overhauling	each	1	30	0					
261	TOYOTA hilux spare parts, denting and painting	per metre	1	30	0					
262	TOYOTA hilux spare parts, Looking glass (R)	each	1	30	8995					
263	TOYOTA hilux spare parts, Looking glass (L)	each	1	30	8995					
264	TOYOTA hilux spare parts, Window glass	each	1	30	4995					